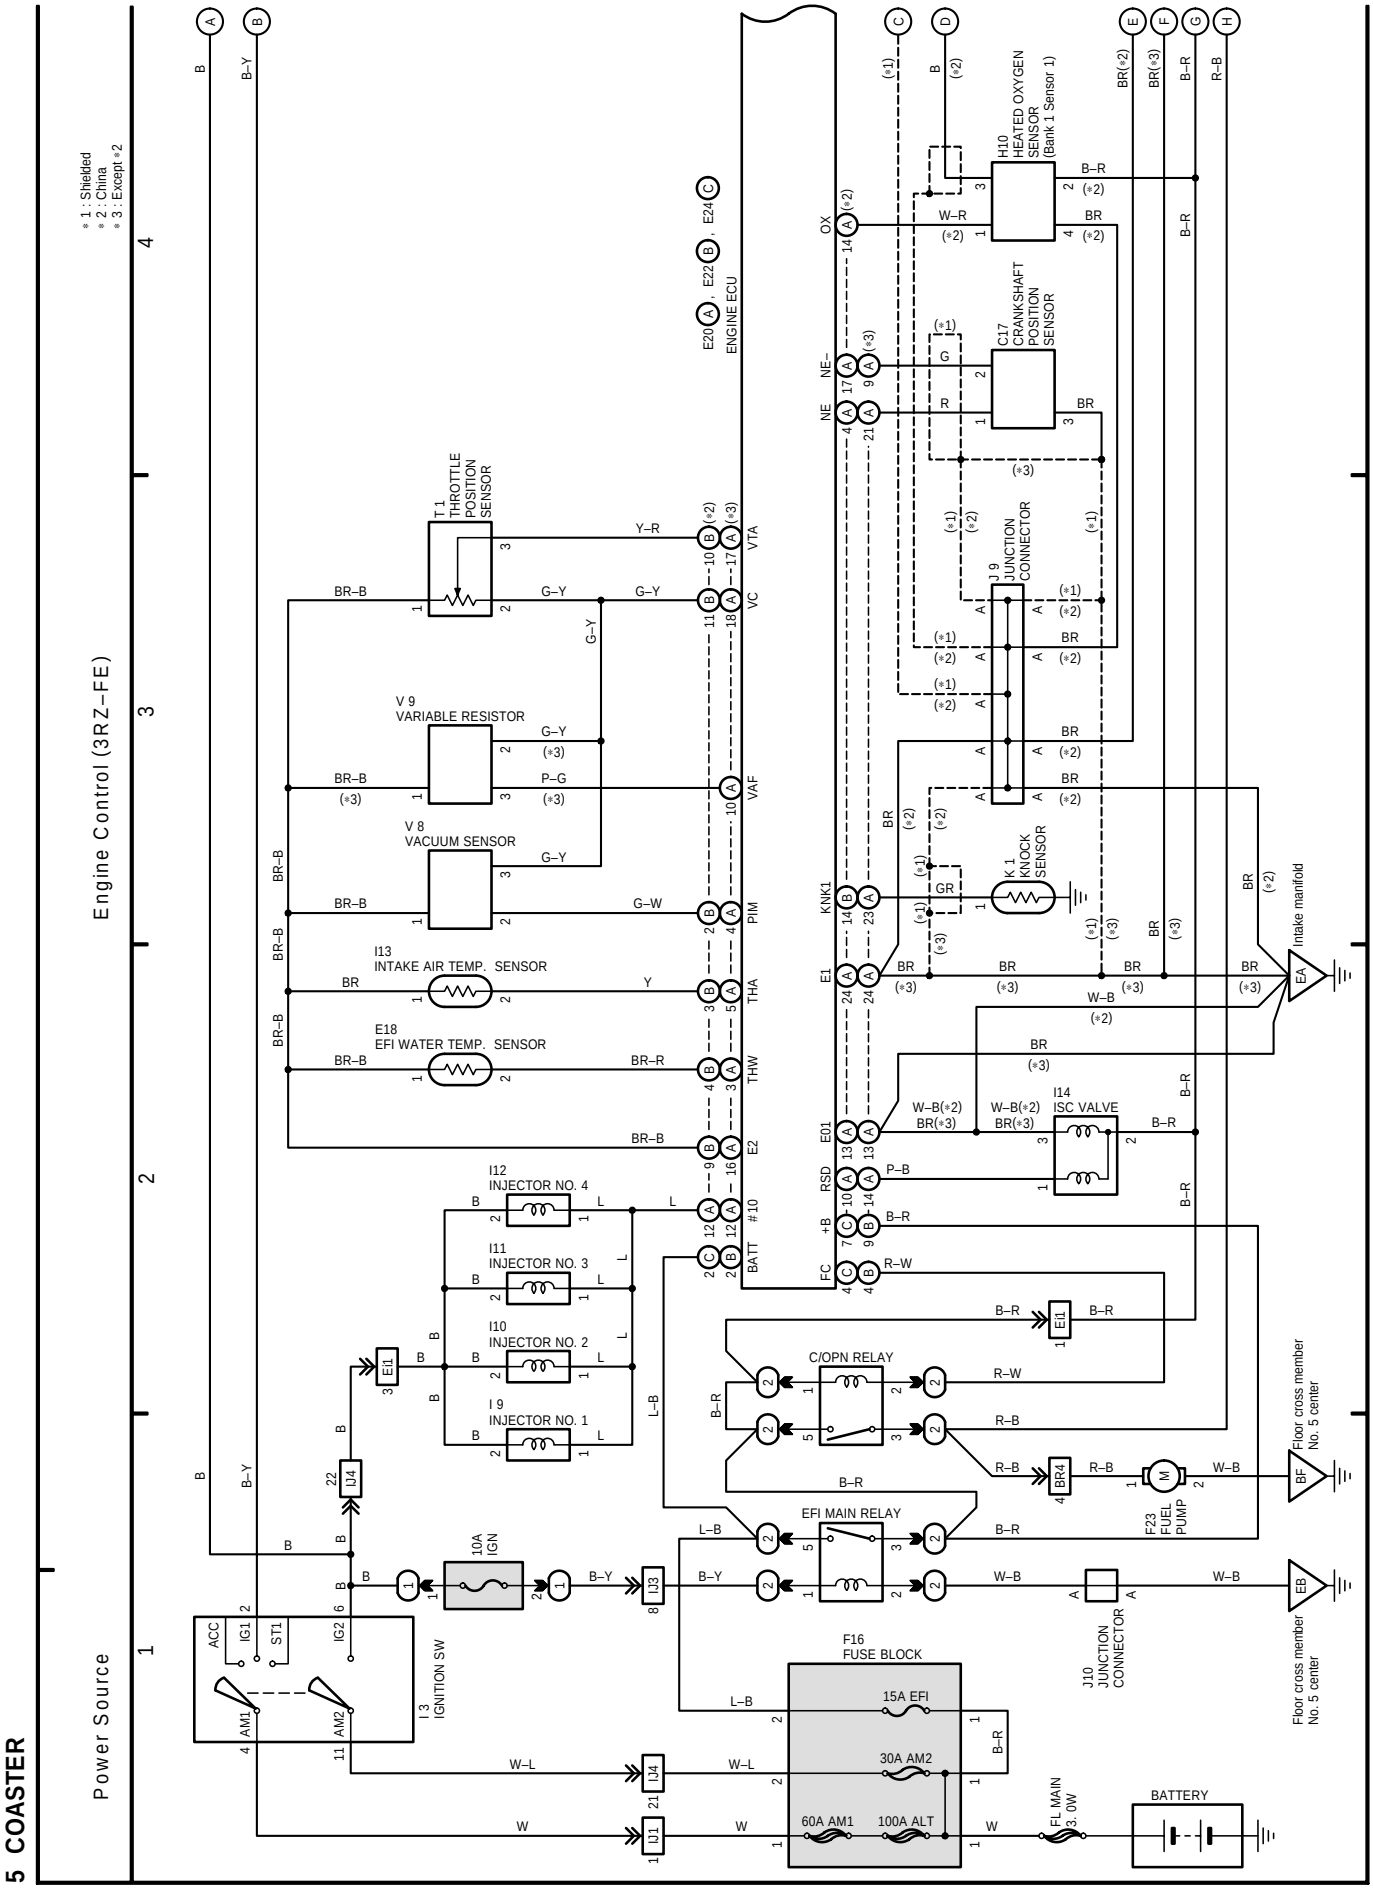
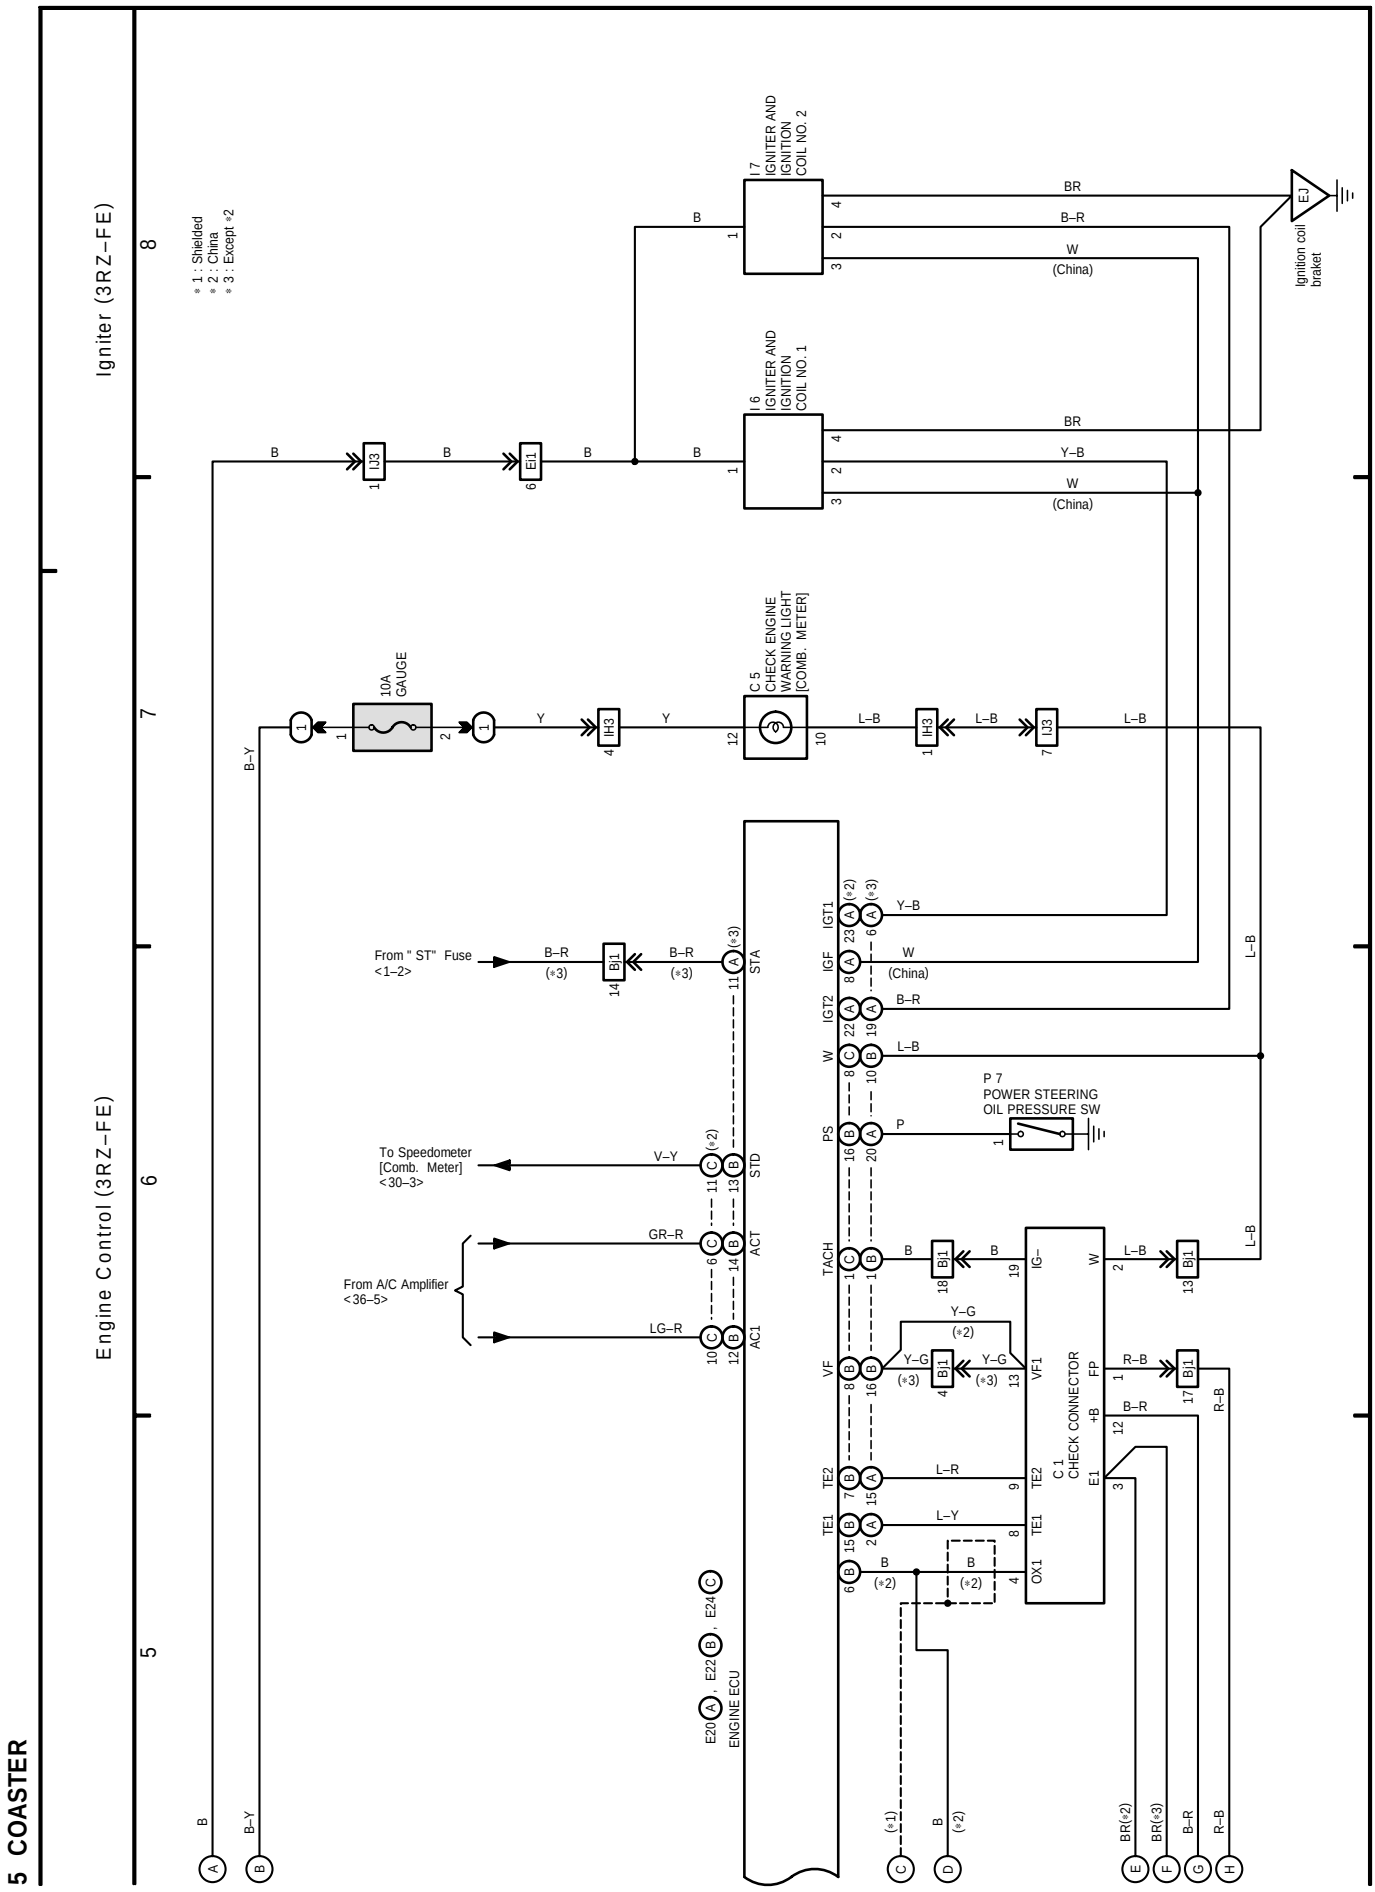

5 COASTER
Power Source
Engine Control (3RZ–FE)
* 1 : Shielded
* 2 : China
* 3 : Except *2
ENGINE ECU
E20 (A), E22 (B), E24 (C)
T 1 THROTTLE POSITION SENSOR
V 9 VARIABLE RESISTOR
V 8 VACUUM SENSOR
I13 INTAKE AIR TEMP. SENSOR
E18 EFI WATER TEMP. SENSOR
I12 INJECTOR NO. 4
I11 INJECTOR NO. 3
I10 INJECTOR NO. 2
I 9 INJECTOR NO. 1
H10 HEATED OXYGEN SENSOR (Bank 1 Sensor 1)
C17 CRANKSHAFT POSITION SENSOR
J 9 JUNCTION CONNECTOR
K 1 KNOCK SENSOR
I14 ISC VALVE
C/OPN RELAY
EFI MAIN RELAY
10A IGN
I 3 IGNITION SW
F16 FUSE BLOCK
15A EFI
30A AM2
60A AM1
100A ALT
BATTERY
F23 FUEL PUMP
J10 JUNCTION CONNECTOR
Intake manifold
Floor cross member No. 5 center
Floor cross member No. 5 center


5 COASTER
Engine Control (3RZ–FE)
Igniter (3RZ–FE)
5
6
7
8
* 1 : Shielded
* 2 : China
* 3 : Except *2
I 7
IGNITER AND IGNITION COIL NO. 2
I 6
IGNITER AND IGNITION COIL NO. 1
BR
B–R
W
(China)
Y–B
EJ
Ignition coil braket
I13
E1
IH3
10A
GAUGE
C 5
CHECK ENGINE WARNING LIGHT [COMB. METER]
L–B
B–Y
From " ST" Fuse
<1–2>
B–R
(*3)
B1
STA
IGT1
IGF
IGT2
W
PS
P 7
POWER STEERING
OIL PRESSURE SW
To Speedometer
[Comb. Meter]
<30–3>
V–Y
STD
From A/C Amplifier
<36–5>
GR–R
ACT
LG–R
AC1
TACH
VF
TE2
TE1
OX1
IG–
VF1
FP
+B
E1
C 1
CHECK CONNECTOR
Y–G
(*2)
L–R
L–Y
R–B
R–R
BR(*2)
BR(*3)
(*1)
E20 (A), E22 (B), E24 (C)
ENGINE ECU