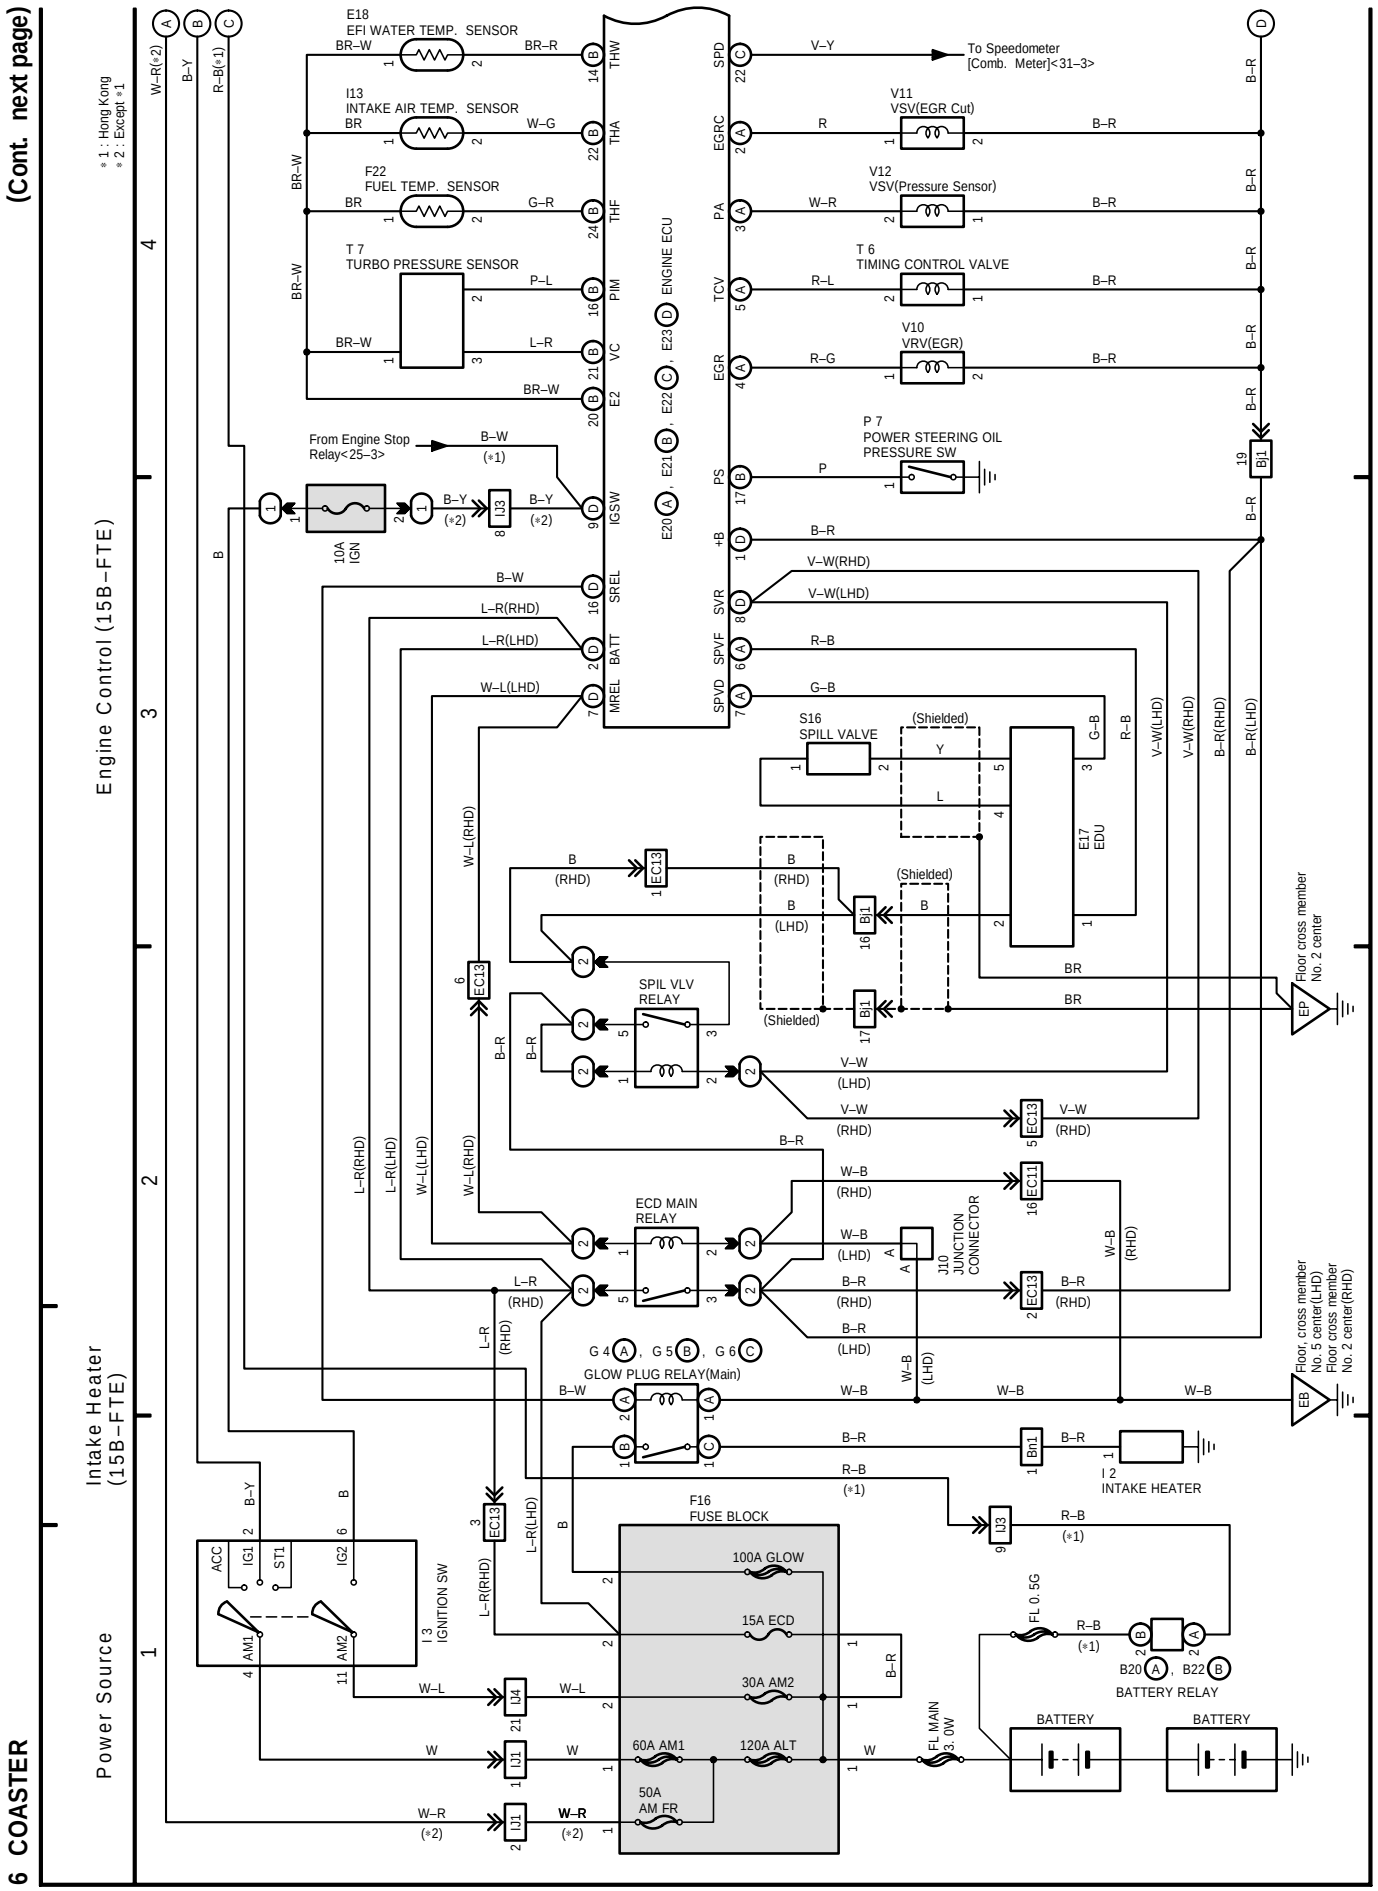

(Cont. next page)
* 1 : Hong Kong
* 2 : Except * 1
Engine Control (15B–FTE)
Intake Heater (15B–FTE)
Power Source
E18 EFI WATER TEMP. SENSOR
I13 INTAKE AIR TEMP. SENSOR
F22 FUEL TEMP. SENSOR
T 7 TURBO PRESSURE SENSOR
ENGINE ECU
To Speedometer [Comb. Meter]<31–3>
V11 VSV(EGR Cut)
V12 VSV(Pressure Sensor)
T 6 TIMING CONTROL VALVE
V10 VRV(EGR)
P 7 POWER STEERING OIL PRESSURE SW
From Engine Stop Relay<25–3>
10A IGN
S16 SPILL VALVE
E17 EDU
SPIL VLV RELAY
ECD MAIN RELAY
GLOW PLUG RELAY(Main)
J10 JUNCTION CONNECTOR
I 2 INTAKE HEATER
I 3 IGNITION SW
F16 FUSE BLOCK
100A GLOW
15A ECD
30A AM2
60A AM1
120A ALT
50A AM FR
FL 0.5G
FL MAIN 3.0W
B20 , B22 BATTERY RELAY
BATTERY
BATTERY
Floor cross member No. 2 center
Floor, cross member No. 5 center(LHD) Floor cross member No. 2 center(RHD)

6 COASTER (Cont' d)

