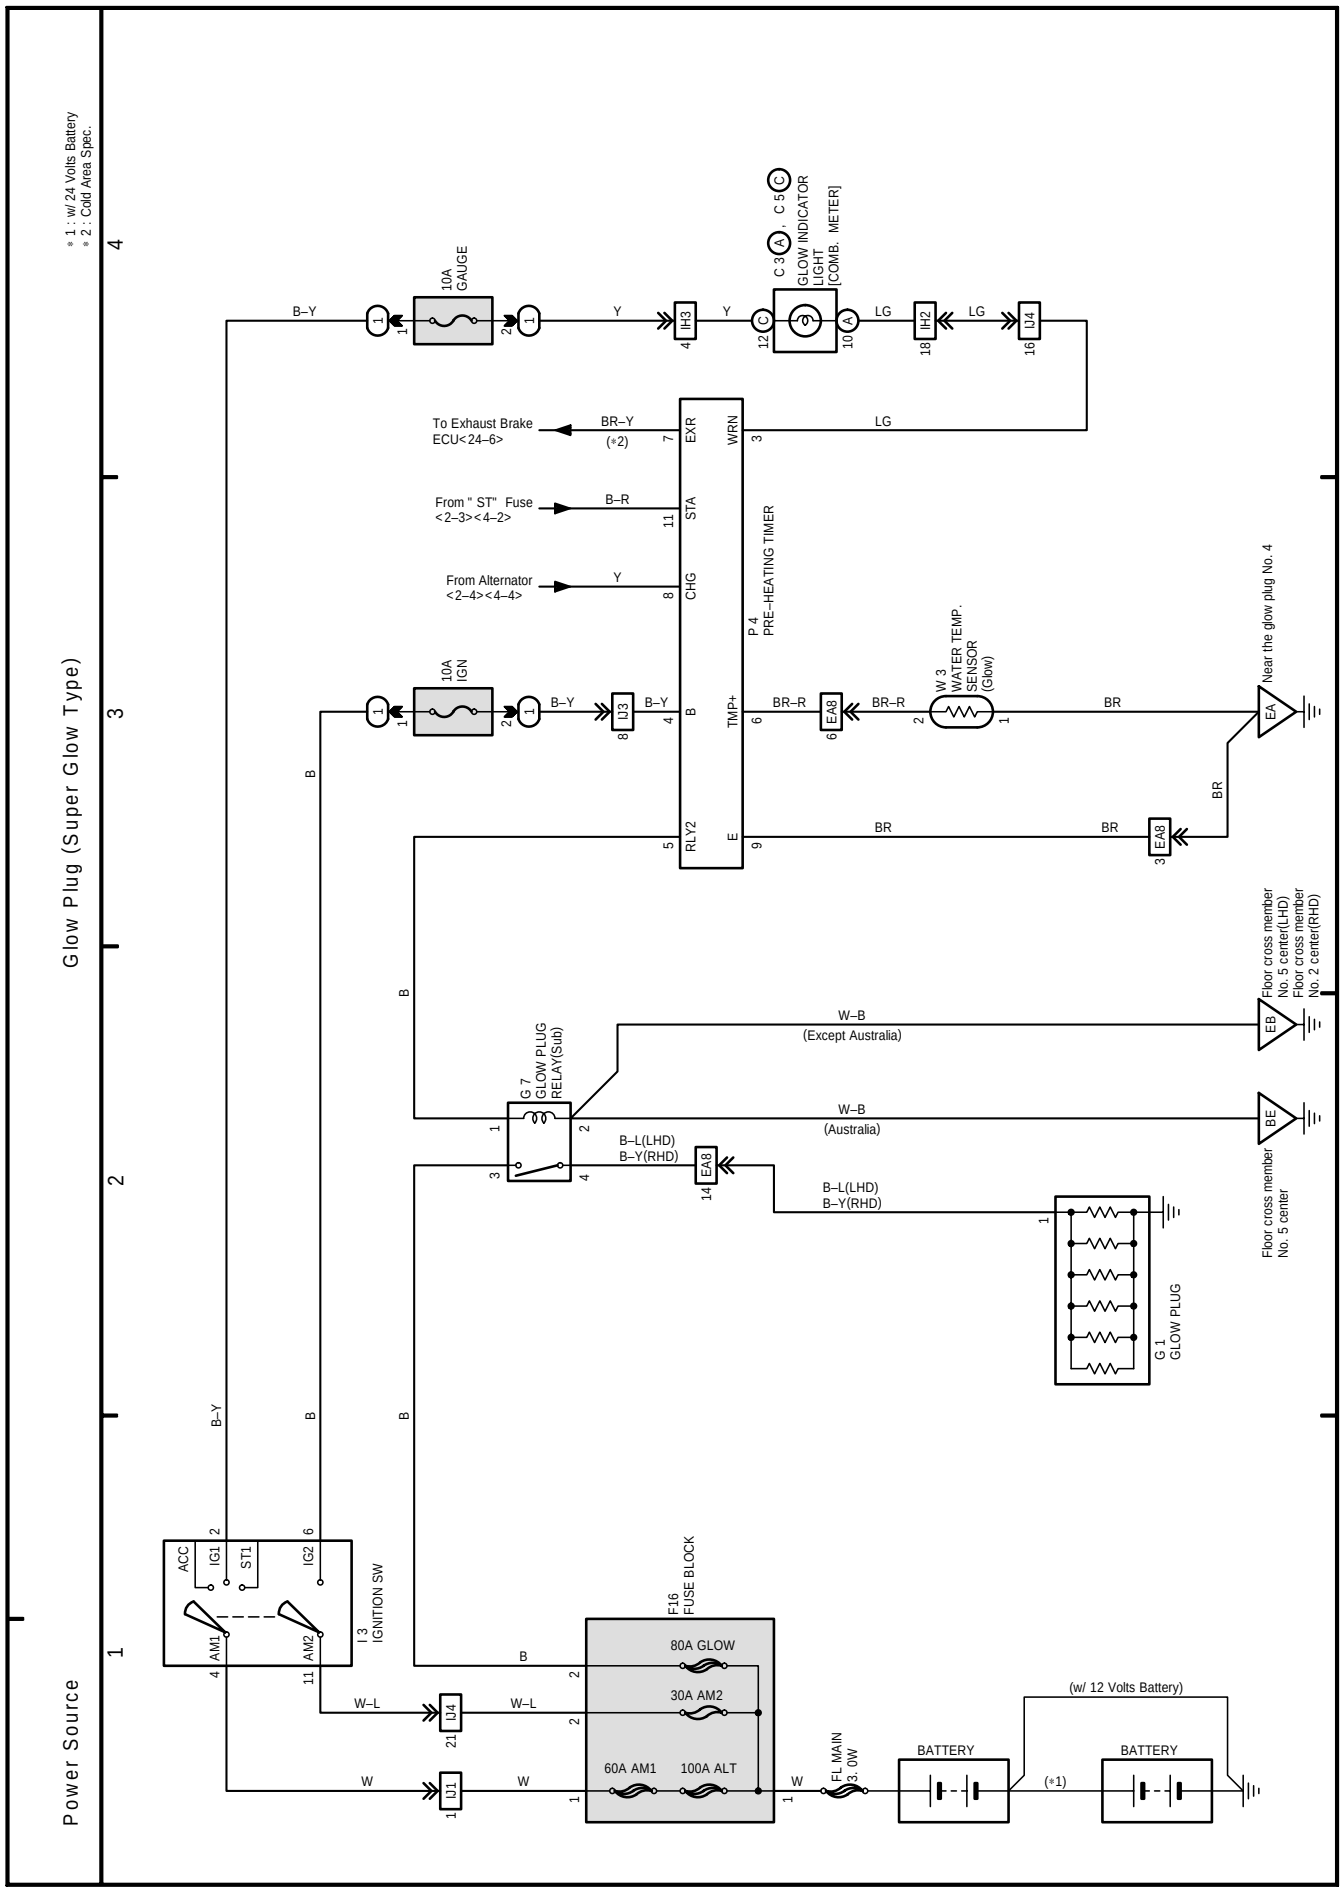

8 COASTER
Power Source
Glow Plug (Super Glow Type)
* 1 : w/ 24 Volts Battery
* 2 : Cold Area Spec.
10A GAUGE
C 3 (A), C 5 (C)
GLOW INDICATOR LIGHT [COMB. METER]
To Exhaust Brake ECU<24–6>
BR–Y (*2)
From " ST" Fuse <2–3><4–2>
B–R
From Alternator <2–4><4–4>
Y
P 4 PRE–HEATING TIMER
EXR
WRN
STA
CHG
RLY2
TMP+
10A IGN
W 3 WATER TEMP. SENSOR (Glow)
Near the glow plug No. 4
EA
G 7 GLOW PLUG RELAY(Sub)
W–B (Except Australia)
W–B (Australia)
B–L(LHD) B–Y(RHD)
Floor cross member No. 5 center(LHD)
Floor cross member No. 2 center(RHD)
Floor cross member No. 5 center
G 1 GLOW PLUG
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
F16 FUSE BLOCK
80A GLOW
30A AM2
60A AM1
100A ALT
FL MAIN 3. 0W
BATTERY
(w/ 12 Volts Battery)
(*1)