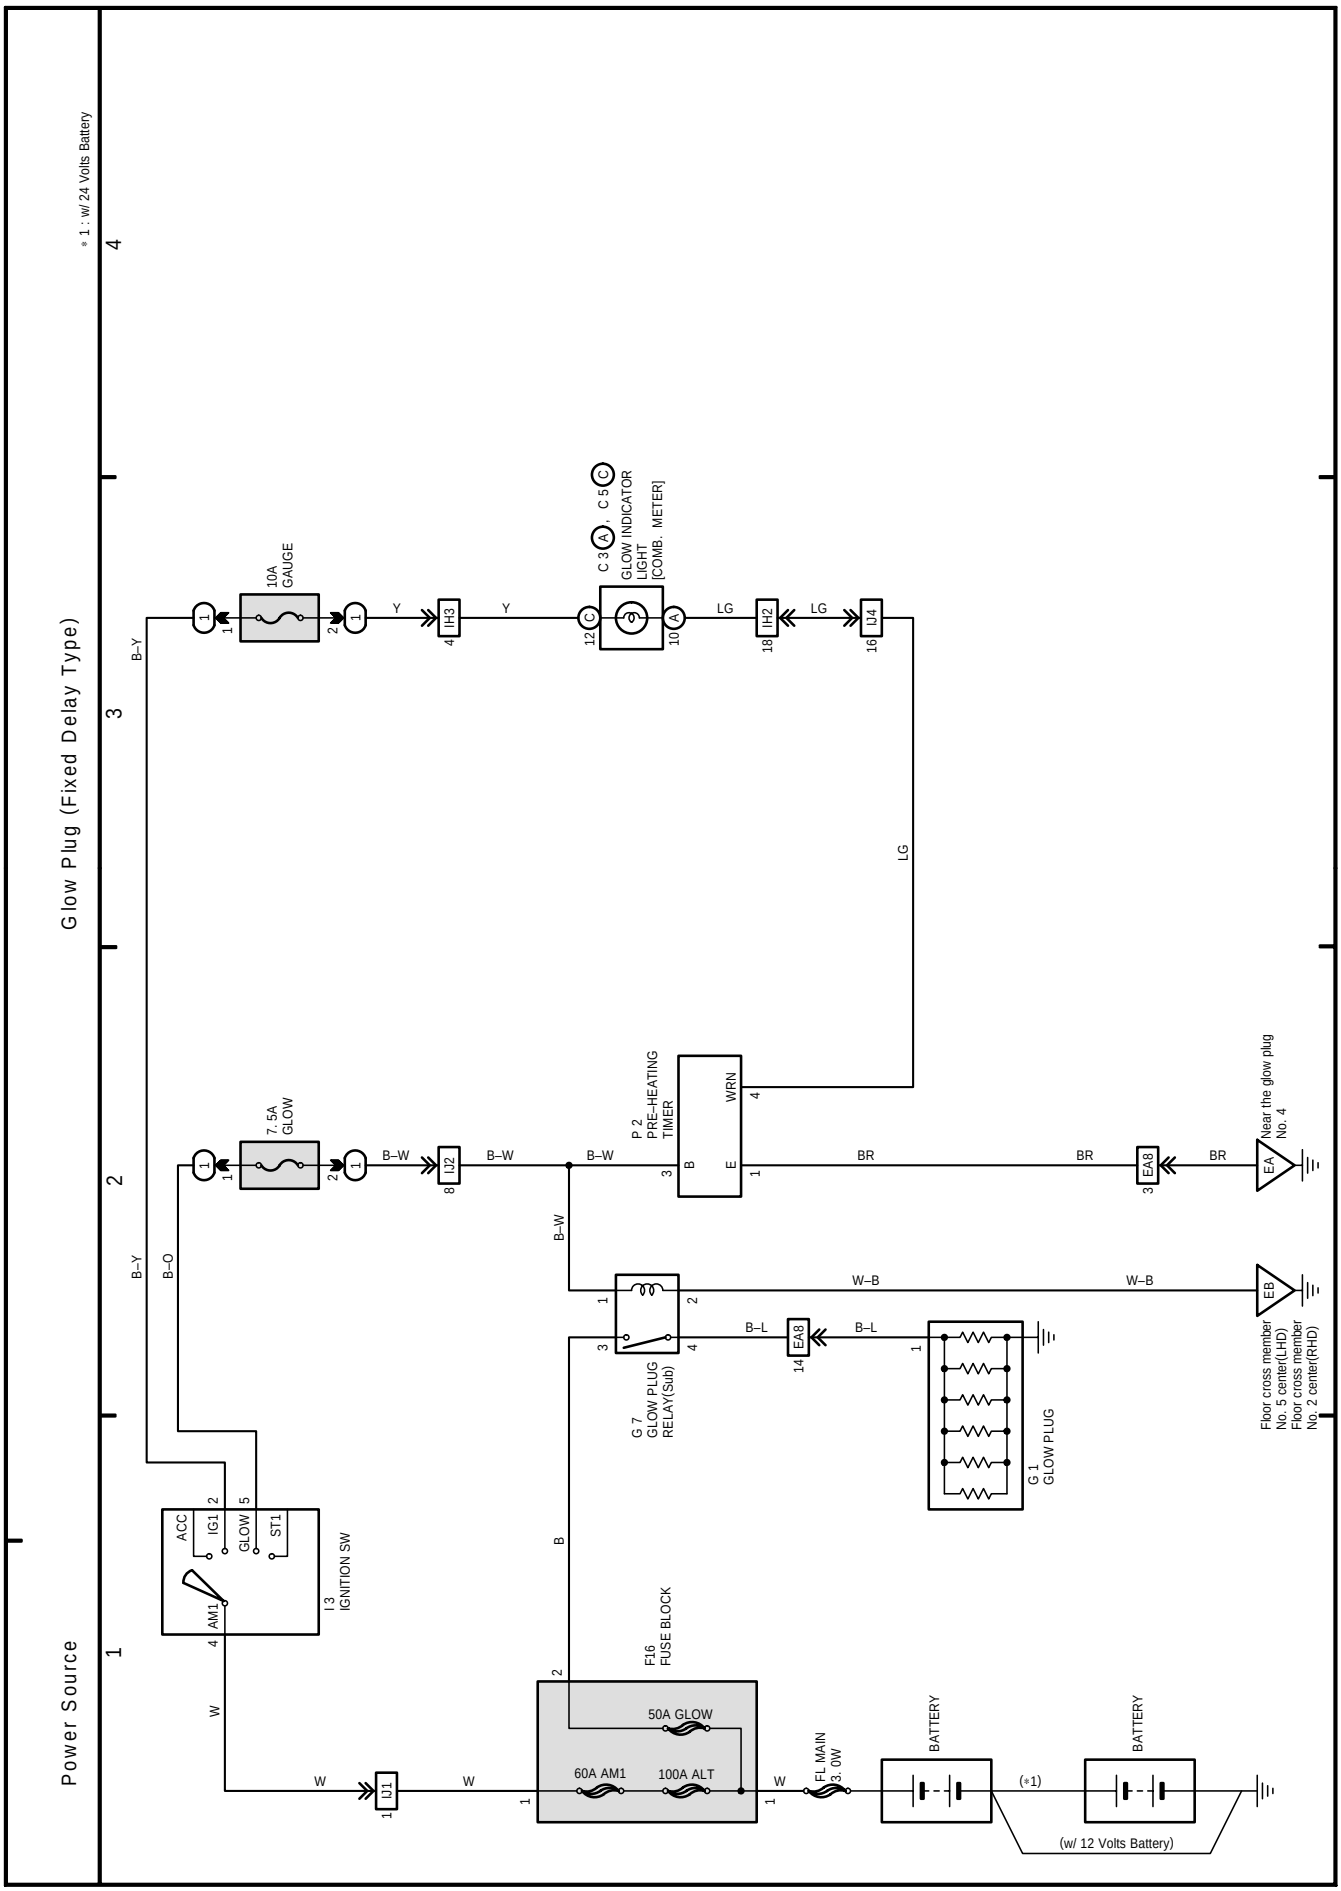

9 COASTER
Power Source
Glow Plug (Fixed Delay Type)
* 1 : w/ 24 Volts Battery
1
2
3
4
10A GAUGE
C 3 (A), C 5 (C)
GLOW INDICATOR LIGHT [COMB. METER]
IH3
IH2
IJ4
7.5A GLOW
IJ2
P 2 PRE–HEATING TIMER
WRN
EA8
Near the glow plug No. 4
EA
EB
Floor cross member No. 5 center(LHD) Floor cross member No. 2 center(RHD)
G 7 GLOW PLUG RELAY(Sub)
G 1 GLOW PLUG
I 3 IGNITION SW
ACC
IG1
GLOW
ST1
AM1
F16 FUSE BLOCK
50A GLOW
60A AM1
100A ALT
IJ1
FL MAIN 3. 0W
BATTERY
(*1)
(w/ 12 Volts Battery)
B–Y
B–O
B–W
W–B
B–L
BR
LG
Y
W
B