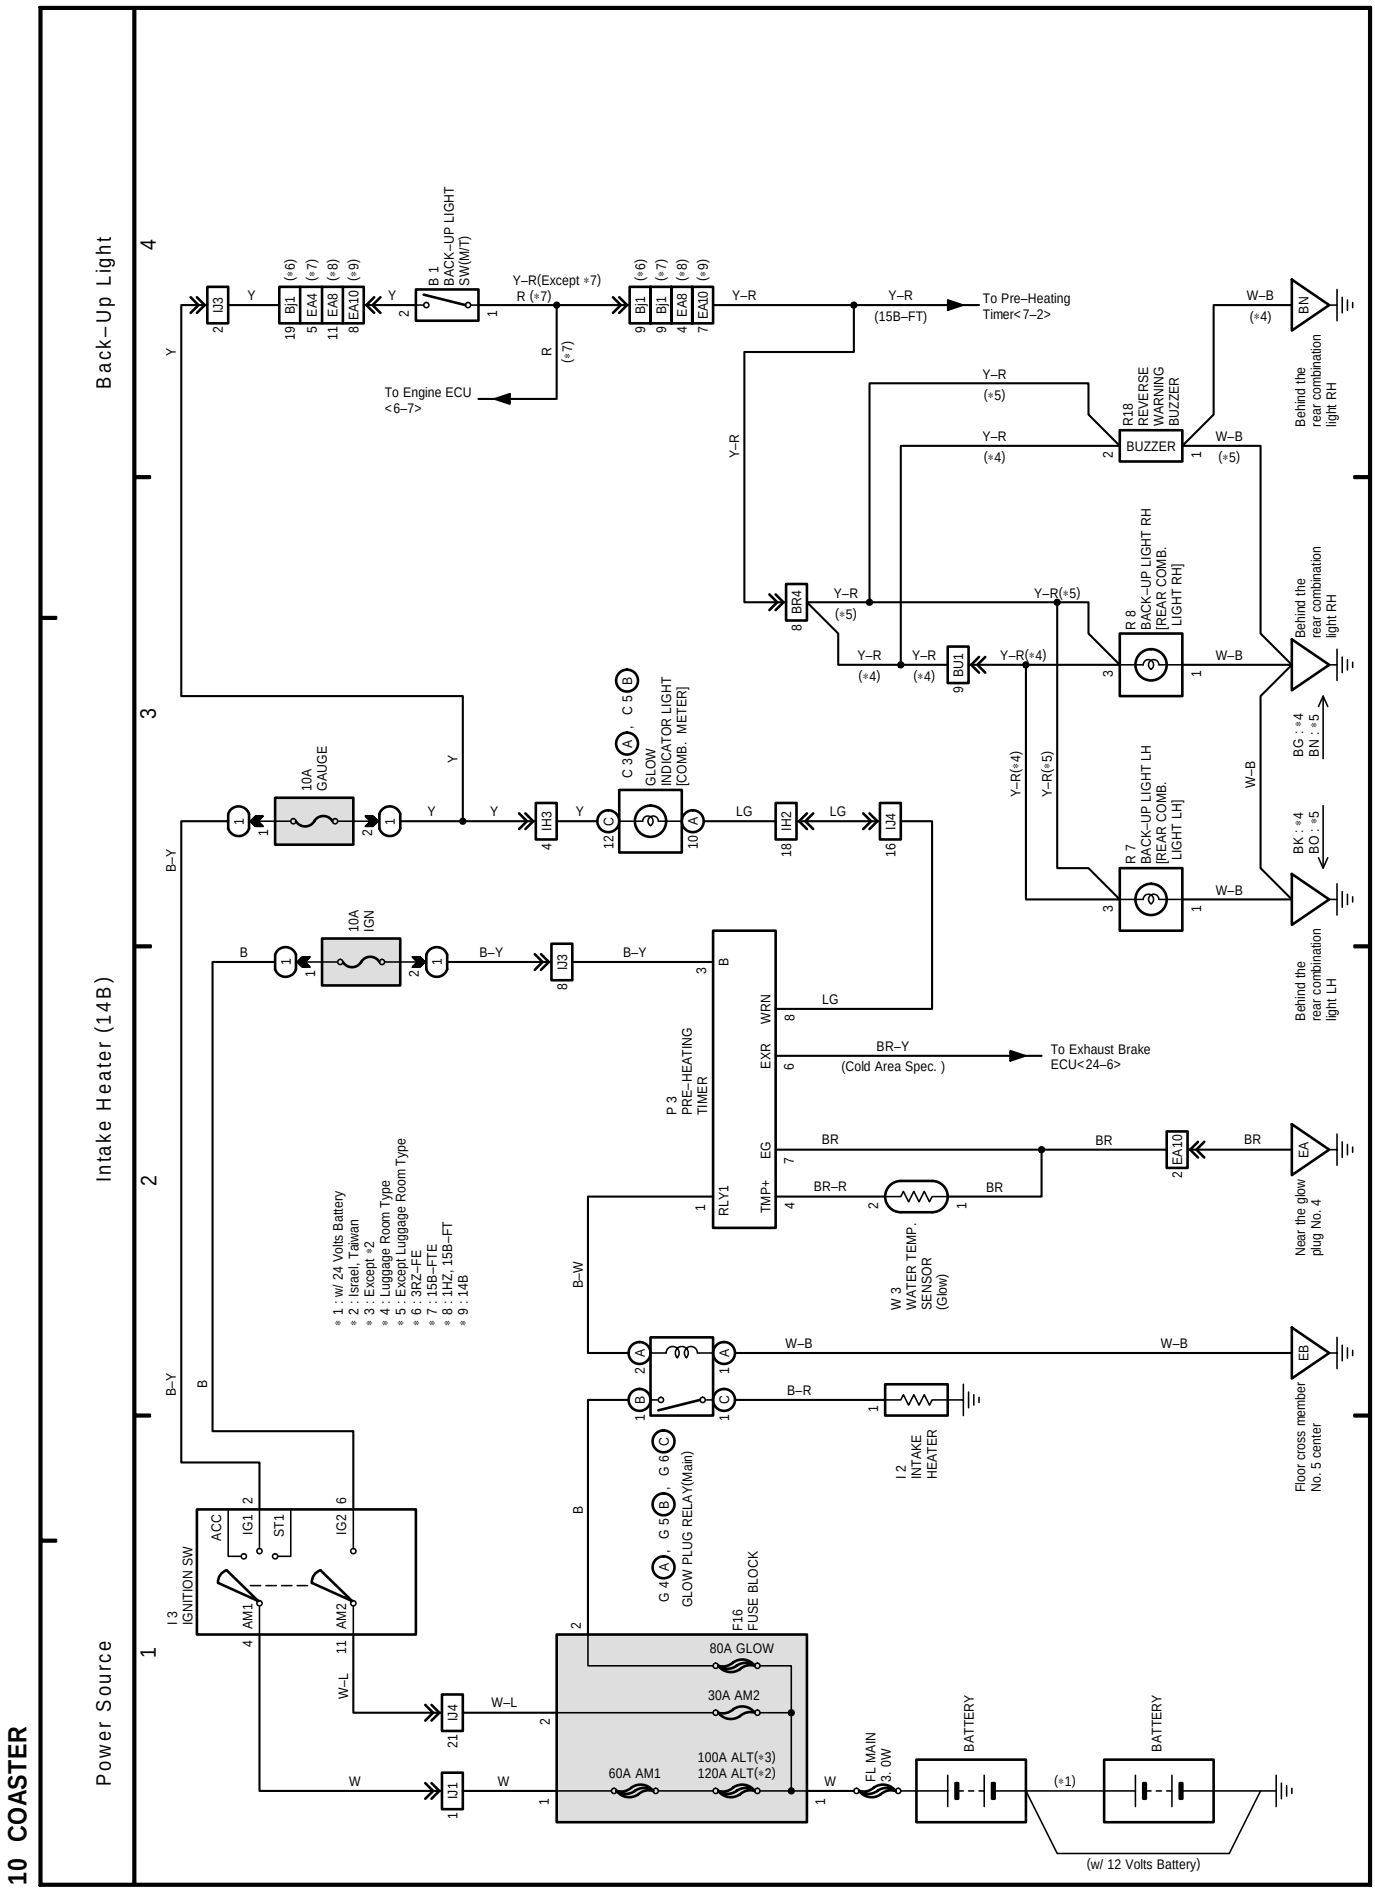

10 COASTER
Power Source
Intake Heater (14B)
Back–Up Light
1
2
3
4
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
10A GAUGE
10A IGN
B 1 BACK–UP LIGHT SW(M/T)
Y–R(Except ∗7)
R (∗7)
To Engine ECU <6–7>
To Pre–Heating Timer<7–2>
(15B–FT)
C 3 , C 5 GLOW INDICATOR LIGHT [COMB. METER]
R18 REVERSE WARNING BUZZER
BUZZER
R 8 BACK–UP LIGHT RH [REAR COMB. LIGHT RH]
R 7 BACK–UP LIGHT LH [REAR COMB. LIGHT LH]
Behind the rear combination light RH
Behind the rear combination light LH
BG : ∗4 BN : ∗5
BK : ∗4 BO : ∗5
P 3 PRE–HEATING TIMER
RLY1
TMP+
WRN
EXR
EG
BR–Y
(Cold Area Spec. )
To Exhaust Brake ECU<24–6>
W 3 WATER TEMP. SENSOR (Glow)
Near the glow plug No. 4
I 2 INTAKE HEATER
Floor cross member No. 5 center
G 4 (A) , G 5 (B) , G 6 (C) GLOW PLUG RELAY(Main)
F16 FUSE BLOCK
80A GLOW
30A AM2
100A ALT(∗3)
120A ALT(∗2)
60A AM1
FL MAIN 3. 0W
BATTERY
(∗1)
(w/ 12 Volts Battery)
∗ 1 : w/ 24 Volts Battery
∗ 2 : Israel, Taiwan
∗ 3 : Except ∗2
∗ 4 : Luggage Room Type
∗ 5 : Except Luggage Room Type
∗ 6 : 3RZ–FE
∗ 7 : 15B–FTE
∗ 8 : 1HZ, 15B–FT
∗ 9 : 14B