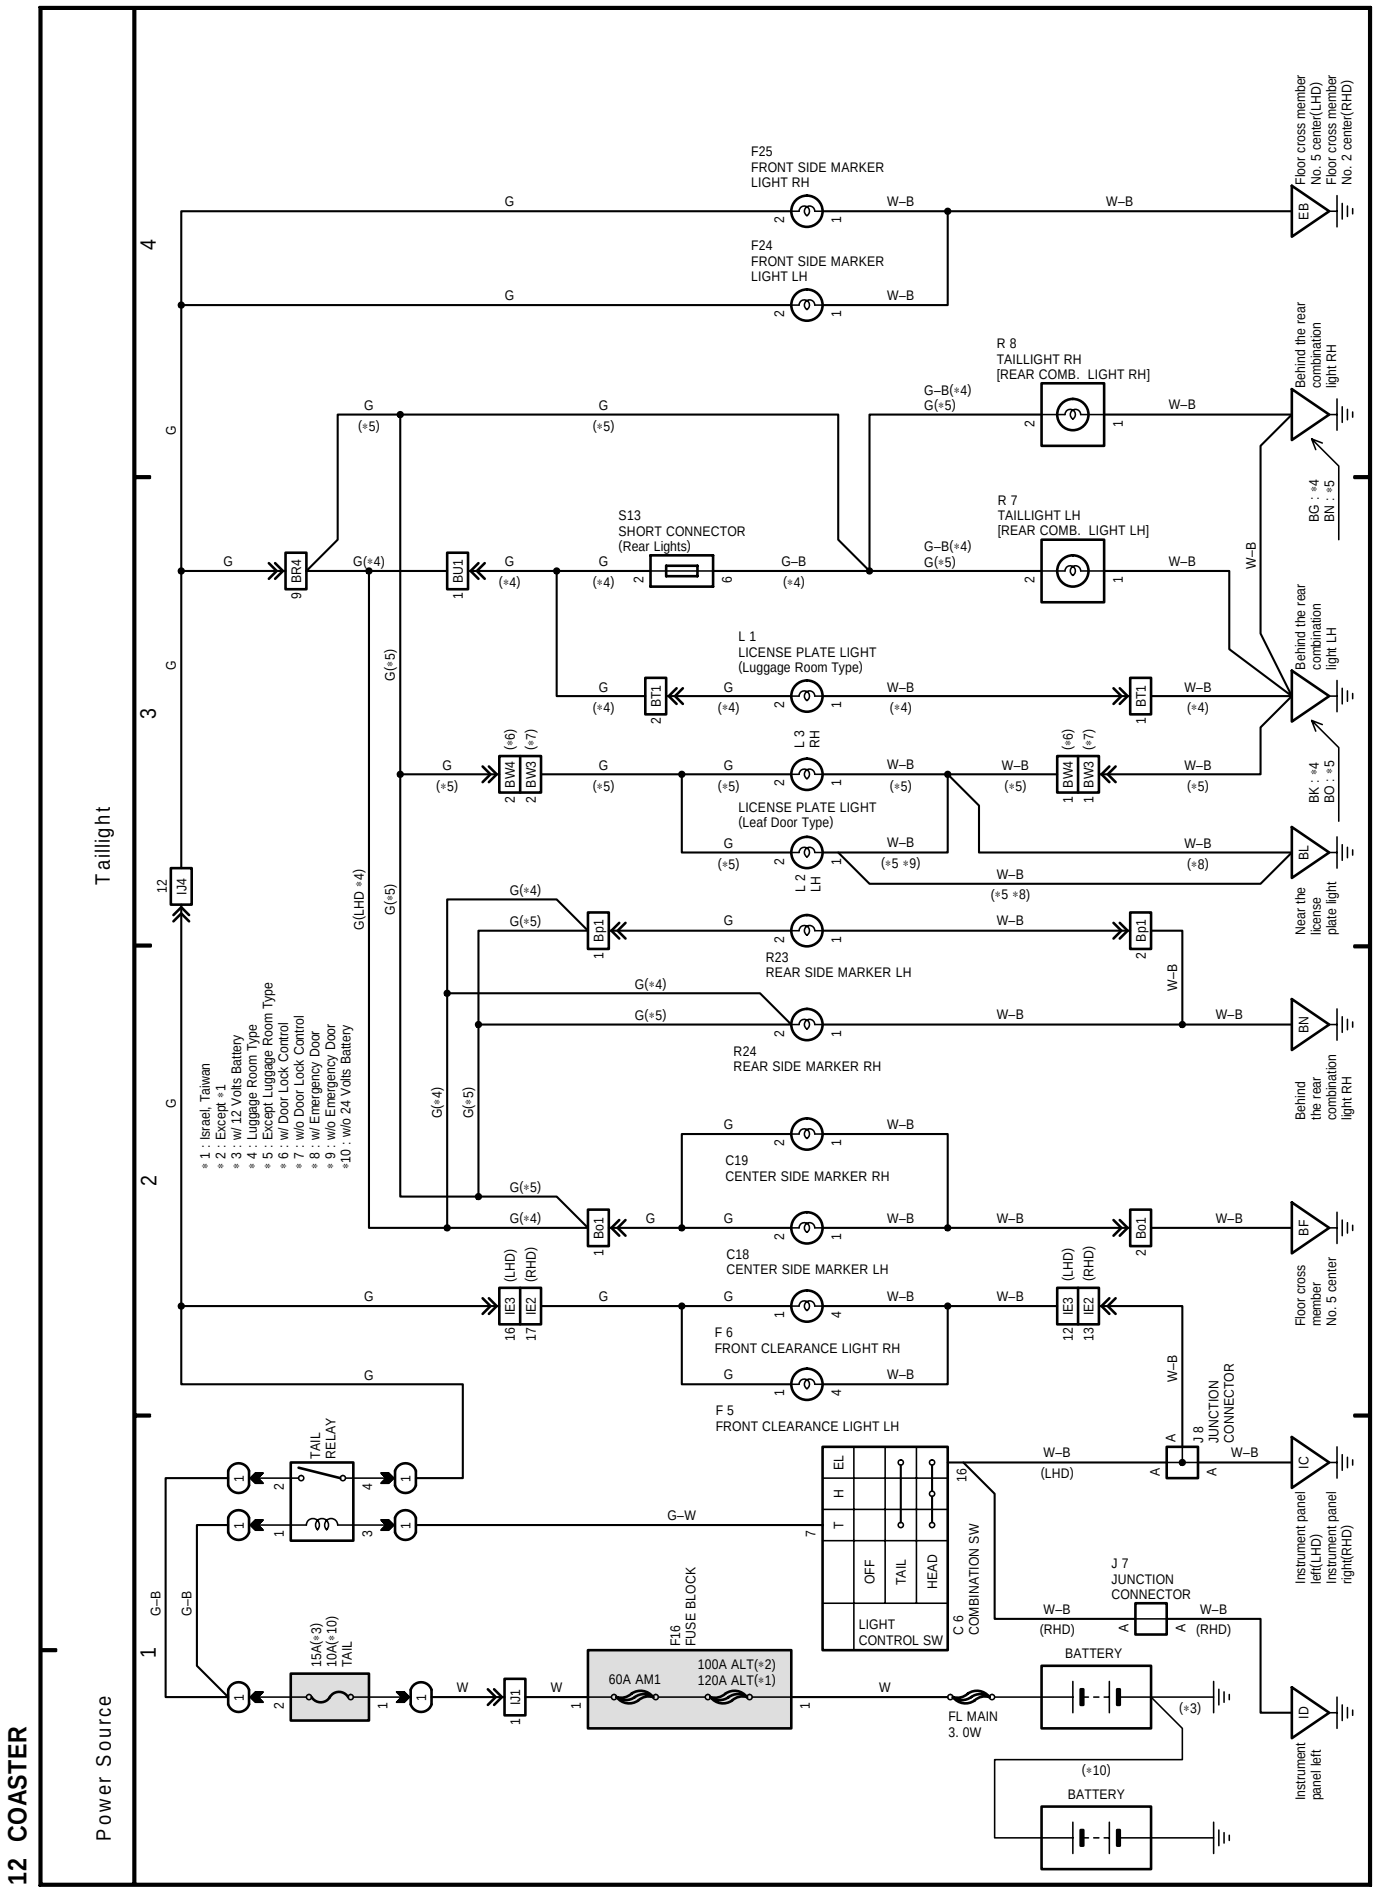

12 COASTER
Power Source
Taillight
F25
FRONT SIDE MARKER
LIGHT RH
F24
FRONT SIDE MARKER
LIGHT LH
Floor cross member
No. 5 center(LHD)
Floor cross member
No. 2 center(RHD)
R 8
TAILLIGHT RH
[REAR COMB. LIGHT RH]
R 7
TAILLIGHT LH
[REAR COMB. LIGHT LH]
Behind the rear
combination
light RH
Behind the rear
combination
light LH
S13
SHORT CONNECTOR
(Rear Lights)
L 1
LICENSE PLATE LIGHT
(Luggage Room Type)
L 3
RH
LICENSE PLATE LIGHT
(Leaf Door Type)
L 2
LH
Near the
license
plate light
R23
REAR SIDE MARKER LH
R24
REAR SIDE MARKER RH
Behind
the rear
combination
light RH
C19
CENTER SIDE MARKER RH
C18
CENTER SIDE MARKER LH
Floor cross
member
No. 5 center
F 6
FRONT CLEARANCE LIGHT RH
F 5
FRONT CLEARANCE LIGHT LH
TAIL
RELAY
J 8
JUNCTION
CONNECTOR
J 7
JUNCTION
CONNECTOR
C 6
COMBINATION SW
LIGHT
CONTROL SW
OFF
TAIL
HEAD
Instrument panel
left(LHD)
Instrument panel
right(RHD)
15A(*3)
10A(*10)
TAIL
F16
FUSE BLOCK
60A AM1
100A ALT(*2)
120A ALT(*1)
FL MAIN
3. 0W
BATTERY
BATTERY
Instrument
panel left
BG : *4
BN : *5
BK : *4
BO : *5
* 1 : Israel, Taiwan
* 2 : Except *1
* 3 : w/ 12 Volts Battery
* 4 : Luggage Room Type
* 5 : Except Luggage Room Type
* 6 : w/ Door Lock Control
* 7 : w/o Door Lock Control
* 8 : w/ Emergency Door
* 9 : w/o Emergency Door
*10 : w/o 24 Volts Battery