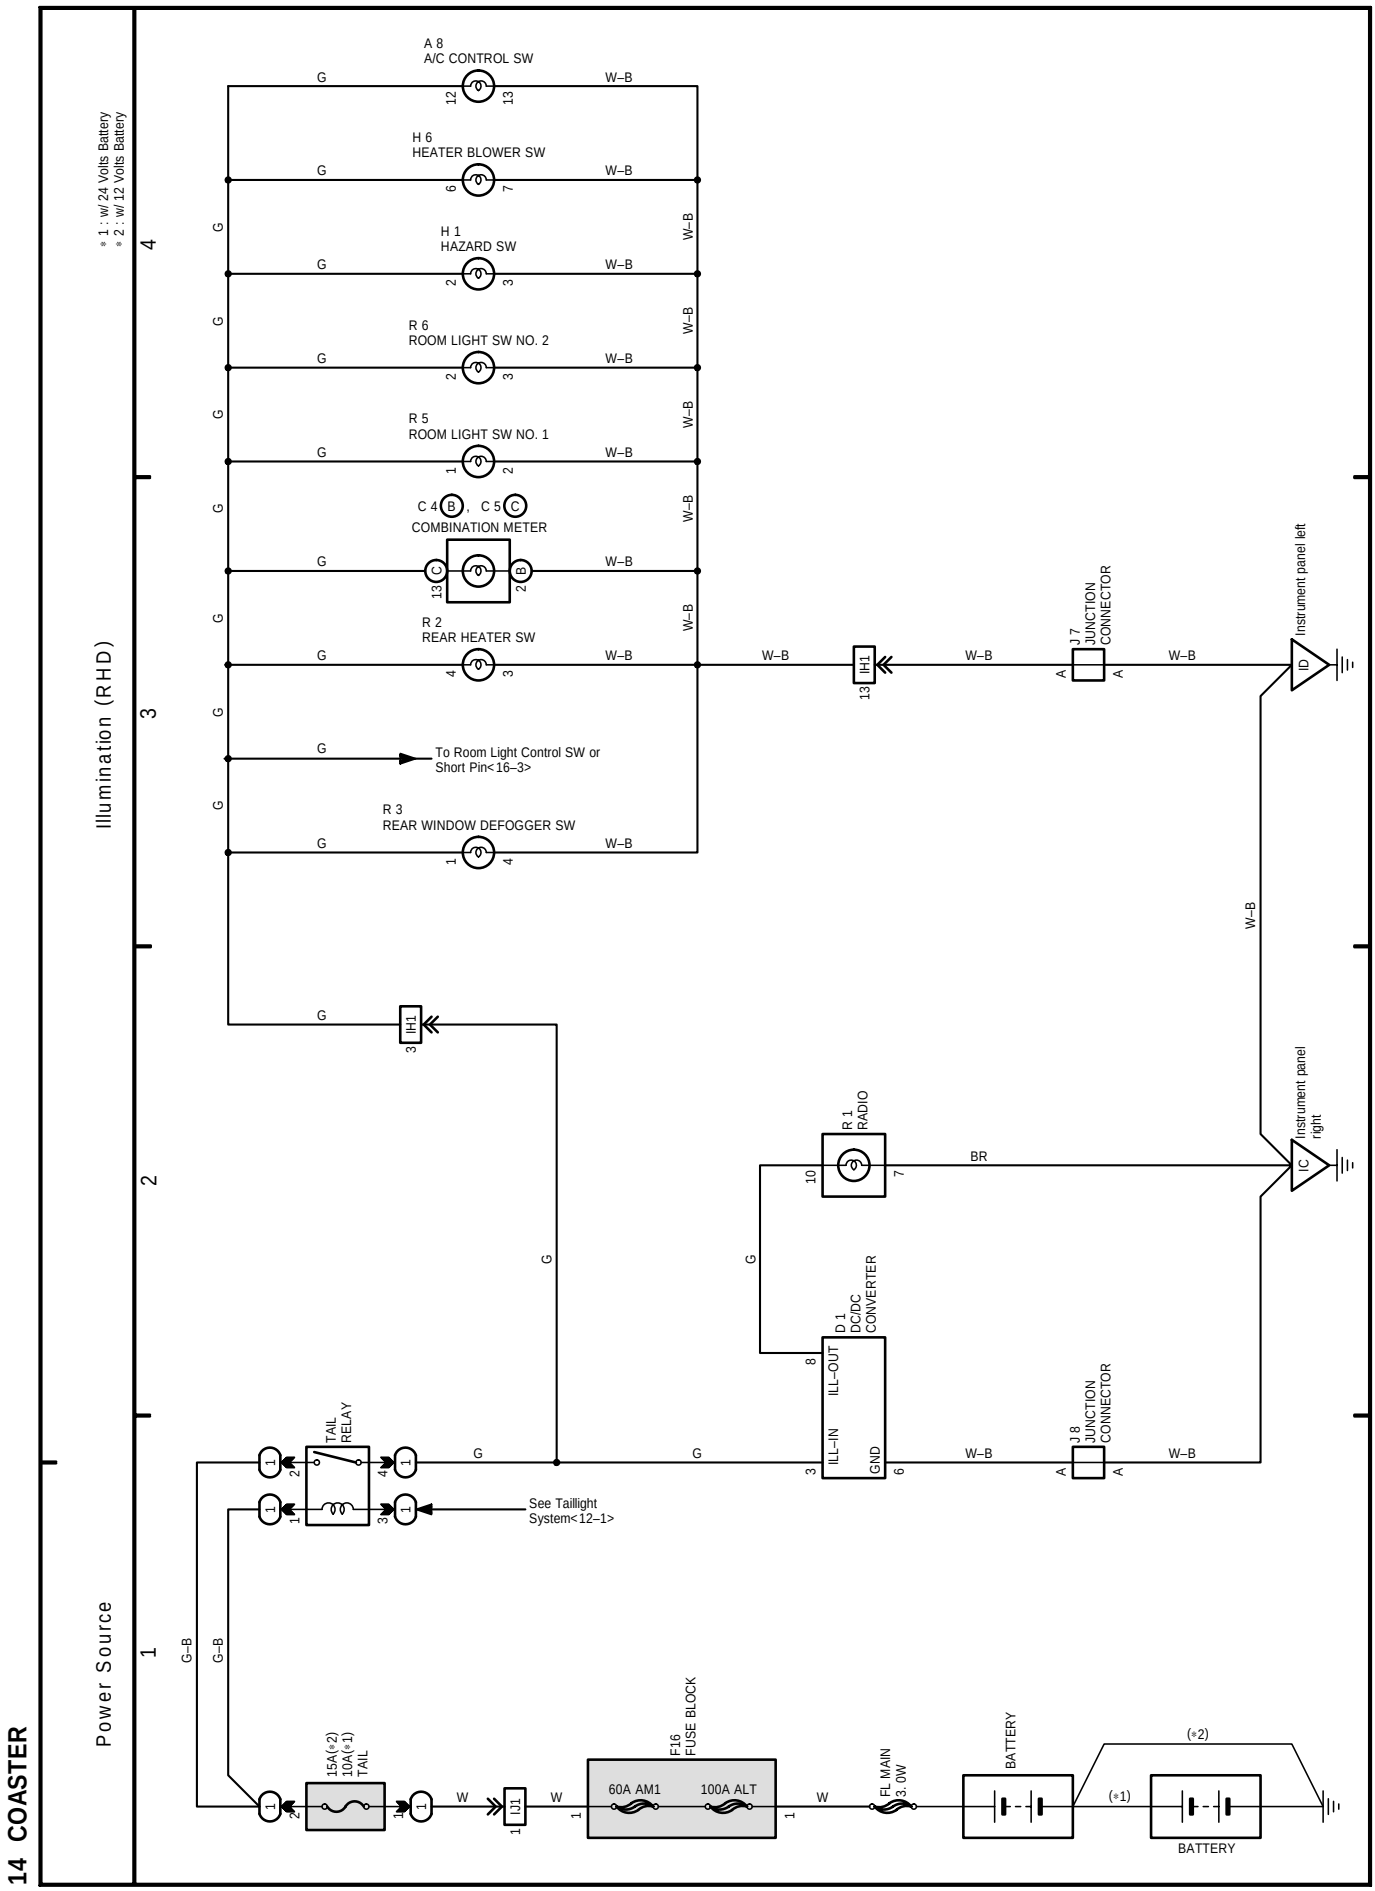

14 COASTER
Power Source
Illumination (RHD)
* 1 : w/ 24 Volts Battery
* 2 : w/ 12 Volts Battery
A 8
A/C CONTROL SW
H 6
HEATER BLOWER SW
H 1
HAZARD SW
R 6
ROOM LIGHT SW NO. 2
R 5
ROOM LIGHT SW NO. 1
C 4 (B), C 5 (C)
COMBINATION METER
R 2
REAR HEATER SW
To Room Light Control SW or
Short Pin<16–3>
R 3
REAR WINDOW DEFOGGER SW
J 7
JUNCTION
CONNECTOR
Instrument panel left
IH1
R 1
RADIO
Instrument panel
right
D 1
DC/DC
CONVERTER
ILL–OUT
ILL–IN
GND
J 8
JUNCTION
CONNECTOR
TAIL
RELAY
See Taillight
System<12–1>
15A(*2)
10A(*1)
TAIL
I11
F16
FUSE BLOCK
60A AM1
100A ALT
FL MAIN
3.0W
BATTERY
(*2)
(*1)
BATTERY