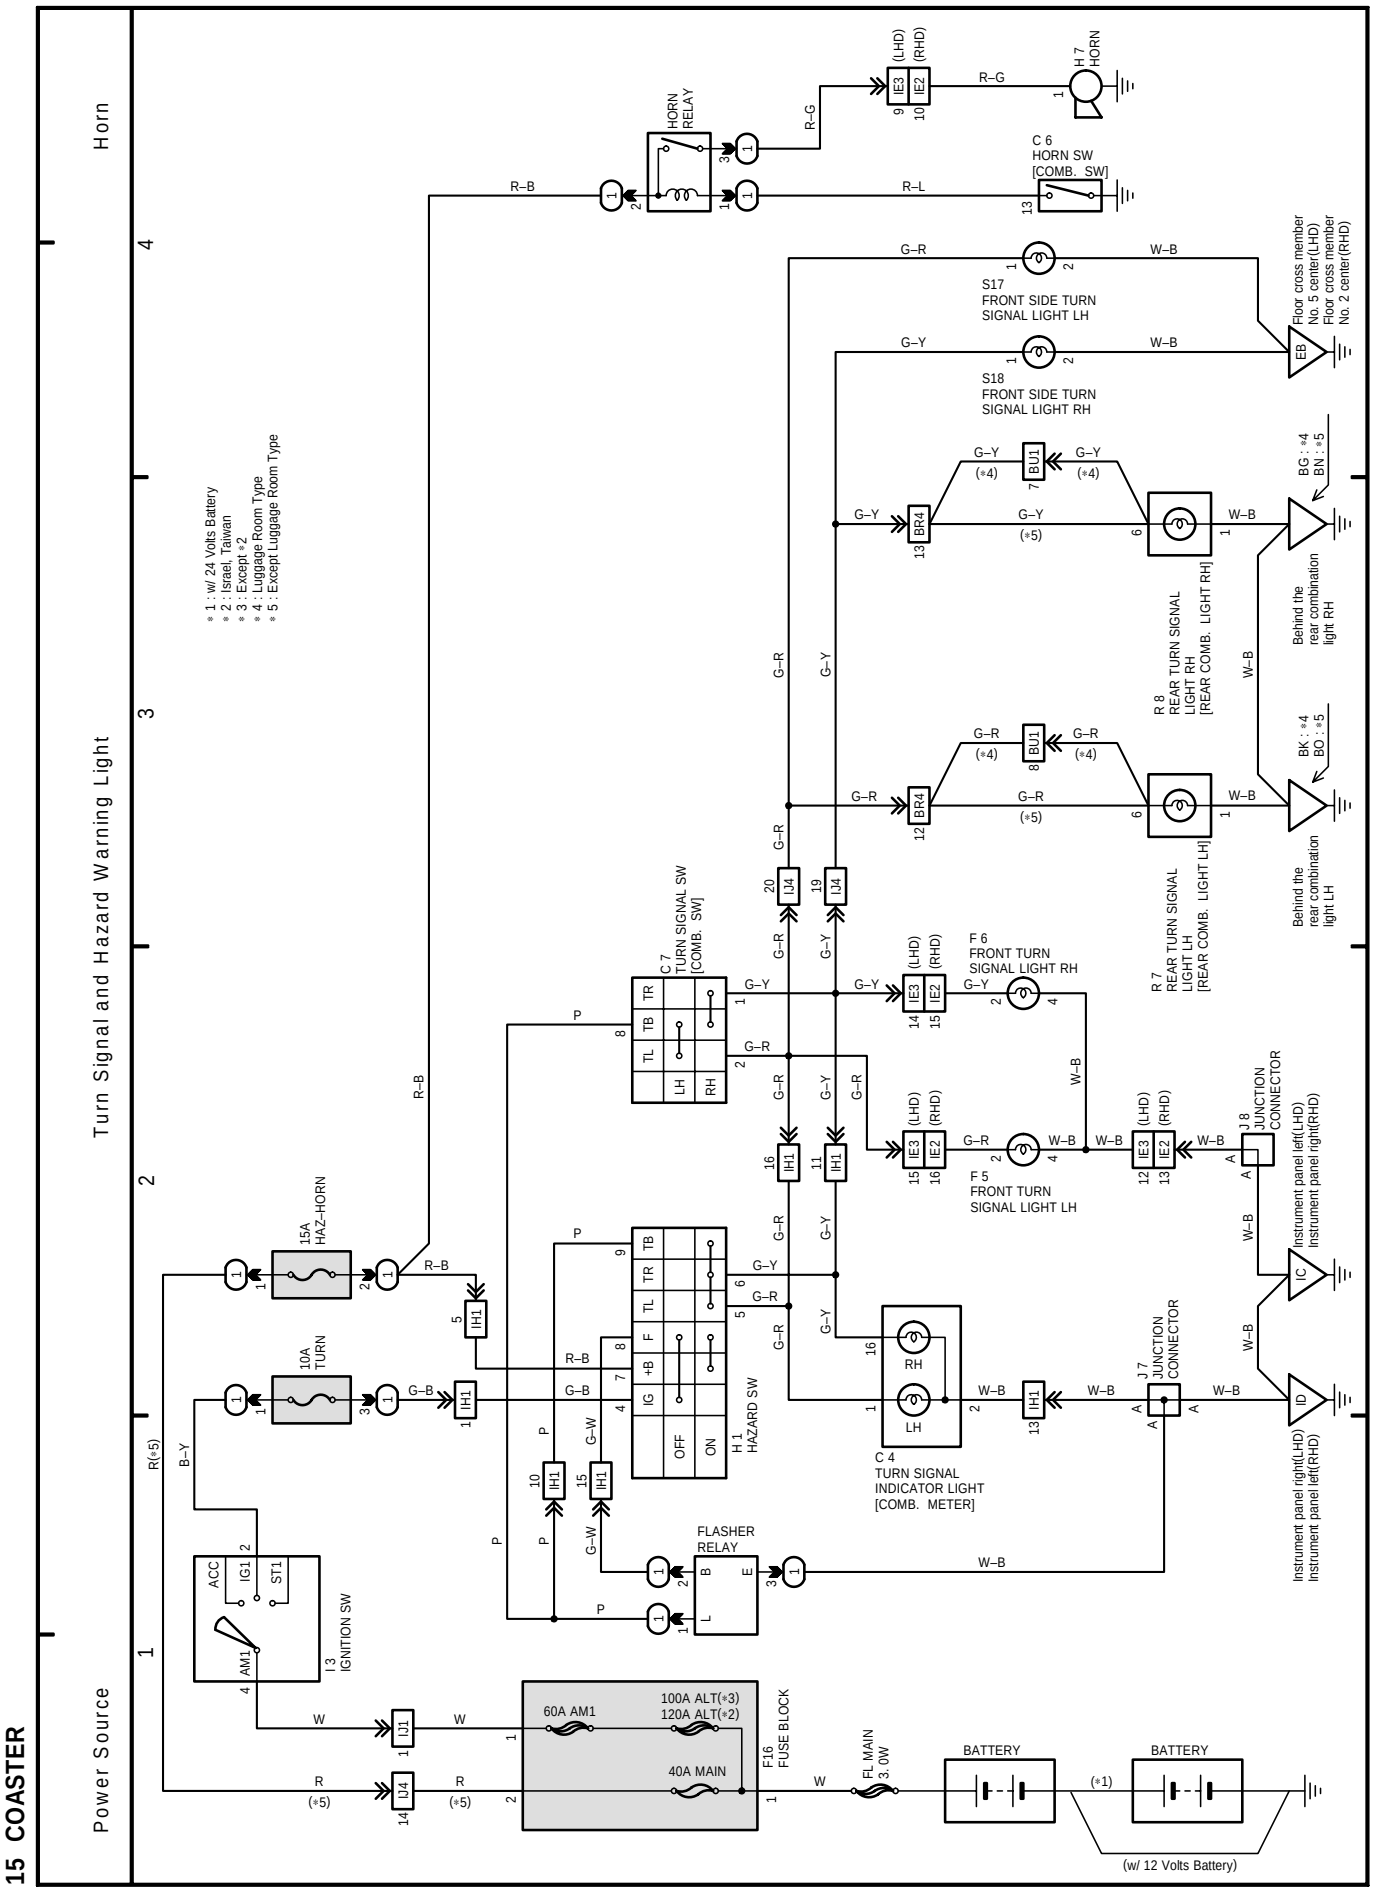

15 COASTER
Power Source
Turn Signal and Hazard Warning Light
Horn
1
2
3
4
* 1 : w/ 24 Volts Battery
* 2 : Israel, Taiwan
* 3 : Except *2
* 4 : Luggage Room Type
* 5 : Except Luggage Room Type
BATTERY
(*1)
(w/ 12 Volts Battery)
FL MAIN 3.0W
F16 FUSE BLOCK
60A AM1
100A ALT(*3) 120A ALT(*2)
40A MAIN
I 3 IGNITION SW
ACC
IG1
ST1
AM1
15A HAZ–HORN
10A TURN
FLASHER RELAY
H 1 HAZARD SW
OFF
ON
C 7 TURN SIGNAL SW [COMB. SW]
C 6 HORN SW [COMB. SW]
HORN RELAY
H 7 HORN
C 4 TURN SIGNAL INDICATOR LIGHT [COMB. METER]
S17 FRONT SIDE TURN SIGNAL LIGHT LH
S18 FRONT SIDE TURN SIGNAL LIGHT RH
F 5 FRONT TURN SIGNAL LIGHT LH
F 6 FRONT TURN SIGNAL LIGHT RH
R 7 REAR TURN SIGNAL LIGHT LH [REAR COMB. LIGHT LH]
R 8 REAR TURN SIGNAL LIGHT RH [REAR COMB. LIGHT RH]
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
Floor cross member No. 5 center(LHD) Floor cross member No. 2 center(RHD)
Behind the rear combination light RH
Behind the rear combination light LH
Instrument panel left(LHD) Instrument panel right(RHD)
Instrument panel right(LHD) Instrument panel left(RHD)
BG : *4 BN : *5
BK : *4 BO : *5