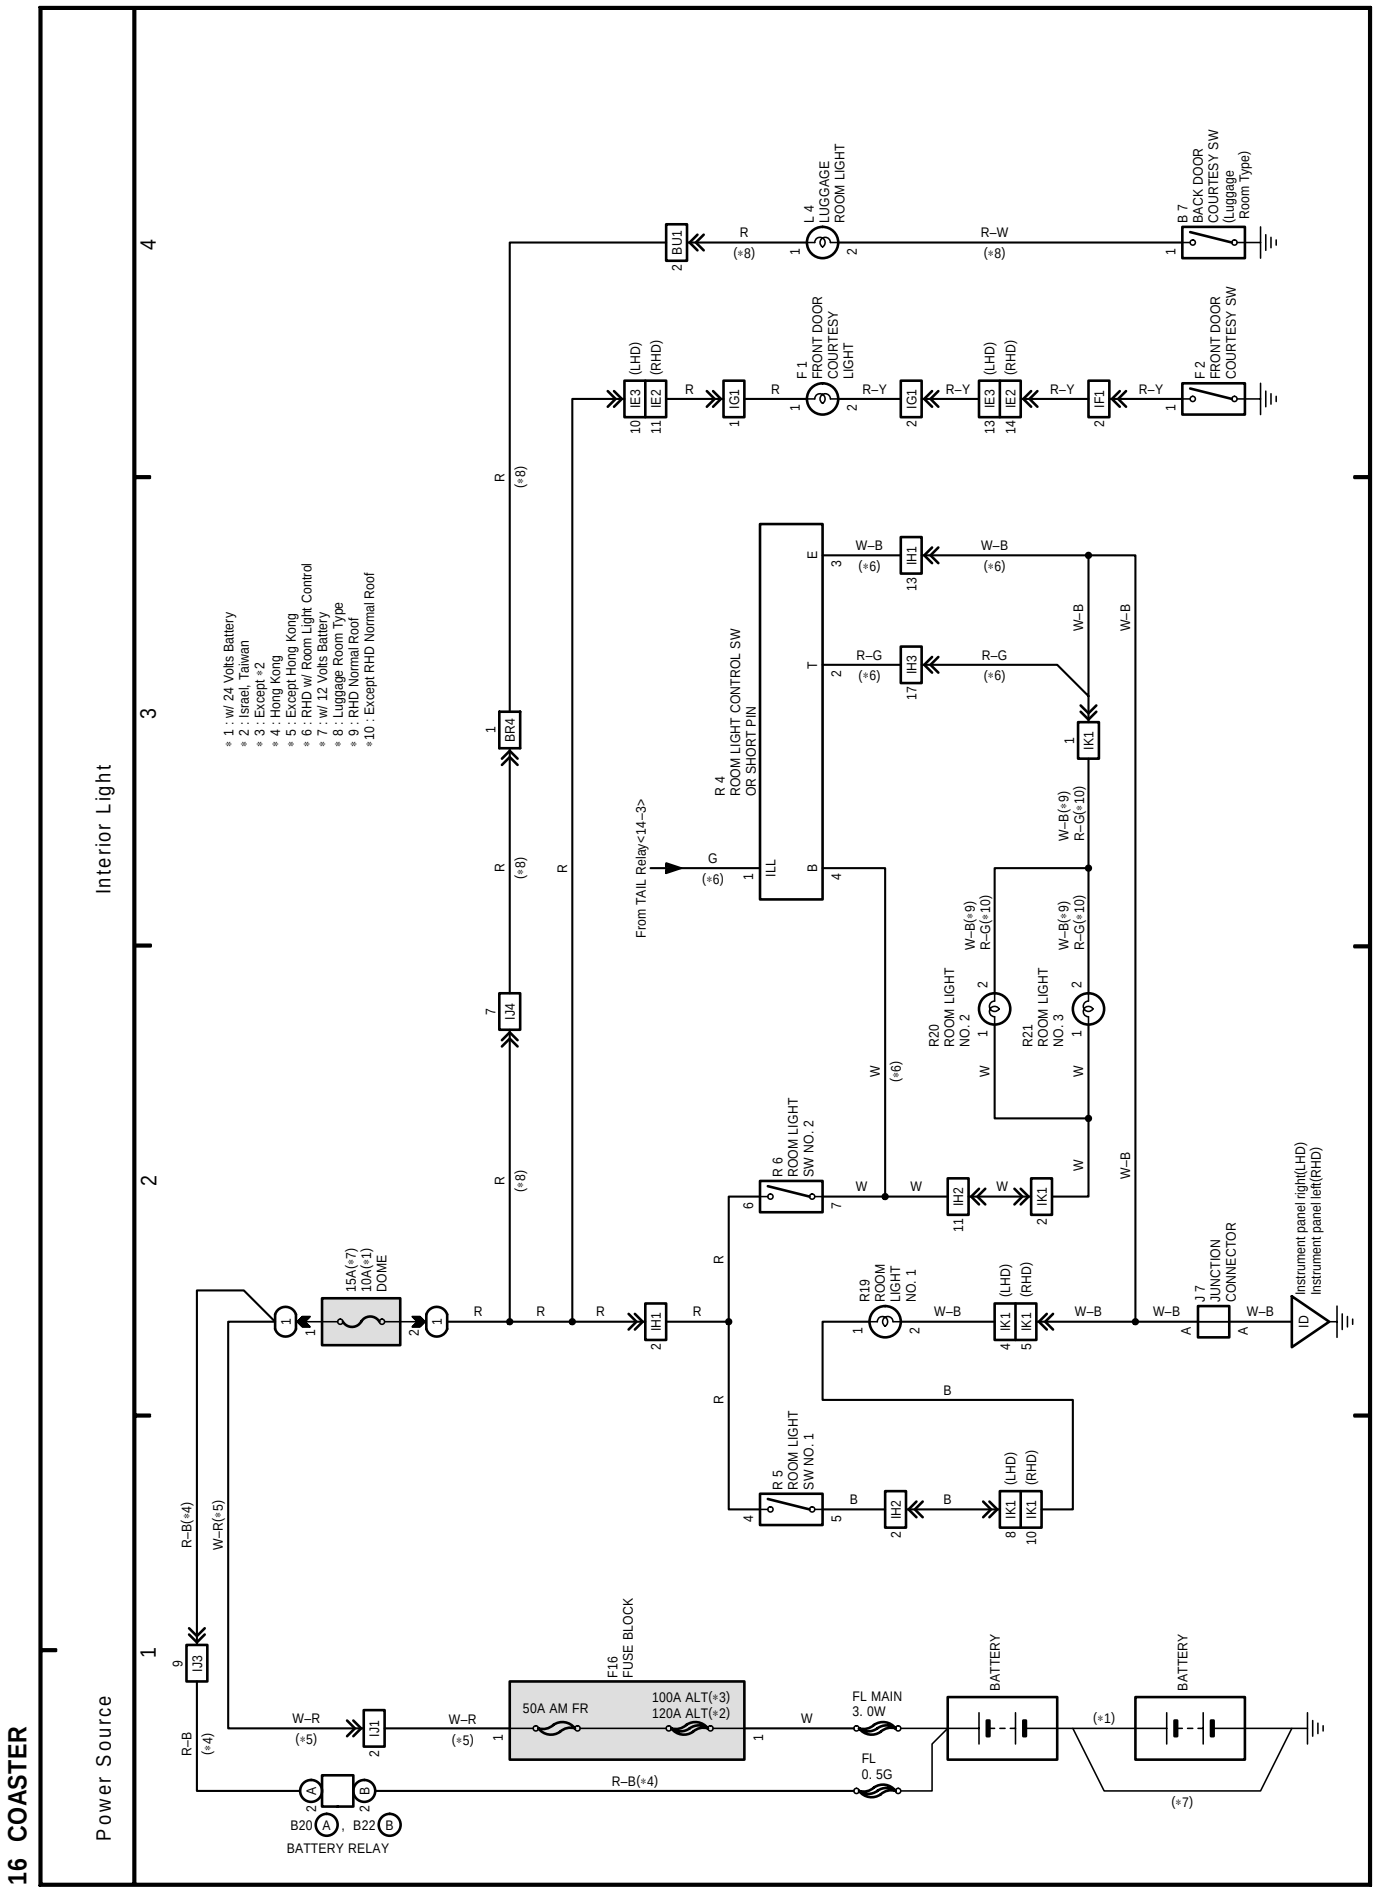

16 COASTER
Power Source
Interior Light
1
2
3
4
* 1 : w/ 24 Volts Battery
* 2 : Israel, Taiwan
* 3 : Except *2
* 4 : Hong Kong
* 5 : Except Hong Kong
* 6 : RHD w/ Room Light Control
* 7 : w/ 12 Volts Battery
* 8 : Luggage Room Type
* 9 : RHD Normal Roof
*10 : Except RHD Normal Roof
From TAIL Relay<14-3>
R 4 ROOM LIGHT CONTROL SW OR SHORT PIN
R 5 ROOM LIGHT SW NO. 1
R 6 ROOM LIGHT SW NO. 2
R19 ROOM LIGHT NO. 1
R20 ROOM LIGHT NO. 2
R21 ROOM LIGHT NO. 3
L 4 LUGGAGE ROOM LIGHT
F 1 FRONT DOOR COURTESY LIGHT
F 2 FRONT DOOR COURTESY SW
B 7 BACK DOOR COURTESY SW (Luggage Room Type)
15A(*7) 10A(*1) DOME
F16 FUSE BLOCK
50A AM FR
100A ALT(*3) 120A ALT(*2)
FL MAIN 3. 0W
FL 0. 5G
BATTERY
BATTERY
B20 A, B22 B
BATTERY RELAY
J 7 JUNCTION CONNECTOR
Instrument panel right(LHD) Instrument panel left(RHD)
(LHD)
(RHD)