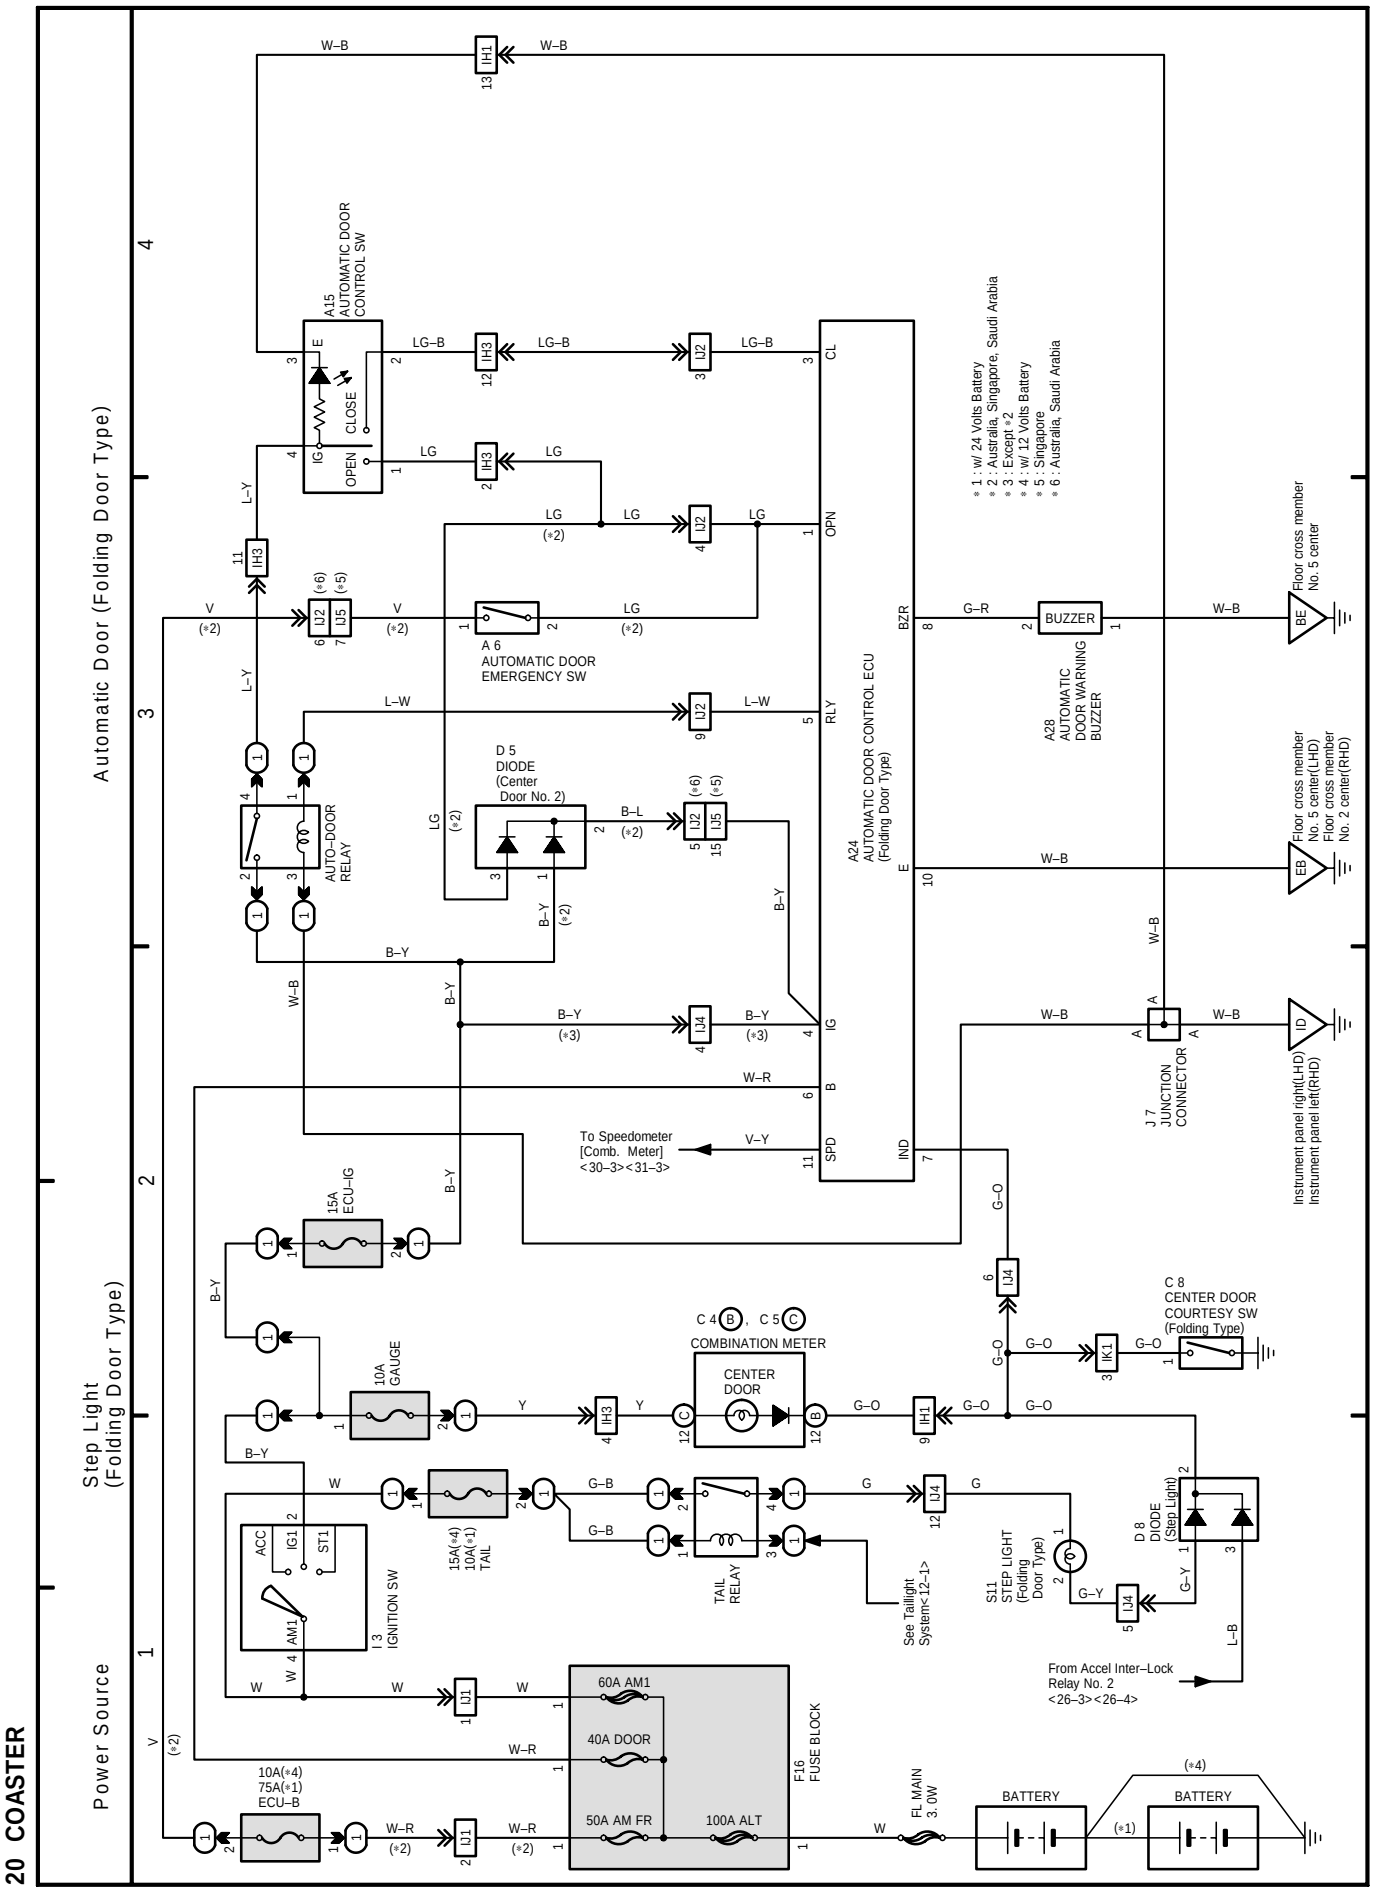

20 COACHER
Power Source
Step Light (Folding Door Type)
Automatic Door (Folding Door Type)
A15 AUTOMATIC DOOR CONTROL SW
A 6 AUTOMATIC DOOR EMERGENCY SW
AUTO–DOOR RELAY
D 5 DIODE (Center Door No. 2)
A24 AUTOMATIC DOOR CONTROL ECU (Folding Door Type)
A28 AUTOMATIC DOOR WARNING BUZZER
BUZZER
To Speedometer [Comb. Meter] <30–3><31–3>
15A ECU–IG
10A GAUGE
C 4 (B), C 5 (C) COMBINATION METER
CENTER DOOR
C 8 CENTER DOOR COURTESY SW (Folding Type)
I 3 IGNITION SW
15A(*4) 10A(*1) TAIL
TAIL RELAY
See Taillight System<12–1>
S11 STEP LIGHT (Folding Door Type)
D 8 DIODE (Step Light)
From Accel Inter–Lock Relay No. 2 <26–3><26–4>
10A(*4) 75A(*1) ECU–B
F16 FUSE BLOCK
60A AM1
40A DOOR
50A AM FR
100A ALT
FL MAIN 3.0W
BATTERY
J 7 JUNCTION CONNECTOR
Floor cross member No. 5 center
Floor cross member No. 5 center(LHD) Floor cross member No. 2 center(RHD)
Instrument panel right(LHD) Instrument panel left(RHD)
*1 : w/ 24 Volts Battery
*2 : Australia, Singapore, Saudi Arabia
*3 : Except *2
*4 : w/ 12 Volts Battery
*5 : Singapore
*6 : Australia, Saudi Arabia