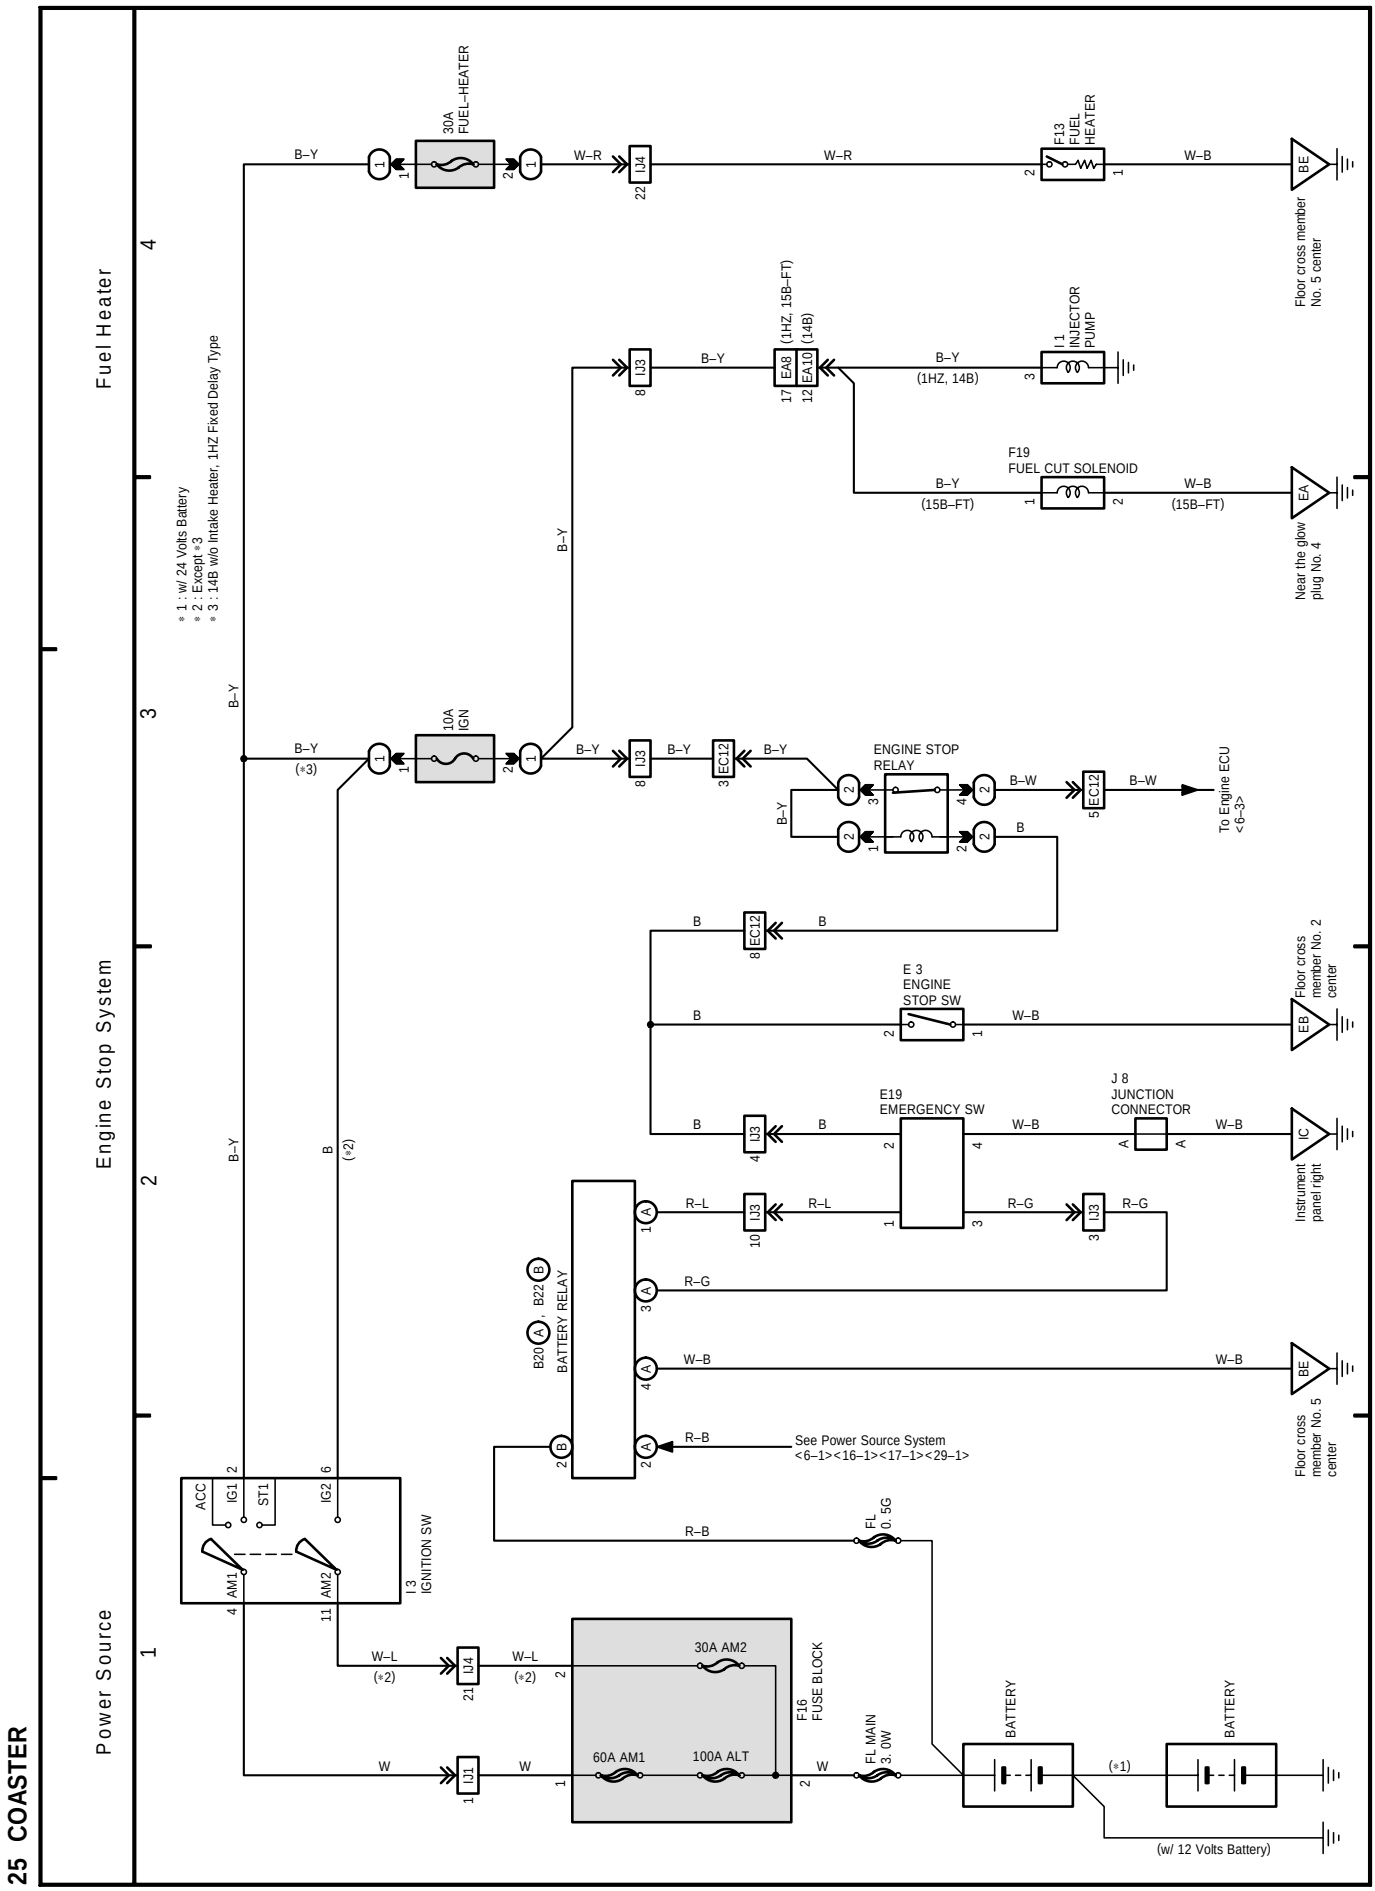

25 COASTER
Power Source
Engine Stop System
Fuel Heater
1
2
3
4
* 1 : w/ 24 Volts Battery
* 2 : Except *3
* 3 : 14B w/o Intake Heater, 1HZ Fixed Delay Type
30A FUEL–HEATER
F13 FUEL HEATER
Floor cross member No. 5 center
(1HZ, 15B–FT)
(14B)
I 1 INJECTOR PUMP
(1HZ, 14B)
F19 FUEL CUT SOLENOID
(15B–FT)
Near the glow plug No. 4
10A IGN
ENGINE STOP RELAY
To Engine ECU <6–3>
E 3 ENGINE STOP SW
Floor cross member No. 2 center
E19 EMERGENCY SW
J 8 JUNCTION CONNECTOR
Instrument panel right
B20 , B22 BATTERY RELAY
See Power Source System <6–1><16–1><17–1><29–1>
ACC
IG1
ST1
IG2
AM1
AM2
I 3 IGNITION SW
30A AM2
F16 FUSE BLOCK
60A AM1
100A ALT
FL MAIN 3. 0W
FL 0. 5G
BATTERY
(w/ 12 Volts Battery)