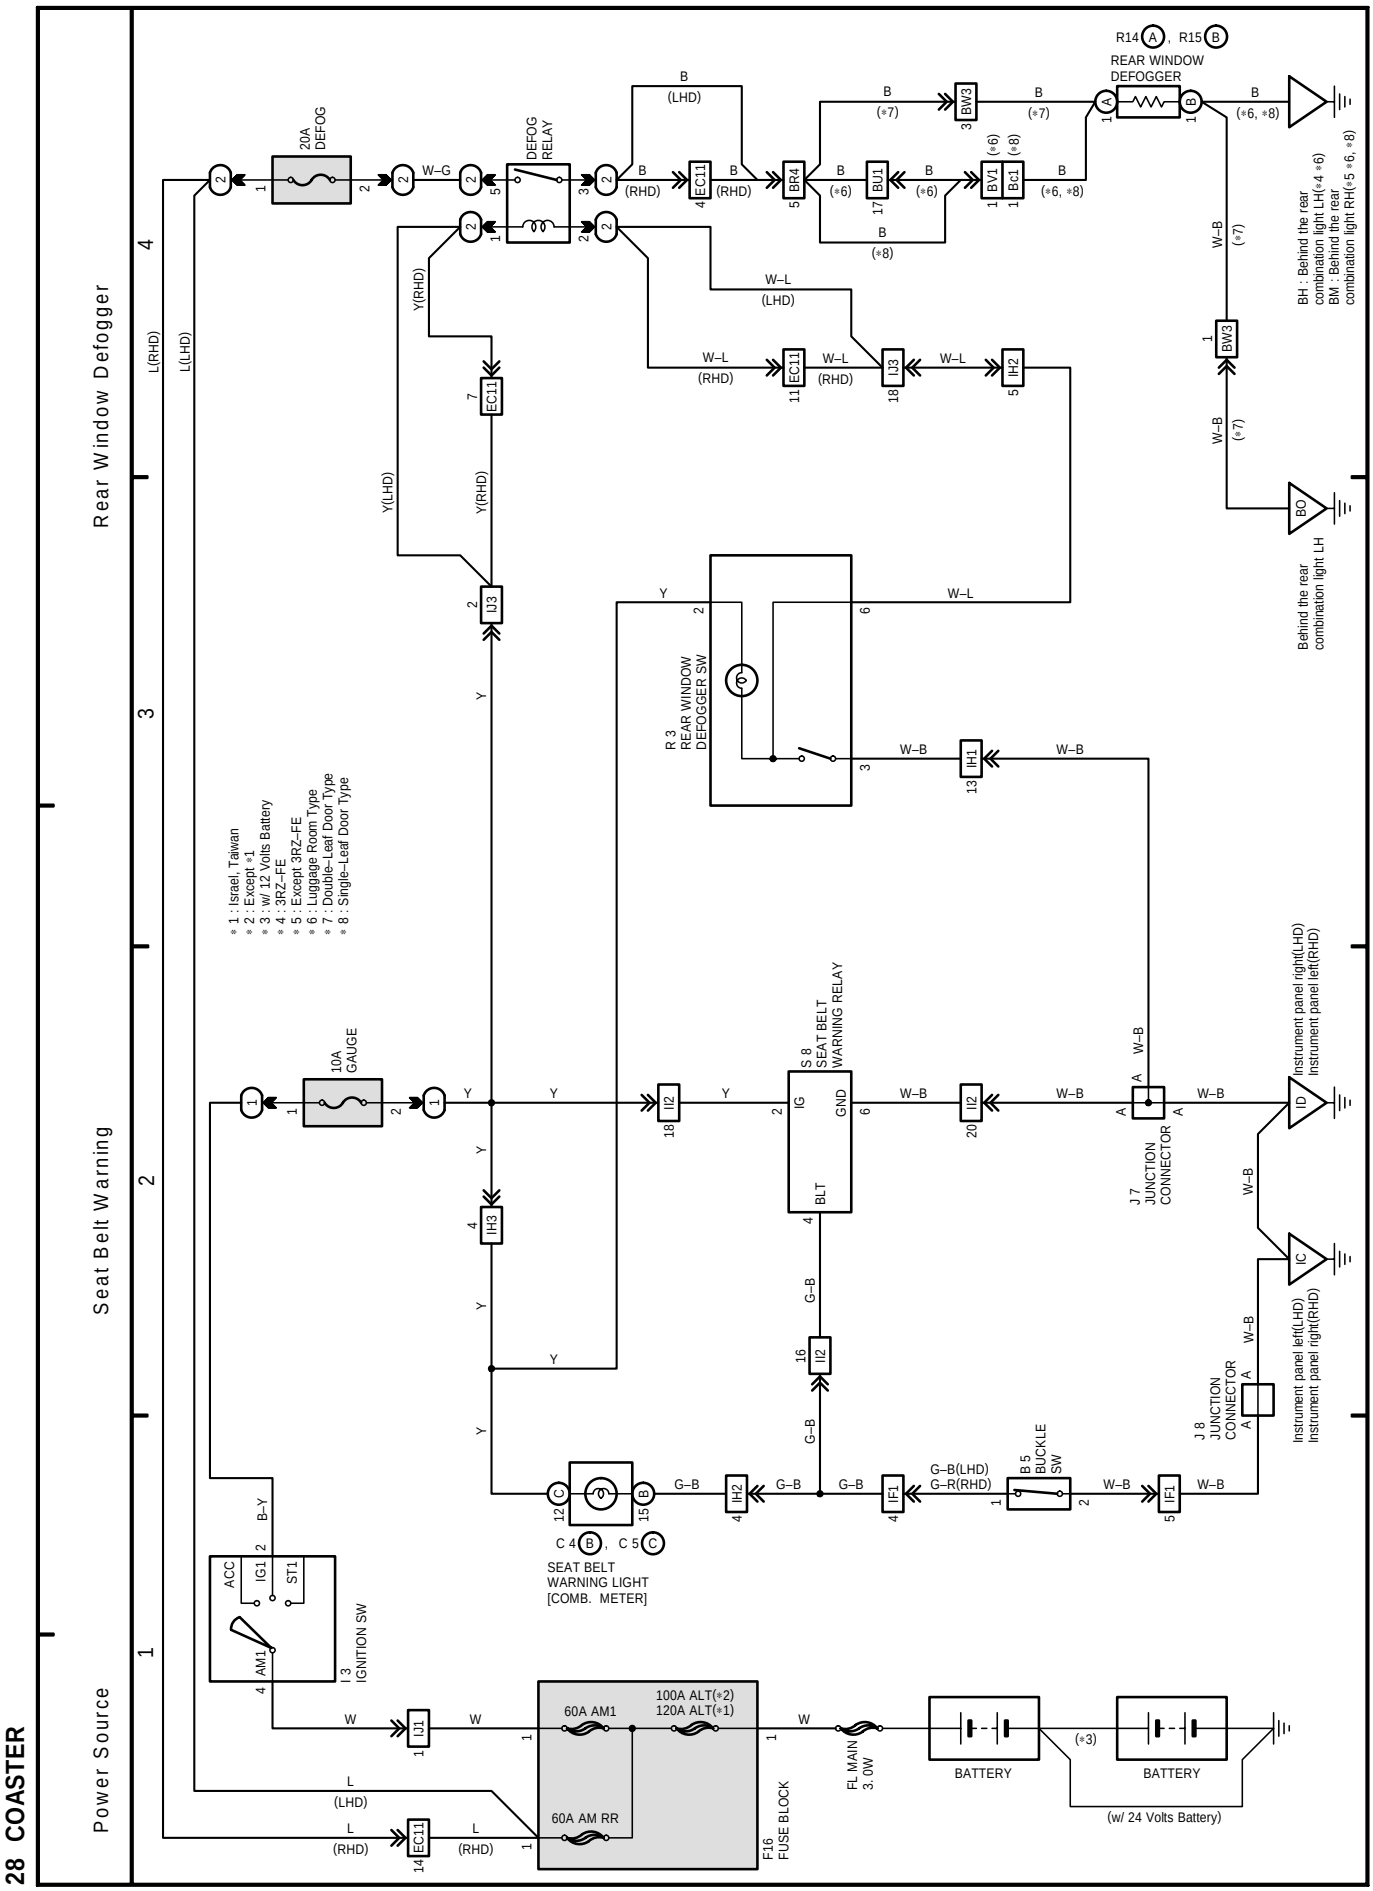

28 COASTER
Power Source
Seat Belt Warning
Rear Window Defogger
1
2
3
4
20A DEFOG
DEFOG RELAY
REAR WINDOW DEFOGGER
R14 A , R15 B
BH : Behind the rear combination light LH(*4 *6)
BM : Behind the rear combination light RH(*5 *6, *8)
Behind the rear combination light LH
BO
BW3
EC11
BR4
BU1
BV1
BC1
IJ3
IH2
IH1
R 3 REAR WINDOW DEFOGGER SW
* 1 : Israel, Taiwan
* 2 : Except *1
* 3 : w/ 12 Volts Battery
* 4 : 3RZ–FE
* 5 : Except 3RZ–FE
* 6 : Luggage Room Type
* 7 : Double–Leaf Door Type
* 8 : Single–Leaf Door Type
10A GAUGE
S 8 SEAT BELT WARNING RELAY
IG
GND
BLT
II2
IH3
J 7 JUNCTION CONNECTOR
ID
IC
J 8 JUNCTION CONNECTOR
Instrument panel right(LHD)
Instrument panel left(RHD)
Instrument panel left(LHD)
Instrument panel right(RHD)
B 5 BUCKLE SW
IF1
C 4 B , C 5 C
SEAT BELT WARNING LIGHT [COMB. METER]
I 3 IGNITION SW
ACC
IG1
ST1
AM1
IJ1
60A AM1
100A ALT(*2)
120A ALT(*1)
60A AM RR
F16 FUSE BLOCK
FL MAIN 3.0W
BATTERY
BATTERY
(w/ 24 Volts Battery)
L(RHD)
L(LHD)
Y(RHD)
Y(LHD)
W–L
W–B
W–G
G–B
G–B(LHD)
G–R(RHD)
B–Y
L
W