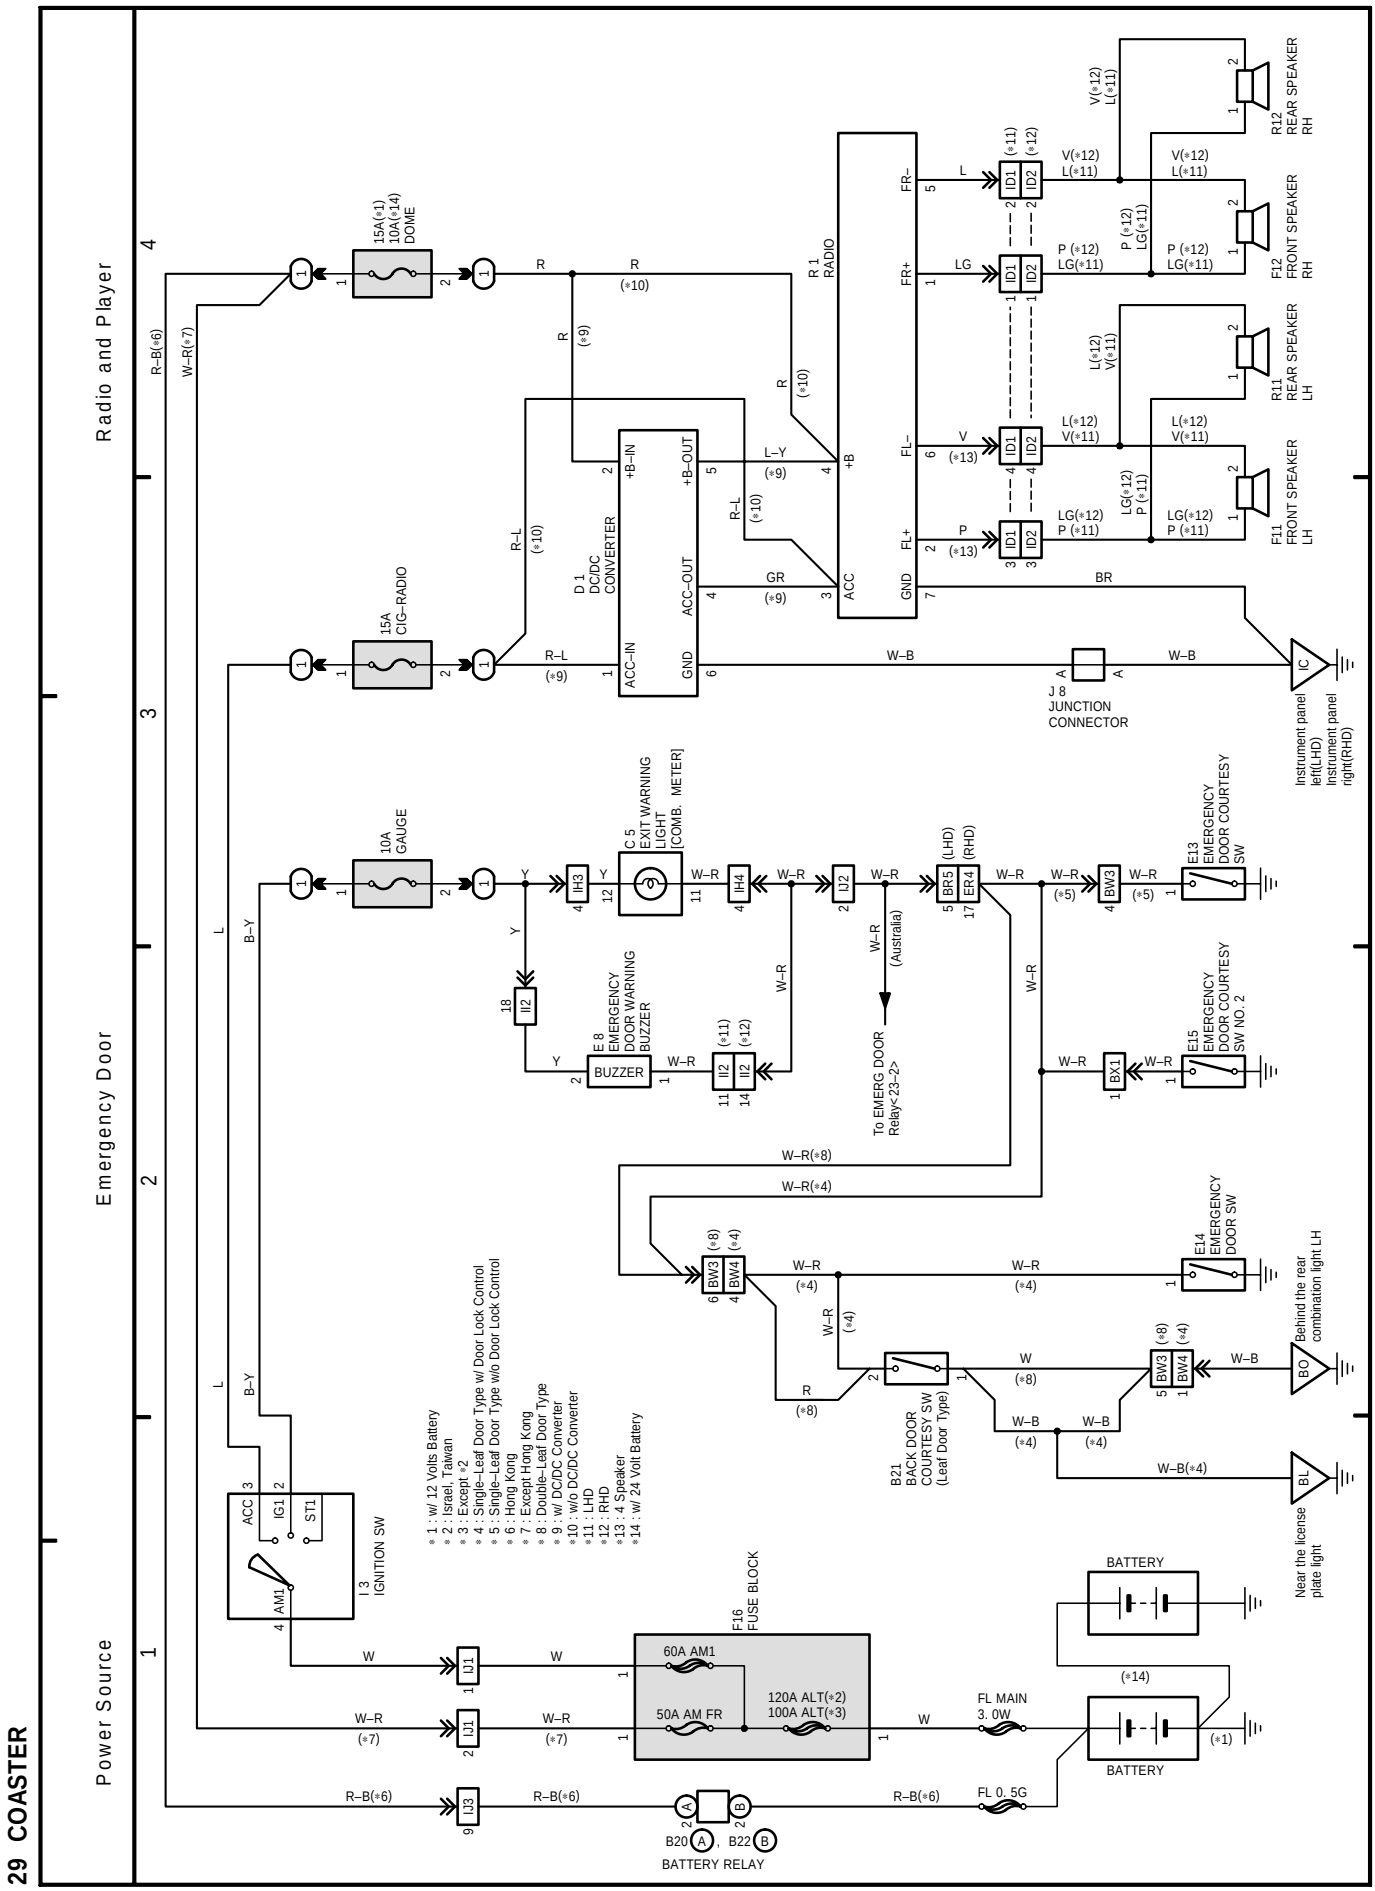

29 COASTER
Power Source
Emergency Door
Radio and Player
15A(*1) 10A(*14) DOME
15A CIG–RADIO
10A GAUGE
D 1 DC/DC CONVERTER
R 1 RADIO
C 5 EXIT WARNING LIGHT [COMB. METER]
E 8 EMERGENCY DOOR WARNING BUZZER
BUZZER
J 8 JUNCTION CONNECTOR
Instrument panel left(LHD) Instrument panel right(RHD)
E13 EMERGENCY DOOR COURTESY SW
E15 EMERGENCY DOOR COURTESY SW NO. 2
E14 EMERGENCY DOOR SW
To EMERG DOOR Relay<23–2>
B21 BACK DOOR COURTESY SW (Leaf Door Type)
Behind the rear combination light LH
Near the license plate light
R12 REAR SPEAKER RH
F12 FRONT SPEAKER RH
R11 REAR SPEAKER LH
F11 FRONT SPEAKER LH
I 3 IGNITION SW
F16 FUSE BLOCK
60A AM1
50A AM FR
120A ALT(*2) 100A ALT(*3)
FL MAIN 3. 0W
FL 0. 5G
BATTERY
B20 A , B22 B
BATTERY RELAY
* 1 : w/ 12 Volts Battery
* 2 : Israel, Taiwan
* 3 : Except *2
* 4 : Single–Leaf Door Type w/ Door Lock Control
* 5 : Single–Leaf Door Type w/o Door Lock Control
* 6 : Hong Kong
* 7 : Except Hong Kong
* 8 : Double–Leaf Door Type
* 9 : w/ DC/DC Converter
*10 : w/o DC/DC Converter
*11 : LHD
*12 : RHD
*13 : 4 Speaker
*14 : w/ 24 Volt Battery