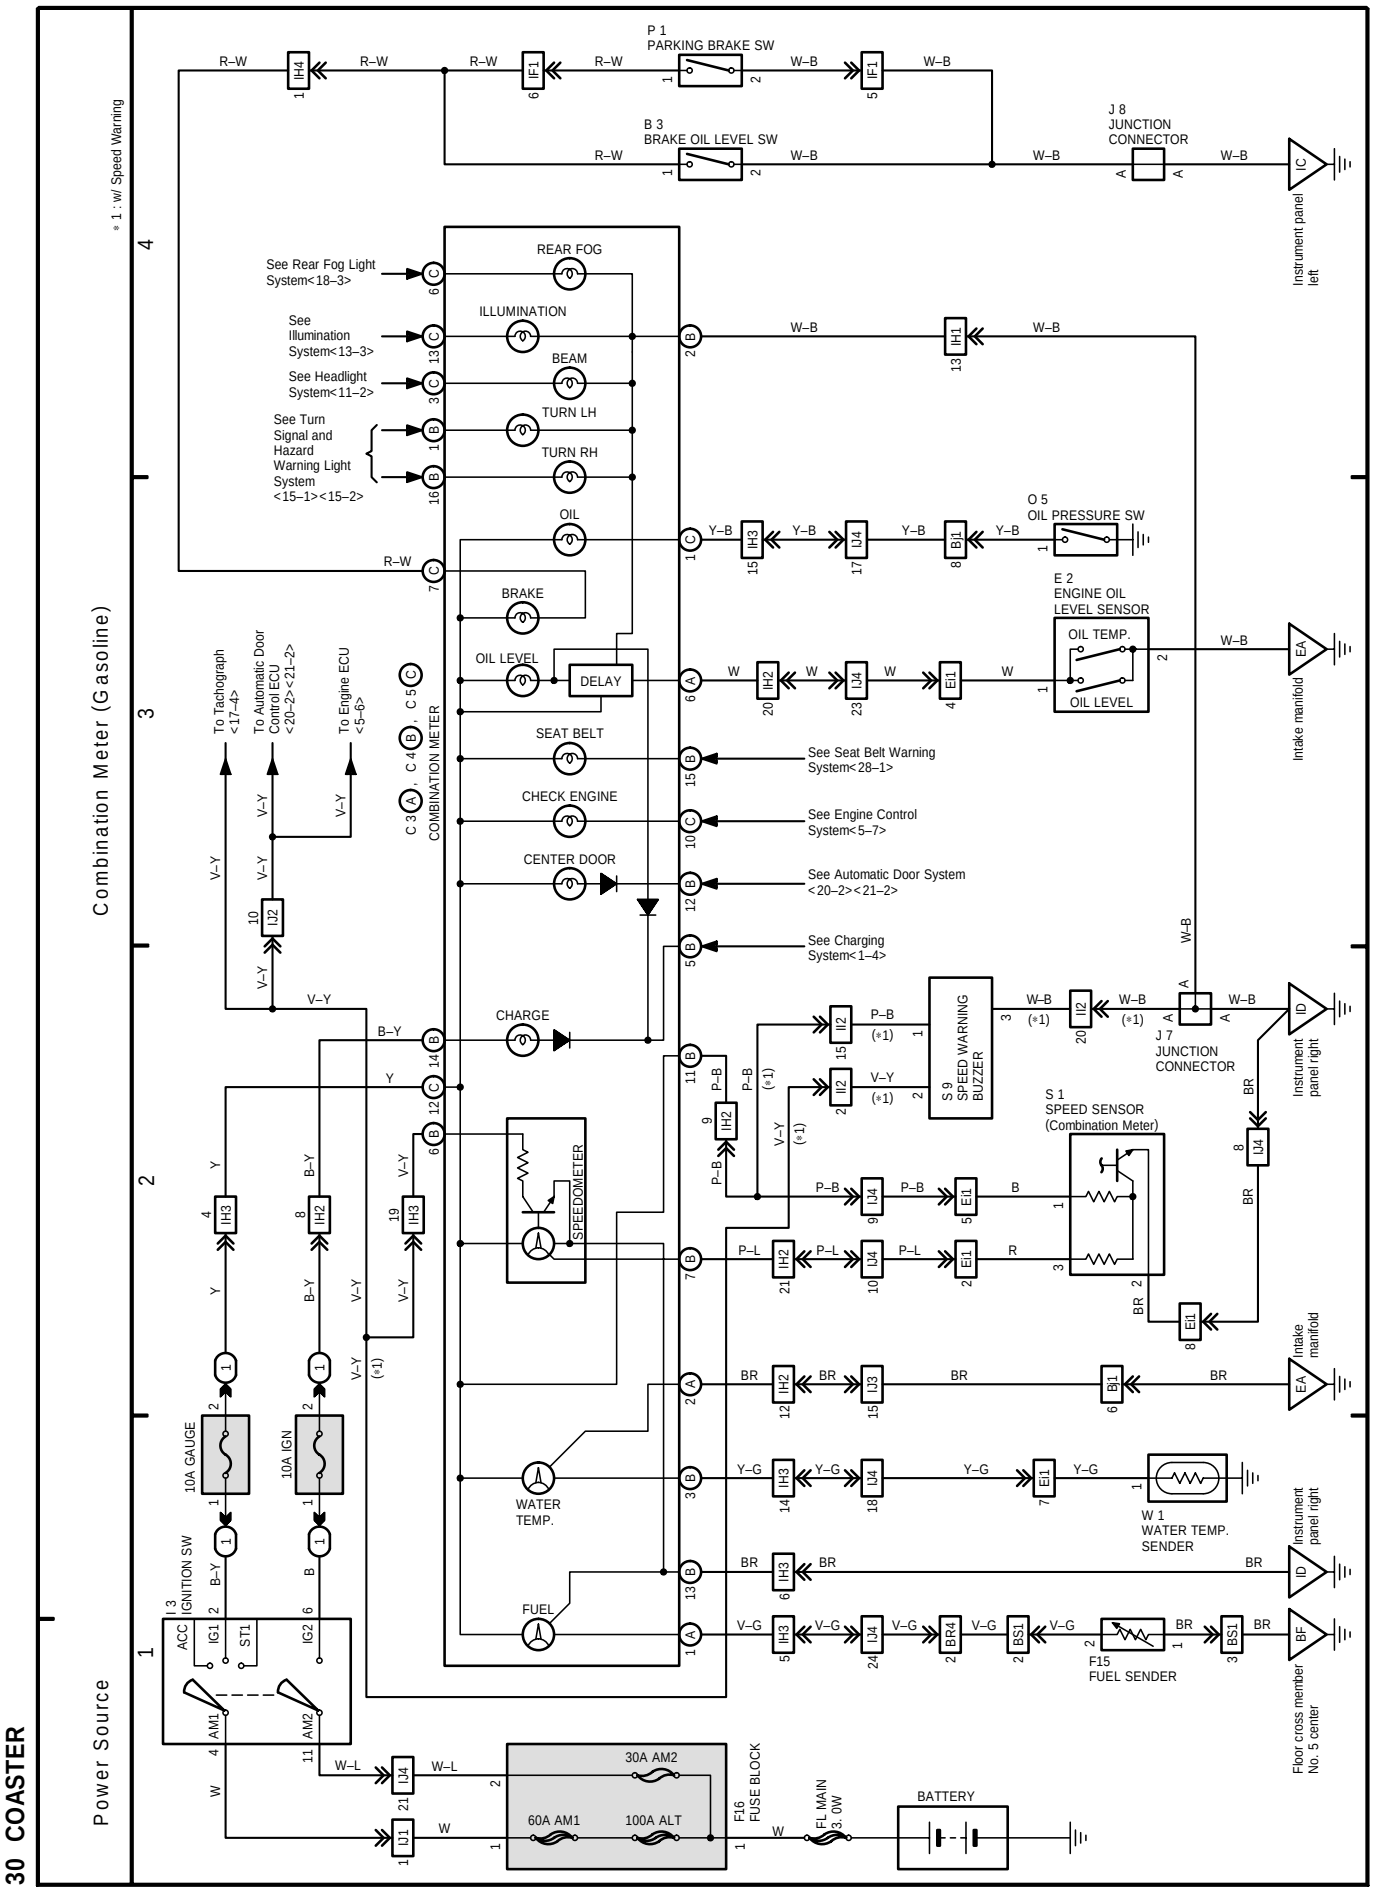

* 1 : w/ Speed Warning
Combination Meter (Gasoline)
Power Source
30 COASTER
P 1
PARKING BRAKE SW
B 3
BRAKE OIL LEVEL SW
J 8
JUNCTION CONNECTOR
Instrument panel left
REAR FOG
ILLUMINATION
BEAM
TURN LH
TURN RH
OIL
BRAKE
OIL LEVEL
DELAY
SEAT BELT
CHECK ENGINE
CENTER DOOR
CHARGE
SPEEDOMETER
See Rear Fog Light System<18–3>
See Illumination System<13–3>
See Headlight System<11–2>
See Turn Signal and Hazard Warning Light System <15–1><15–2>
To Tachograph <17–4>
To Automatic Door Control ECU <20–2><21–2>
To Engine ECU <5–6>
C 3, C 4, C 5
COMBINATION METER
See Seat Belt Warning System<28–1>
See Engine Control System<5–7>
See Automatic Door System <20–2><21–2>
See Charging System<1–4>
O 5
OIL PRESSURE SW
E 2
ENGINE OIL LEVEL SENSOR
OIL TEMP.
OIL LEVEL
Intake manifold
S 9
SPEED WARNING BUZZER
J 7
JUNCTION CONNECTOR
Instrument panel right
S 1
SPEED SENSOR (Combination Meter)
Intake manifold
WATER TEMP.
W 1
WATER TEMP. SENDER
FUEL
F15
FUEL SENDER
Floor cross member No. 5 center
I 3
IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
10A GAUGE
10A IGN
F16
FUSE BLOCK
30A AM2
60A AM1
100A ALT
FL MAIN
3. 0W
BATTERY