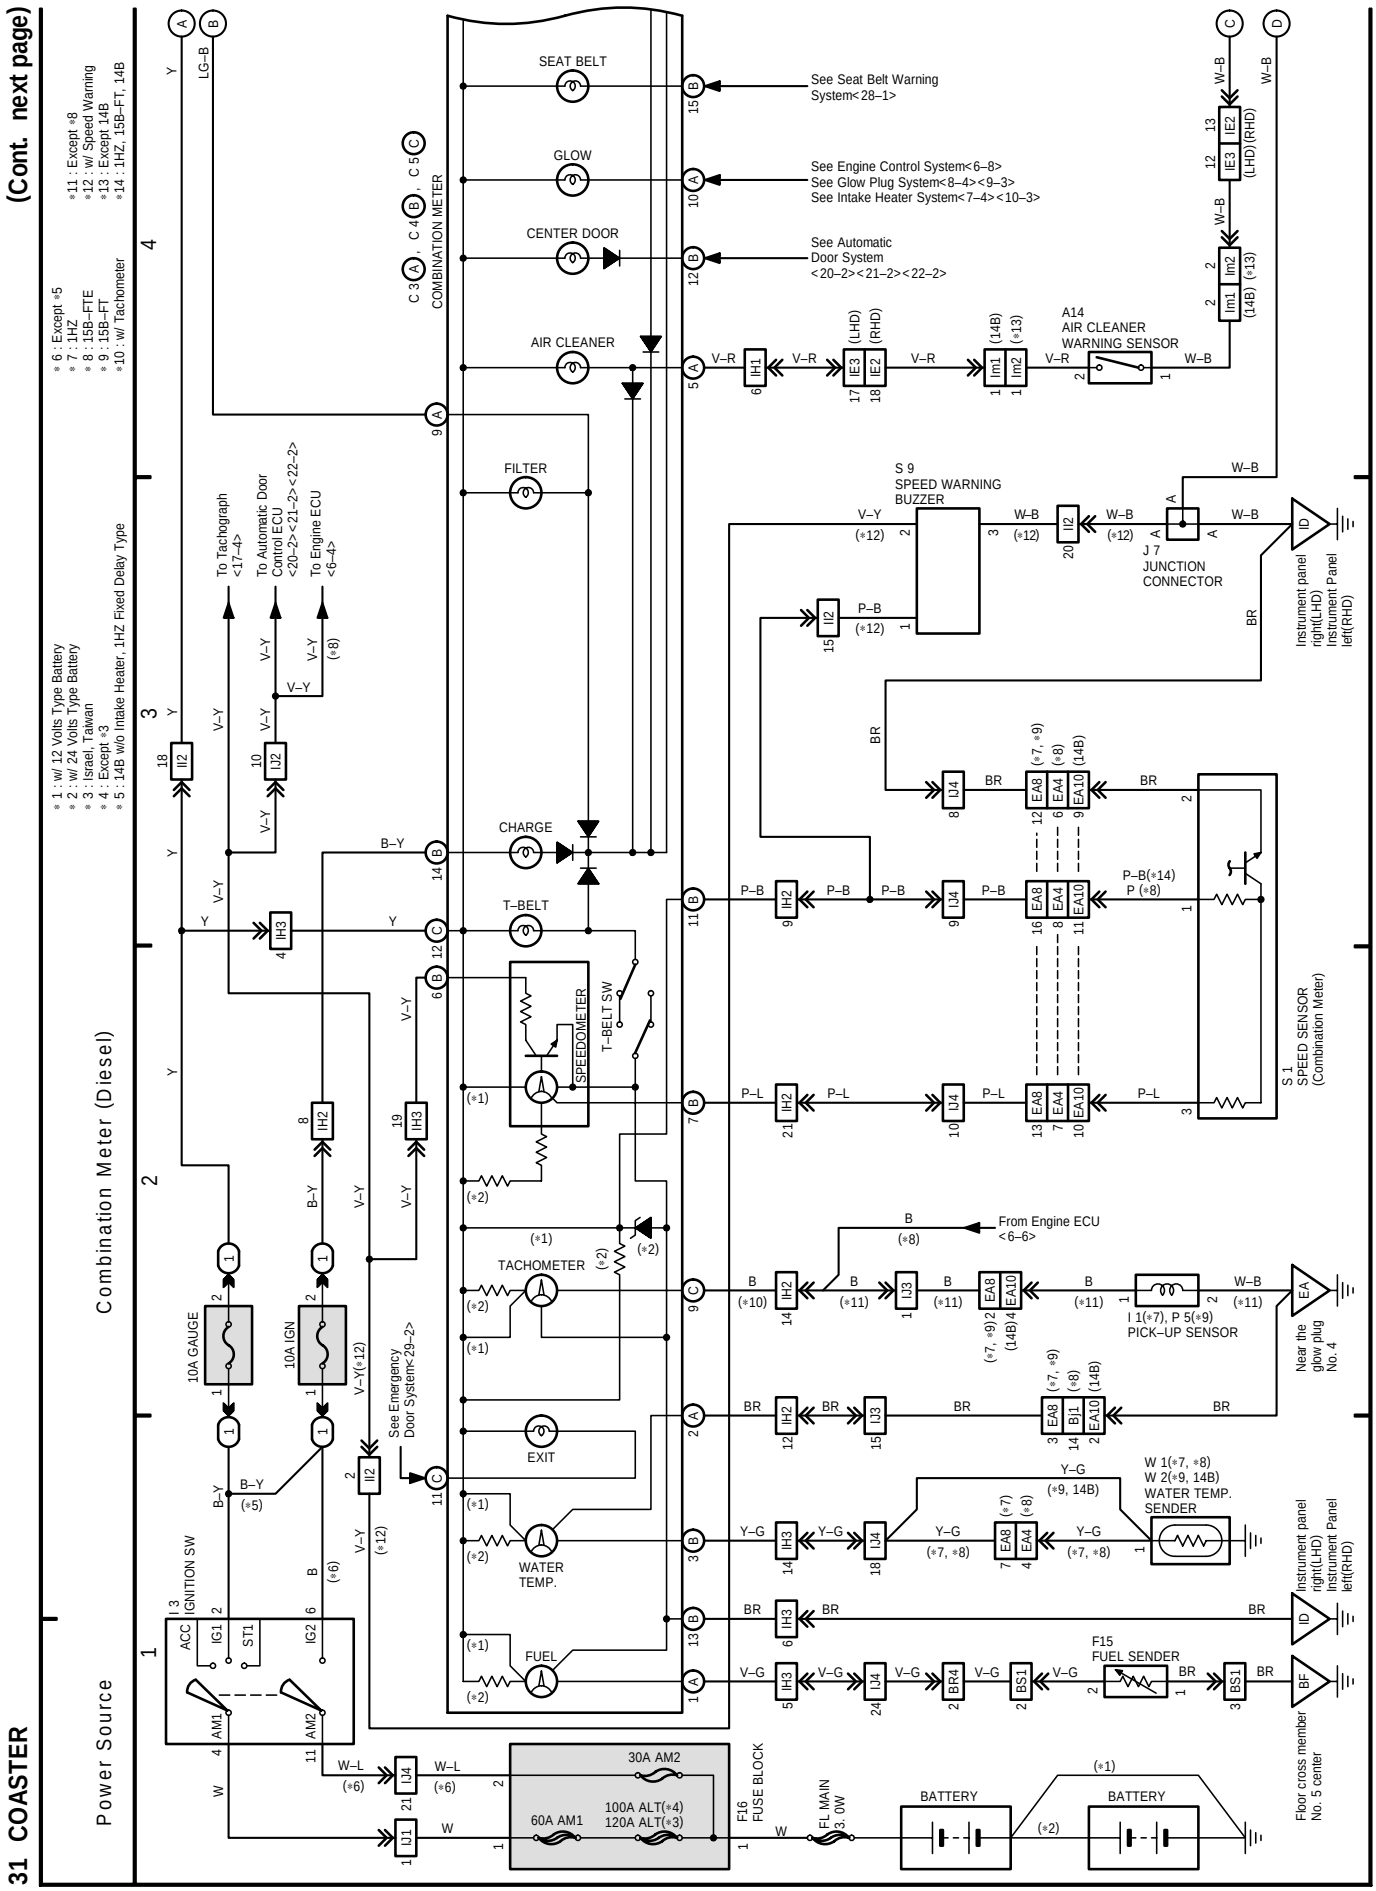
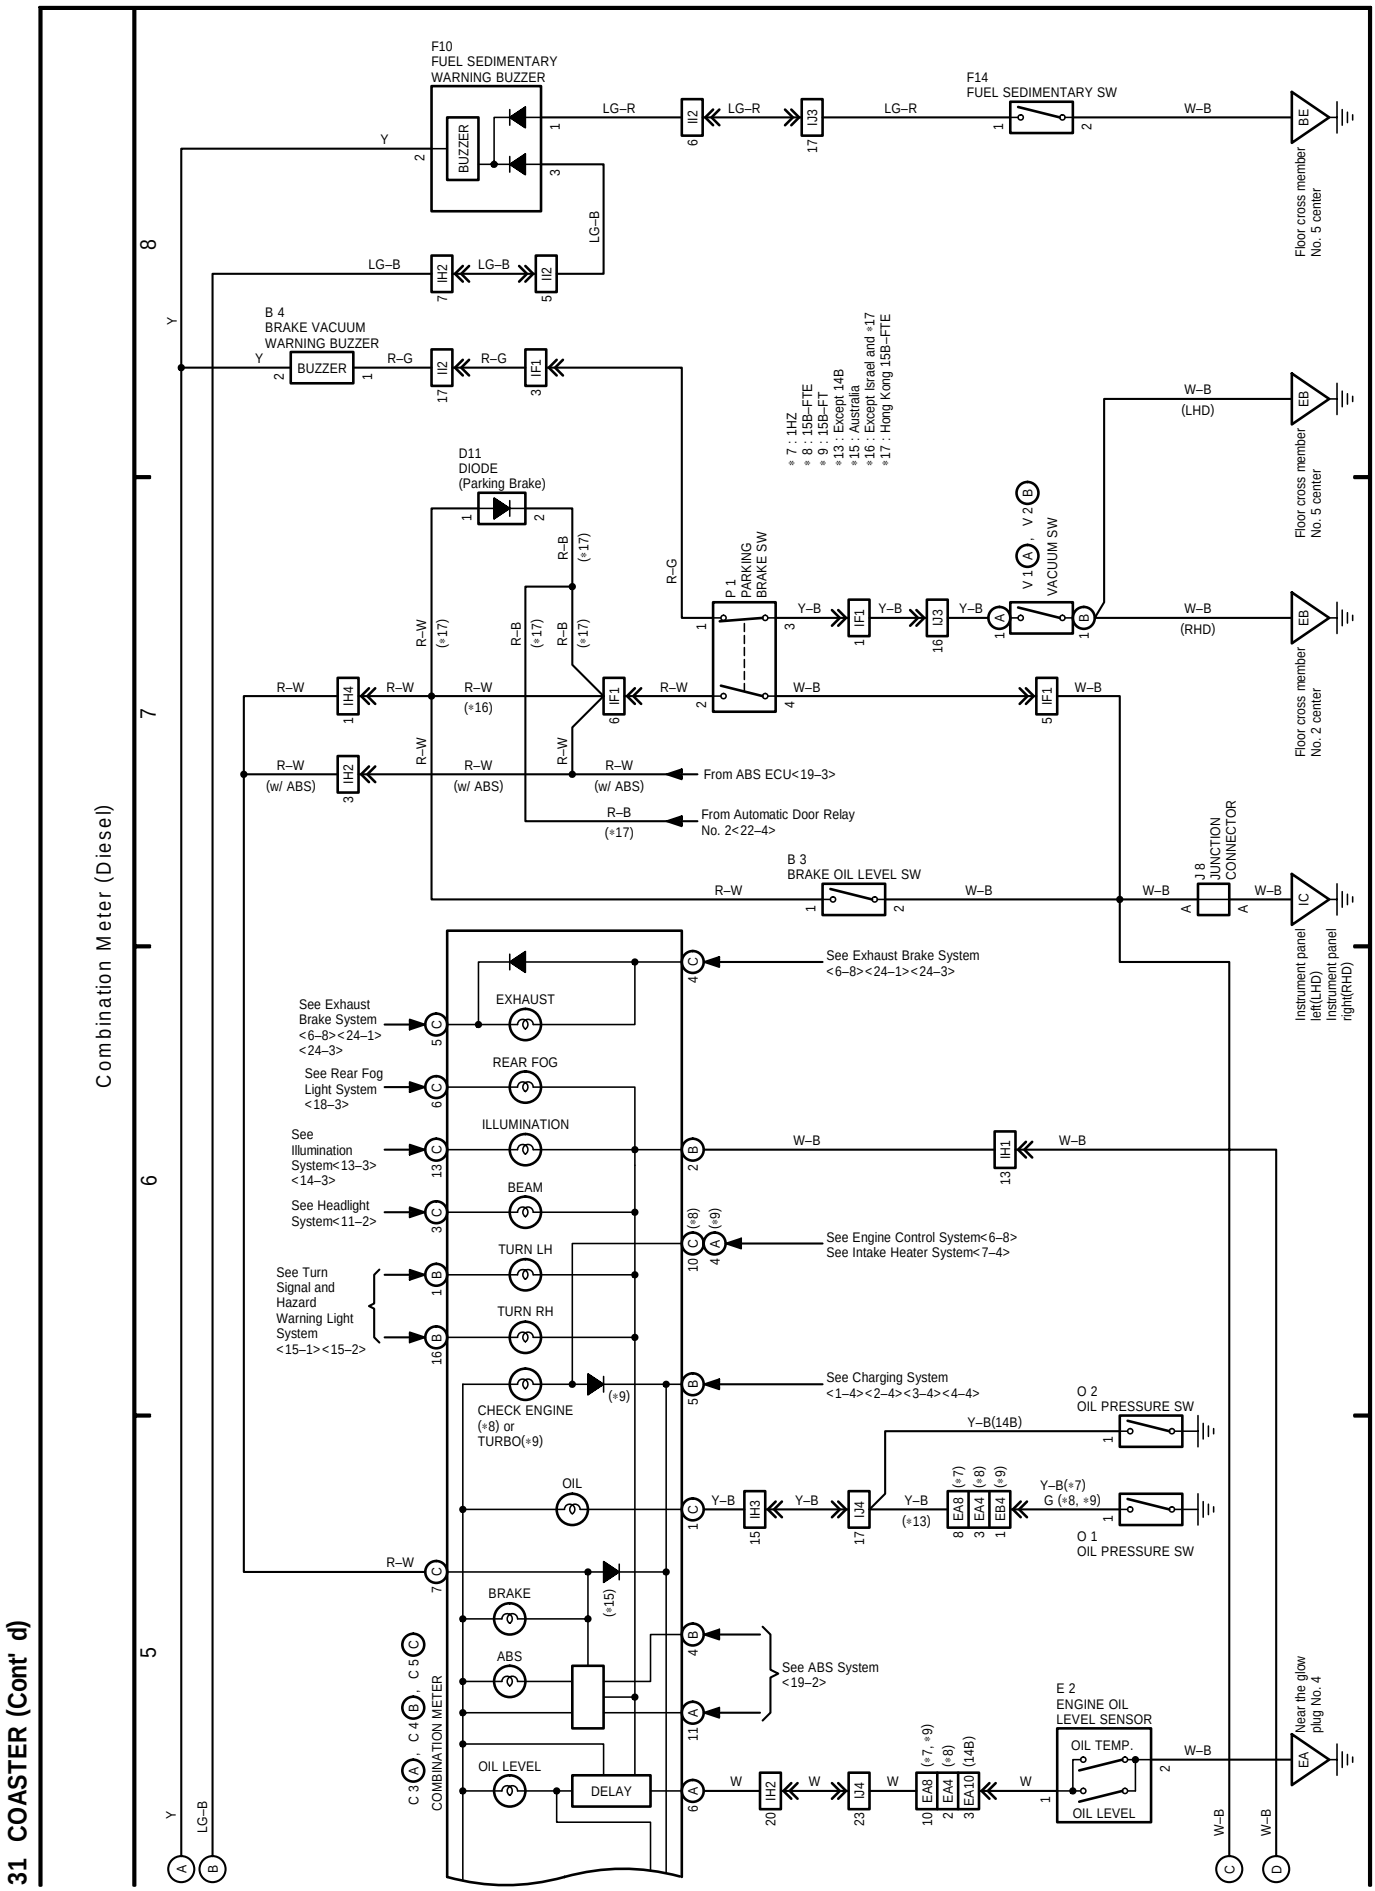

(Cont. next page)
31 COASTER
Power Source
Combination Meter (Diesel)
SEAT BELT
GLOW
CENTER DOOR
AIR CLEANER
FILTER
CHARGE
T–BELT
SPEEDOMETER
T–BELT SW
TACHOMETER
EXIT
WATER TEMP.
FUEL
COMBINATION METER
See Seat Belt Warning System<28–1>
See Engine Control System<6–8>
See Glow Plug System<8–4><9–3>
See Intake Heater System<7–4><10–3>
See Automatic Door System <20–2><21–2><22–2>
A14 AIR CLEANER WARNING SENSOR
S 9 SPEED WARNING BUZZER
J 7 JUNCTION CONNECTOR
Instrument panel right(LHD) Instrument Panel left(RHD)
To Tachograph <17–4>
To Automatic Door Control ECU <20–2><21–2><22–2>
To Engine ECU <6–4>
See Emergency Door System<29–2>
From Engine ECU <6–6>
I 1(*7), P 5(*9) PICK–UP SENSOR
Near the glow plug No. 4
W 1(*7, *8) W 2(*9, 14B) WATER TEMP. SENDER
F15 FUEL SENDER
S 1 SPEED SENSOR (Combination Meter)
10A GAUGE
10A IGN
IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
30A AM2
60A AM1
100A ALT(*4)
120A ALT(*3)
F16 FUSE BLOCK
FL MAIN 3. 0W
BATTERY
Floor cross member No. 5 center
* 1 : w/ 12 Volts Type Battery
* 2 : w/ 24 Volts Type Battery
* 3 : Israel, Taiwan
* 4 : Except *3
* 5 : 14B w/o Intake Heater, 1HZ Fixed Delay Type
* 6 : Except *5
* 7 : 1HZ
* 8 : 15B–FTE
* 9 : 15B–FT
*10 : w/ Tachometer
*11 : Except *8
*12 : w/ Speed Warning
*13 : Except 14B
*14 : 1HZ, 15B–FT, 14B


31 COASTER (Cont' d)
Combination Meter (Diesel)
F10
FUEL SEDIMENTARY
WARNING BUZZER
BUZZER
F14
FUEL SEDIMENTARY SW
Floor cross member
No. 5 center
B 4
BRAKE VACUUM
WARNING BUZZER
D11
DIODE
(Parking Brake)
P 1
PARKING
BRAKE SW
V 1 (A), V 2 (B)
VACUUM SW
(LHD)
(RHD)
Floor cross member
No. 2 center
From ABS ECU<19–3>
From Automatic Door Relay
No. 2<22–4>
B 3
BRAKE OIL LEVEL SW
J 8
JUNCTION
CONNECTOR
Instrument panel
left(LHD)
Instrument panel
right(RHD)
See Exhaust Brake System
<6–8><24–1><24–3>
See Exhaust
Brake System
<6–8><24–1>
<24–3>
See Rear Fog
Light System
<18–3>
See
Illumination
System<13–3>
<14–3>
See Headlight
System<11–2>
See Turn
Signal and
Hazard
Warning Light
System
<15–1><15–2>
EXHAUST
REAR FOG
ILLUMINATION
BEAM
TURN LH
TURN RH
CHECK ENGINE
(*8) or
TURBO(*9)
OIL
BRAKE
ABS
OIL LEVEL
DELAY
COMBINATION METER
See Engine Control System<6–8>
See Intake Heater System<7–4>
See Charging System
<1–4><2–4><3–4><4–4>
See ABS System
<19–2>
O 2
OIL PRESSURE SW
O 1
OIL PRESSURE SW
E 2
ENGINE OIL
LEVEL SENSOR
OIL TEMP.
OIL LEVEL
Near the glow
plug No. 4
*7 : 1HZ
*8 : 15B–FTE
*9 : 15B–FT
*13 : Except 14B
*15 : Australia
*16 : Except Israel and *17
*17 : Hong Kong 15B–FTE