
Position of Parts in Engine Compartment

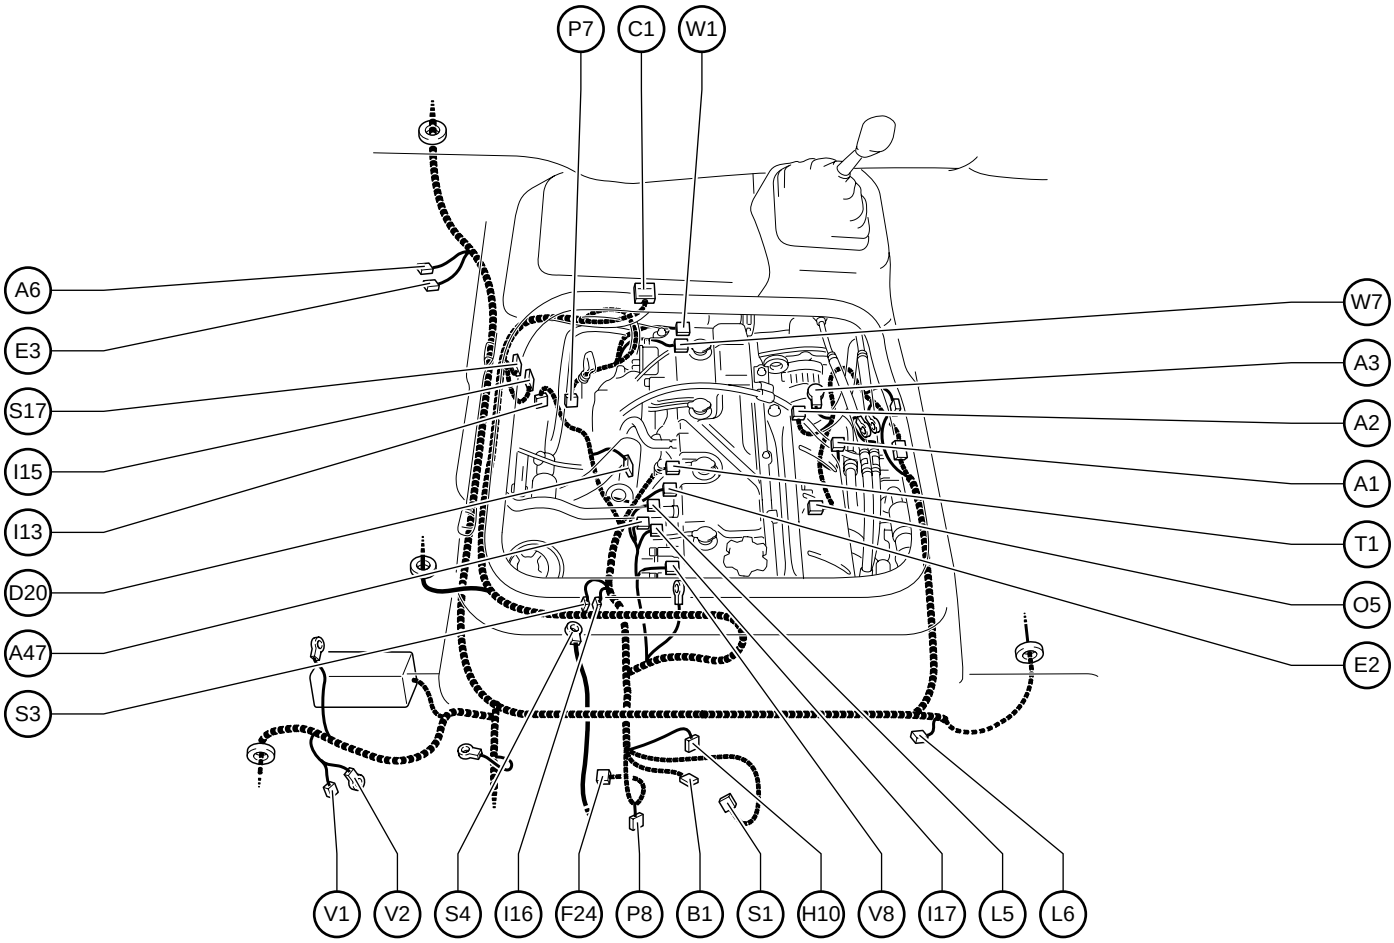

A 1 A/C Magnetic Clutch
A 2 Alternator
A 3 Alternator
A 6 Automatic Door Emergency SW
A47 Air Fuel Ratio Control Motor

B 1 Back–Up Light SW

C 1 Check Connector

D20 Distributor

E 2 Engine Oil Level Sensor
E 3 Engine Stop SW

F24 Fuel Cut Solenoid

H10 Heated Oxygen Sensor

I 13 Intake Air Temp. Sensor
I 15 Igniter
I 16 Ignition Coil
I 17 ISC Control Motor

L 5 LPG Injector
L 6 LPG Solenoid Valve

O 5 Oil Pressure SW

P 7 Power Steering Oil Pressure SW
P 8 Pre Heater

S 1 Speed Sensor (Combination Meter)
S 3 Starter
S 4 Starter
S17 Solenoid Resistor

T 1 Throttle Position Sensor

V 1 Vacuum SW
V 2 Vacuum SW
V 8 Vacuum Sensor

W 1 Water Temp. Sender
W 7 Water Temp. Sensor (LPG)