
Position of Parts in Instrument Panel

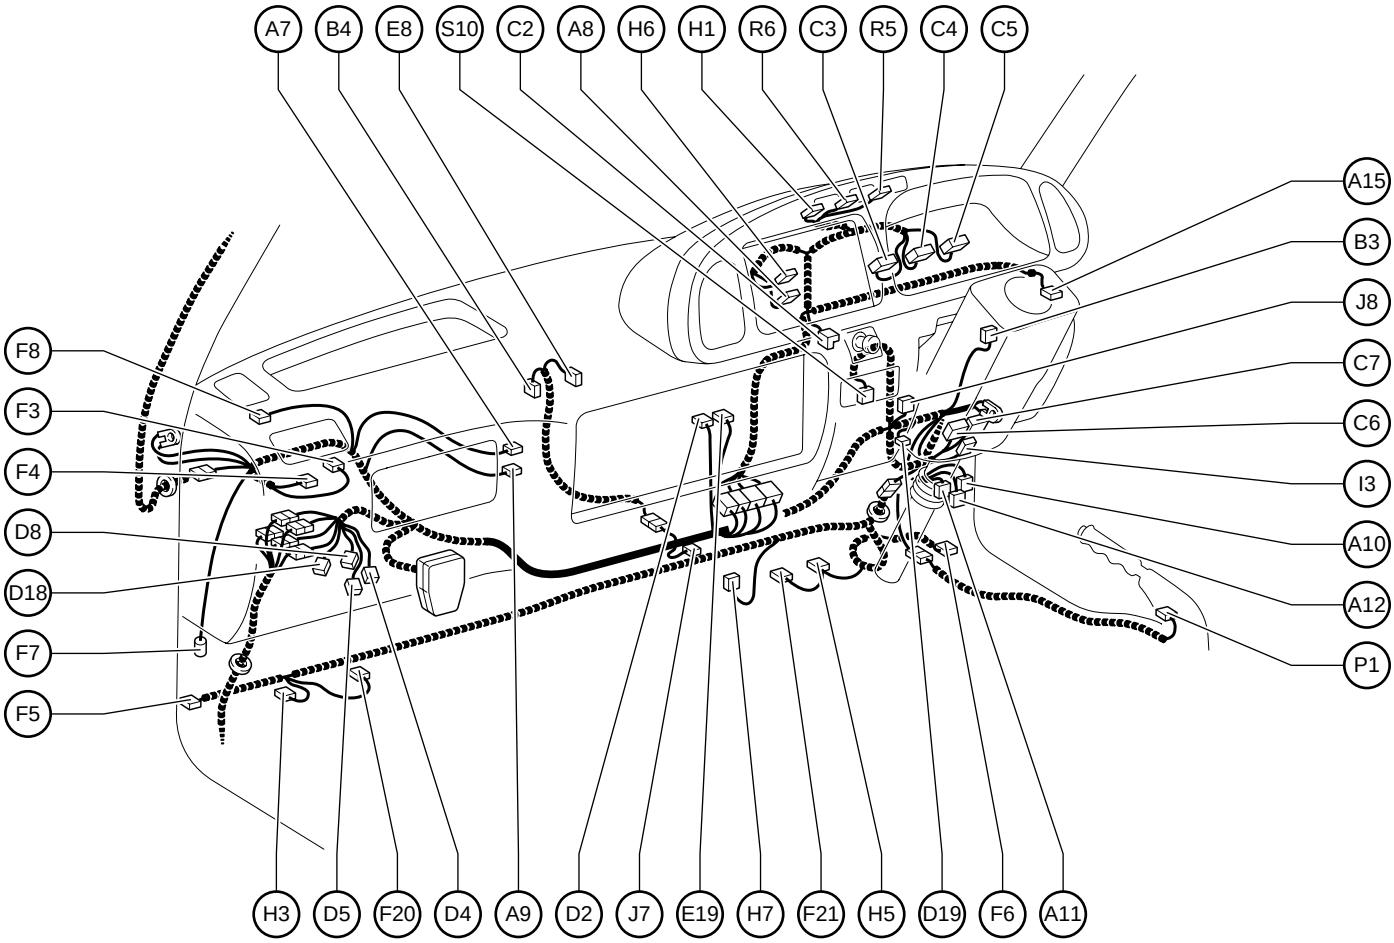

A 7 A/C Amplifier
A 8 A/C Control SW
A 9 A/C Magnetic Clutch Relay
A10 Accel Inter–Lock
A11 Accel Inter–Lock Relay No.1
A12 Accel Inter–Lock Relay No.2
A15 Automatic Door Control SW

B 3 Brake Oil Level SW
B 4 Brake Vacuum Warning Buzzer

C 2 Cigarette Lighter
C 3 Combination Meter
C 4 Combination Meter
C 5 Combination Meter
C 6 Combination SW
C 7 Combination SW

D 2 Destination Display SW
D 4 Diode (Center Door No.1)
D 5 Diode (Center Door No.2)
D 8 Diode (Step Light)
D18 Diode (Surge)
D19 DLC3

E 8 Emergency Door Warning Buzzer
E19 Emergency SW

F 3 Front Heater
F 4 Front Heater Blower Resistor
F 5 Front Turn Signal Light and Clearance Light LH
F 6 Front Turn Signal Light and Clearance Light RH
F 7 Front Washer Motor
F 8 Front Wiper Motor
F20 Front Fog Light LH
F21 Front Fog Light RH

H 1 Hazard SW
H 3 Headlight LH (Hi–Lo)
H 5 Headlight RH (Hi–Lo)
H 6 Heater Blower SW
H 7 Horn

I 3 Ignition SW

J 7 Junction Connector
J 8 Junction Connector

P 1 Parking Brake SW

R 5 Room Light SW No.1
R 6 Room Light SW No.2

S10 Stop Light SW