
Position of Parts in Body

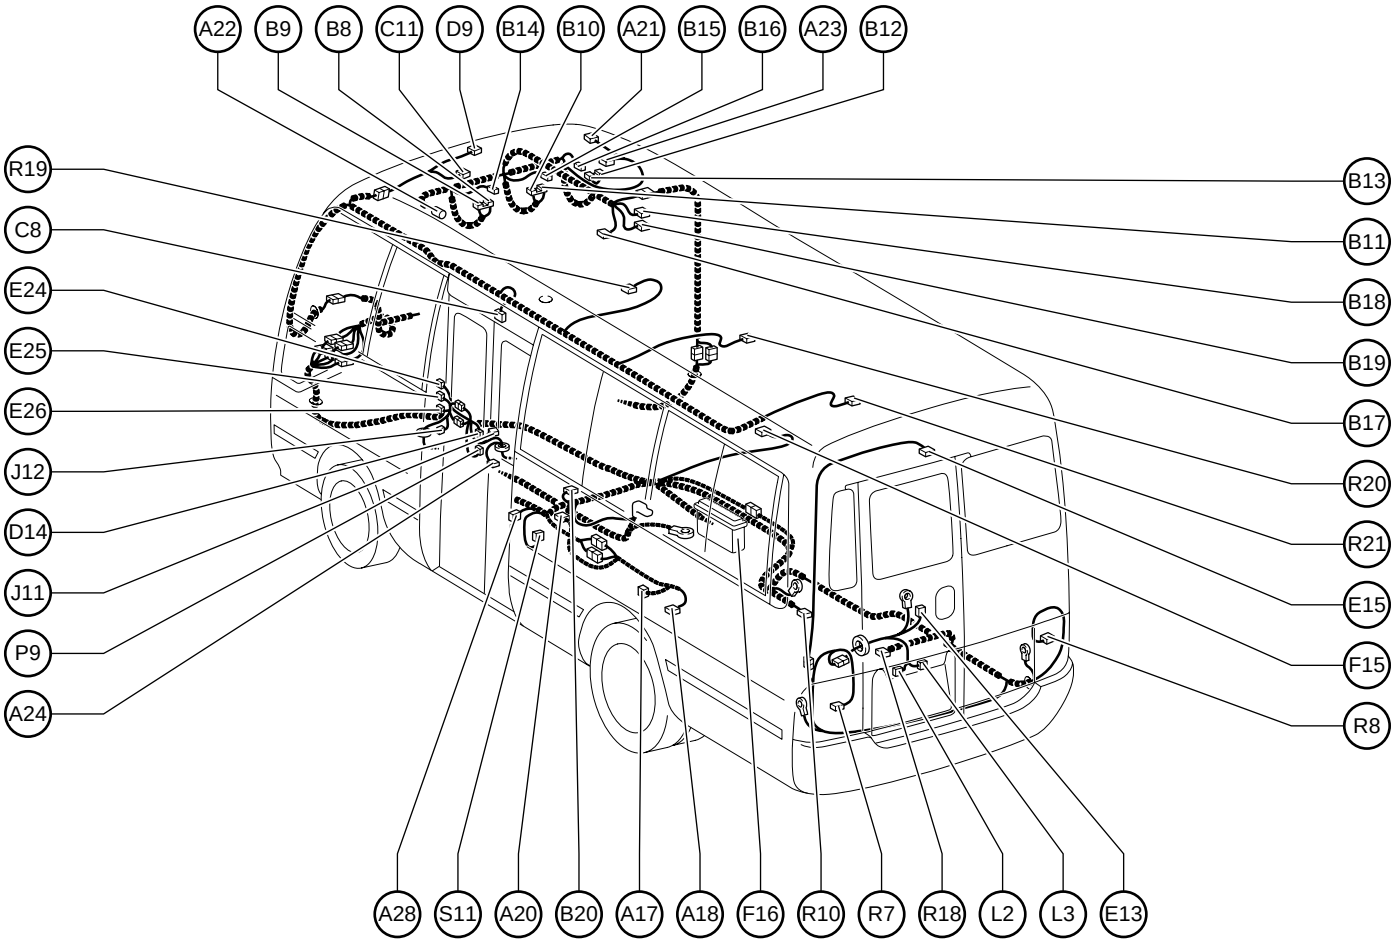

A17 A/C Condenser Fan Motor No.1
A18 A/C Condenser Fan Motor No.2
A20 A/C Dual Pressure SW
A21 A/C Thermistor
A22 Air Inlet Control Servo Motor
A23 Air Vent Mode Control Servo Motor
A24 Automatic Door Control ECU (Folding Door Type)
A28 Automatic Door Warning Buzzer

B 8 Blower Mode Relay No.1
B 9 Blower Mode Relay No.1
B10 Blower Mode Relay No.2
B11 Blower Mode Relay No.2
B12 Blower Mode Relay No.3
B13 Blower Mode Relay No.3
B14 Blower Motor No.1
B15 Blower Motor No.2
B16 Blower Motor No.3
B17 Blower Resistor No.1
B18 Blower Resistor No.2
B19 Blower Resistor No.3
B20 Battery Relay

C 8 Center Door Courtesy SW (Folding Type)
C11 Clock

D 9 Destination Display
D14 Diode (Center Door No.4)

E13 Emergency Door Courtesy SW
E15 Emergency Door Courtesy SW No.2
E24 Engine ECU
E25 Engine ECU
E26 Engine ECU

F15 Fuel Sender
F16 Fuse Block

J 11 Junction Connector
J 12 Junction Connector

L 2 License Plate Light LH (Double–Leaf Door Type)
L 3 License Plate Light RH (Double–Leaf Door Type)

P 9 Pre Heater Relay

R 7 Rear Combination Light LH
R 8 Rear Combination Light RH
R10 Rear Heater Motor No.2
R18 Reverse Warning Buzzer
R19 Room Light No.1
R20 Room Light No.2
R21 Room Light No.3

S 11 Step Light (Folding Door Type)