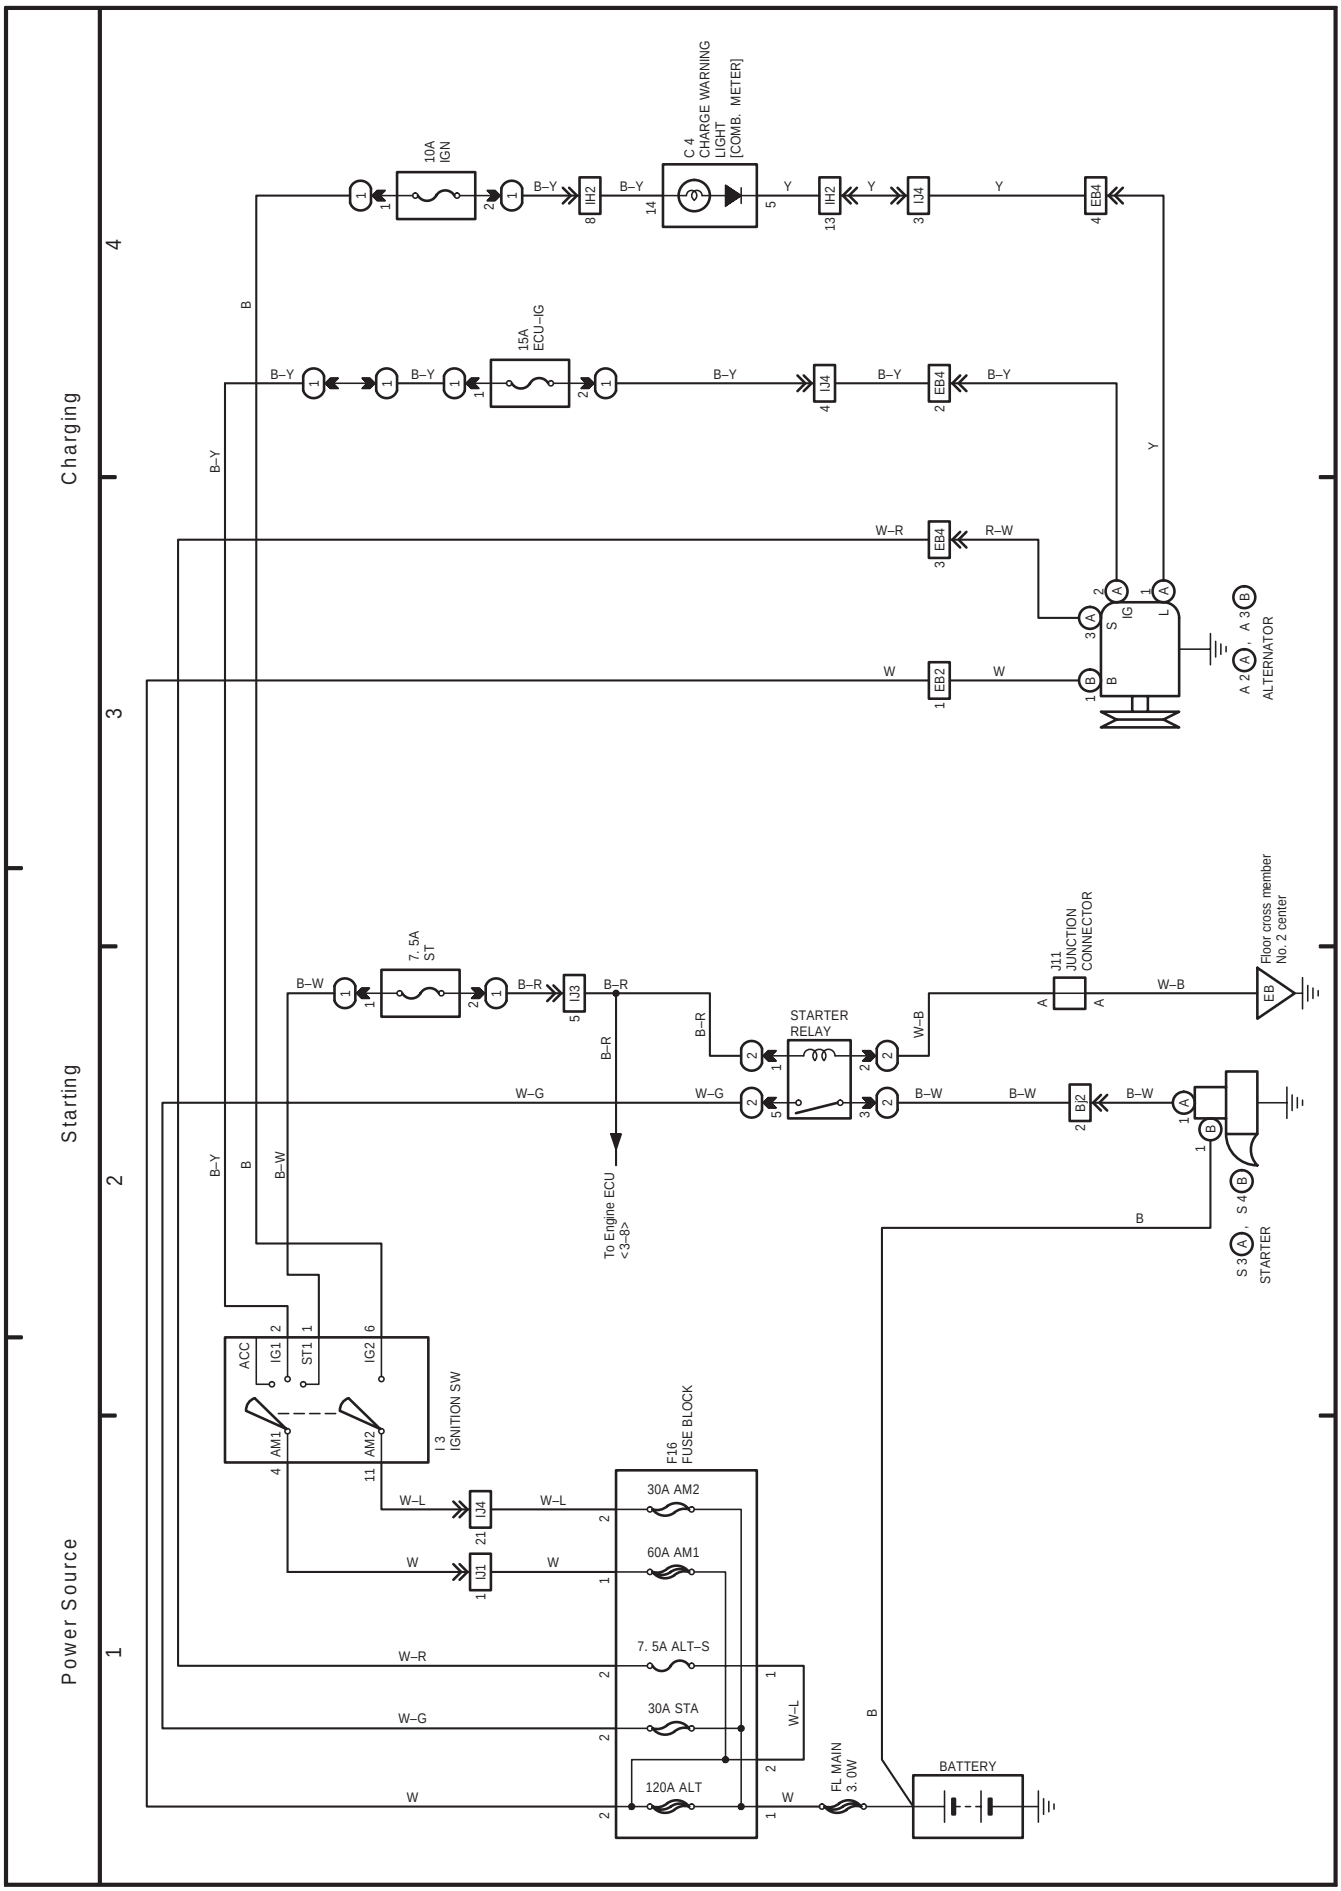

Power Source
Starting
Charging
1
2
3
4
10A IGN
15A ECU–IG
C 4 CHARGE WARNING LIGHT [COMB. METER]
7. 5A ST
STARTER RELAY
J11 JUNCTION CONNECTOR
Floor cross member No. 2 center
EB
To Engine ECU <3–8>
ACC
IG1
ST1
IG2
AM1
AM2
I 3 IGNITION SW
F16 FUSE BLOCK
30A AM2
60A AM1
7. 5A ALT–S
30A STA
120A ALT
FL MAIN 3. 0W
BATTERY
S 3 , S 4 STARTER
A 2 , A 3 ALTERNATOR
IG
S
L
B
B–Y
B–W
B–R
W–R
R–W
W–G
W–L
W–B
B
W
Y