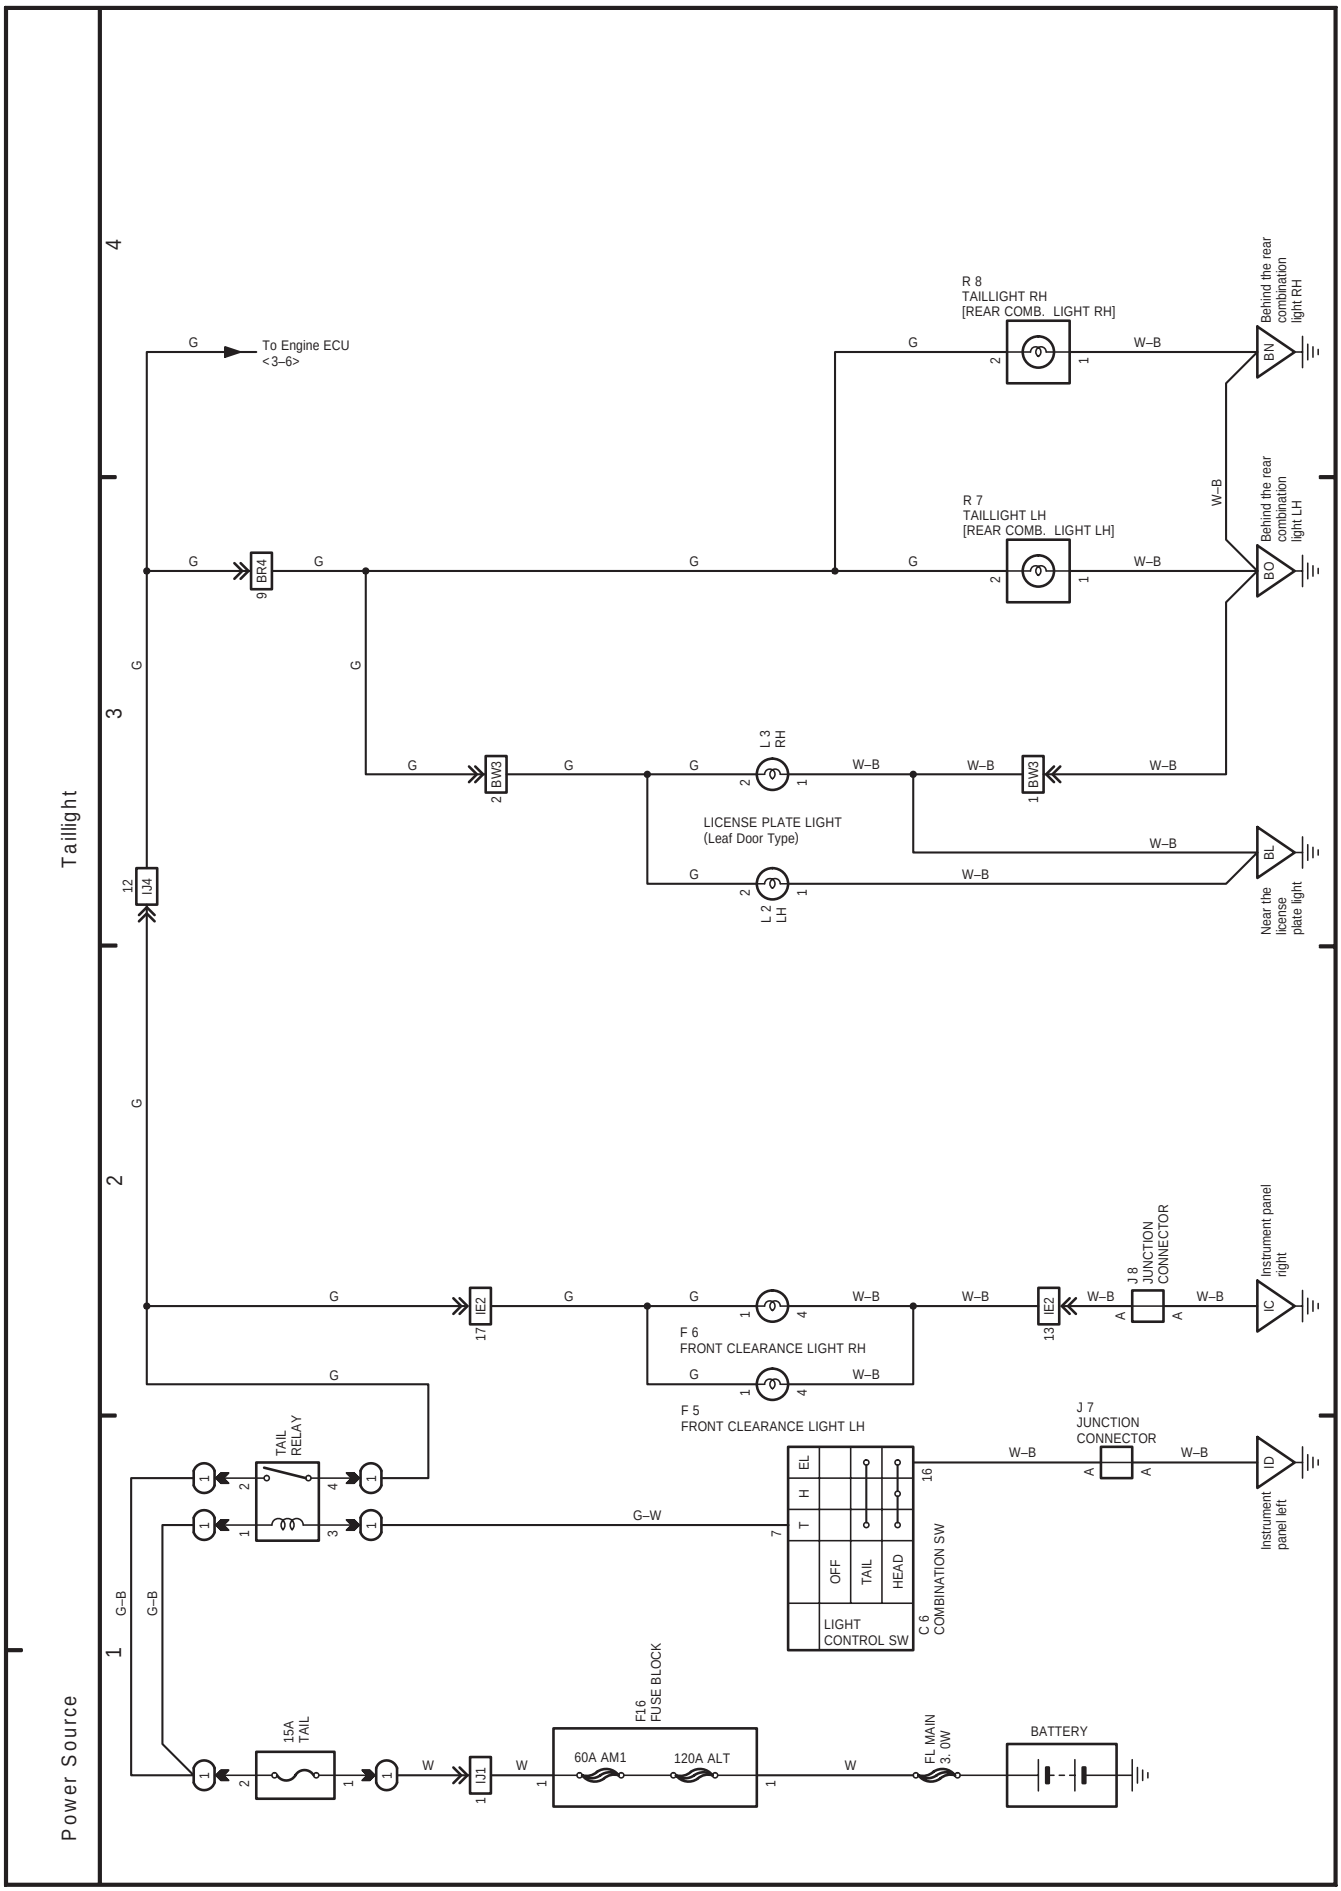

Taillight
Power Source
To Engine ECU
<3–6>
R 8
TAILLIGHT RH
[REAR COMB. LIGHT RH]
Behind the rear combination light RH
R 7
TAILLIGHT LH
[REAR COMB. LIGHT LH]
Behind the rear combination light LH
LICENSE PLATE LIGHT
(Leaf Door Type)
Near the license plate light
L3 RH
L2 LH
BR4
BW3
IJ4
IE2
J 8
JUNCTION CONNECTOR
Instrument panel right
F 6
FRONT CLEARANCE LIGHT RH
F 5
FRONT CLEARANCE LIGHT LH
J 7
JUNCTION CONNECTOR
Instrument panel left
TAIL RELAY
C 6
COMBINATION SW
LIGHT CONTROL SW
OFF
TAIL
HEAD
15A TAIL
IJ1
F16
FUSE BLOCK
60A AM1
120A ALT
FL MAIN
3. 0W
BATTERY