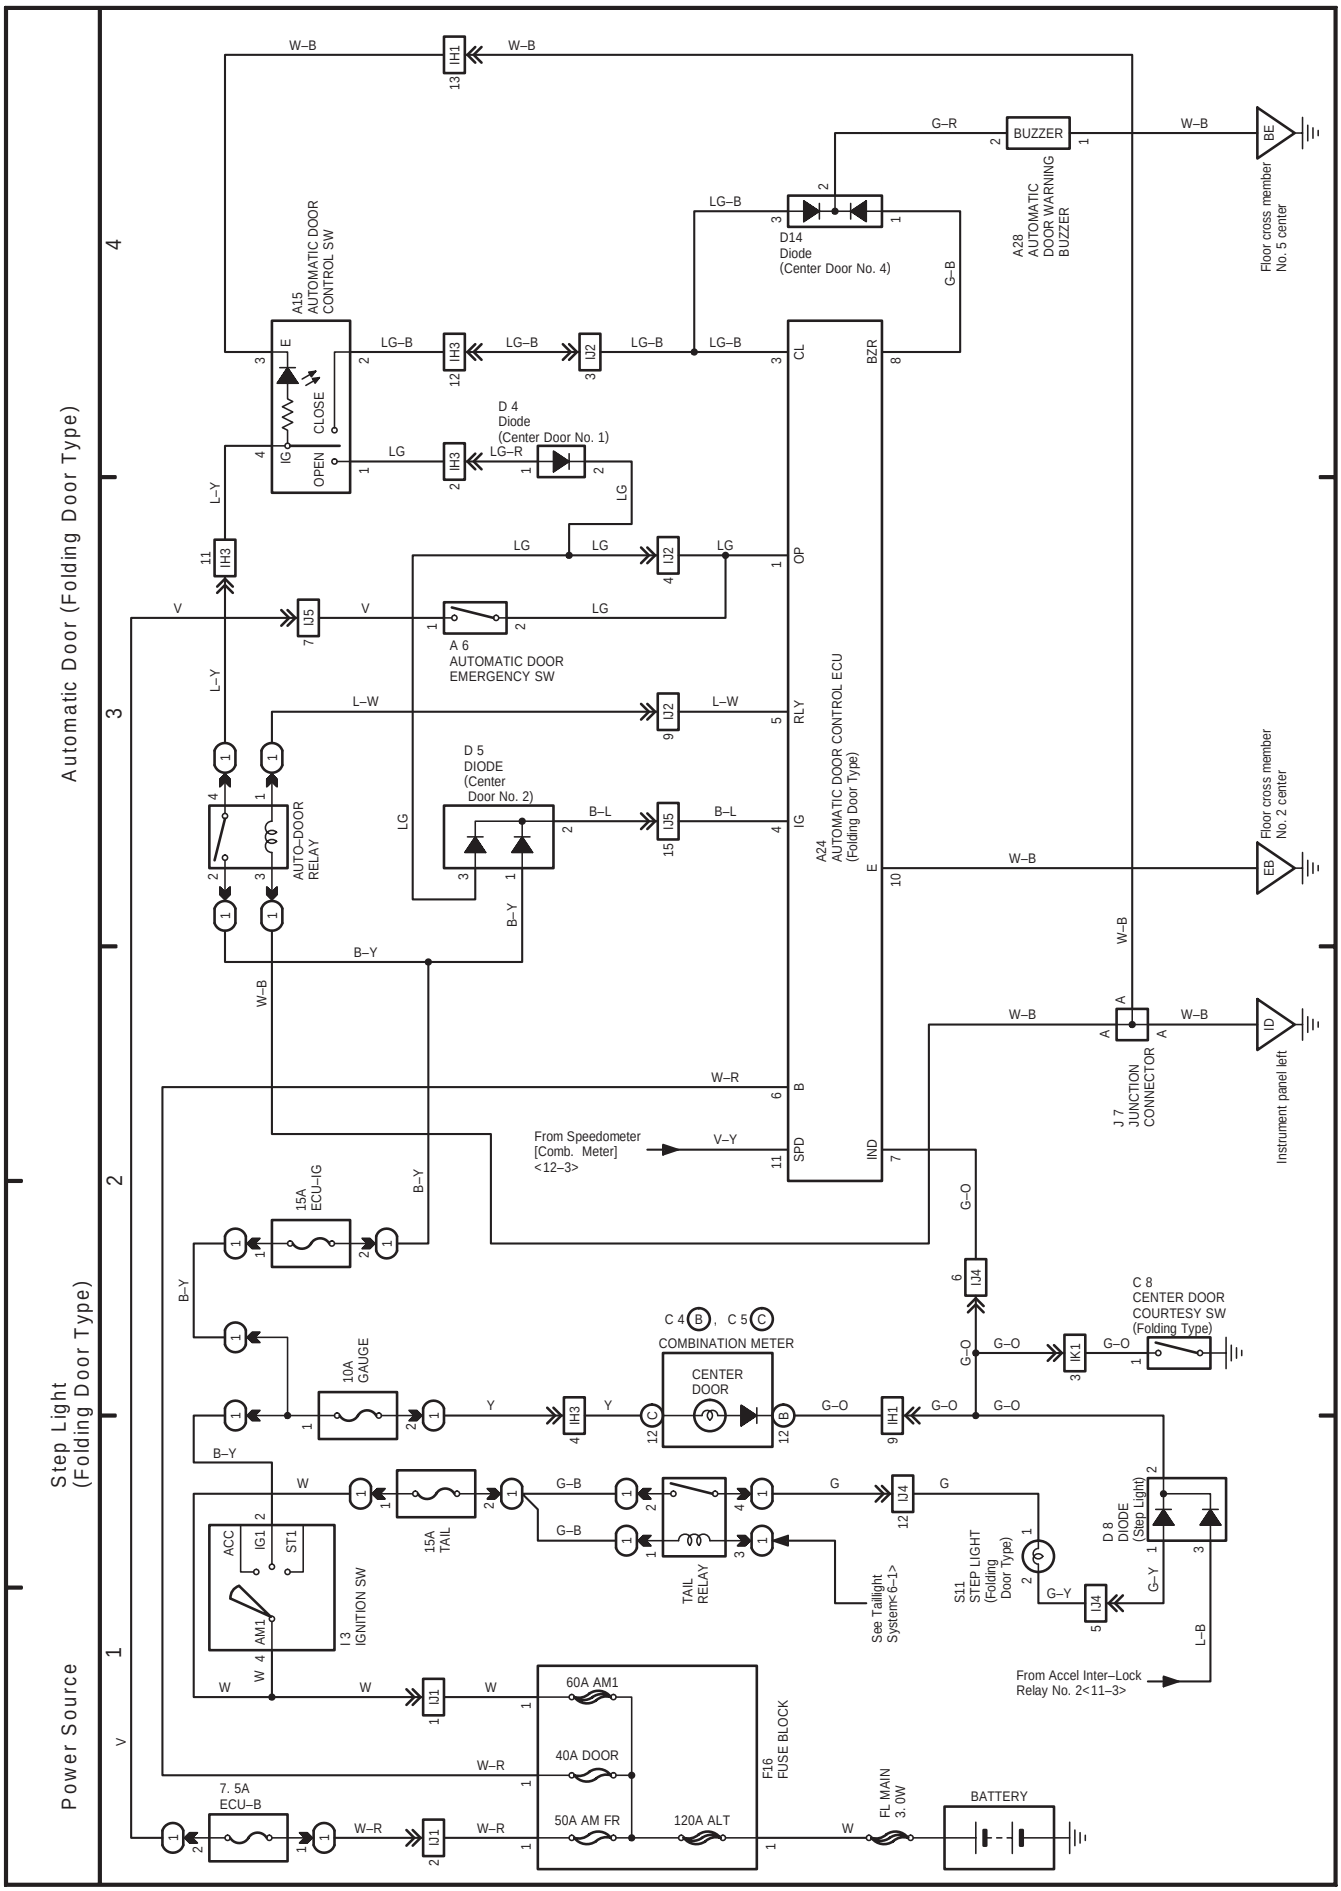

Power Source
Step Light (Folding Door Type)
Automatic Door (Folding Door Type)
1
2
3
4
W–B
G–R
BUZZER
A28 AUTOMATIC DOOR WARNING BUZZER
Floor cross member No. 5 center
D14 Diode (Center Door No. 4)
LG–B
A15 AUTOMATIC DOOR CONTROL SW
CLOSE
OPEN
D 4 Diode (Center Door No. 1)
LG–R
LG
L–Y
A 6 AUTOMATIC DOOR EMERGENCY SW
V
L–W
D 5 DIODE (Center Door No. 2)
B–L
B–Y
AUTO–DOOR RELAY
A24 AUTOMATIC DOOR CONTROL ECU (Folding Door Type)
CL
BZR
OP
RLY
IG
SPD
IND
From Speedometer [Comb. Meter] <12–3>
V–Y
W–R
Floor cross member No. 2 center
J 7 JUNCTION CONNECTOR
Instrument panel left
15A ECU–IG
10A GAUGE
C 4 , C 5
COMBINATION METER
CENTER DOOR
C 8 CENTER DOOR COURTESY SW (Folding Type)
G–O
Y
15A TAIL
TAIL RELAY
See Taillight System<6–1>
I 3 IGNITION SW
ACC
IG1
ST1
AM1
D 8 DIODE (Step Light)
S11 STEP LIGHT (Folding Door Type)
G–Y
L–B
From Accel Inter–Lock Relay No. 2<11–3>
7. 5A ECU–B
60A AM1
40A DOOR
50A AM FR
120A ALT
F16 FUSE BLOCK
FL MAIN 3. 0W
BATTERY