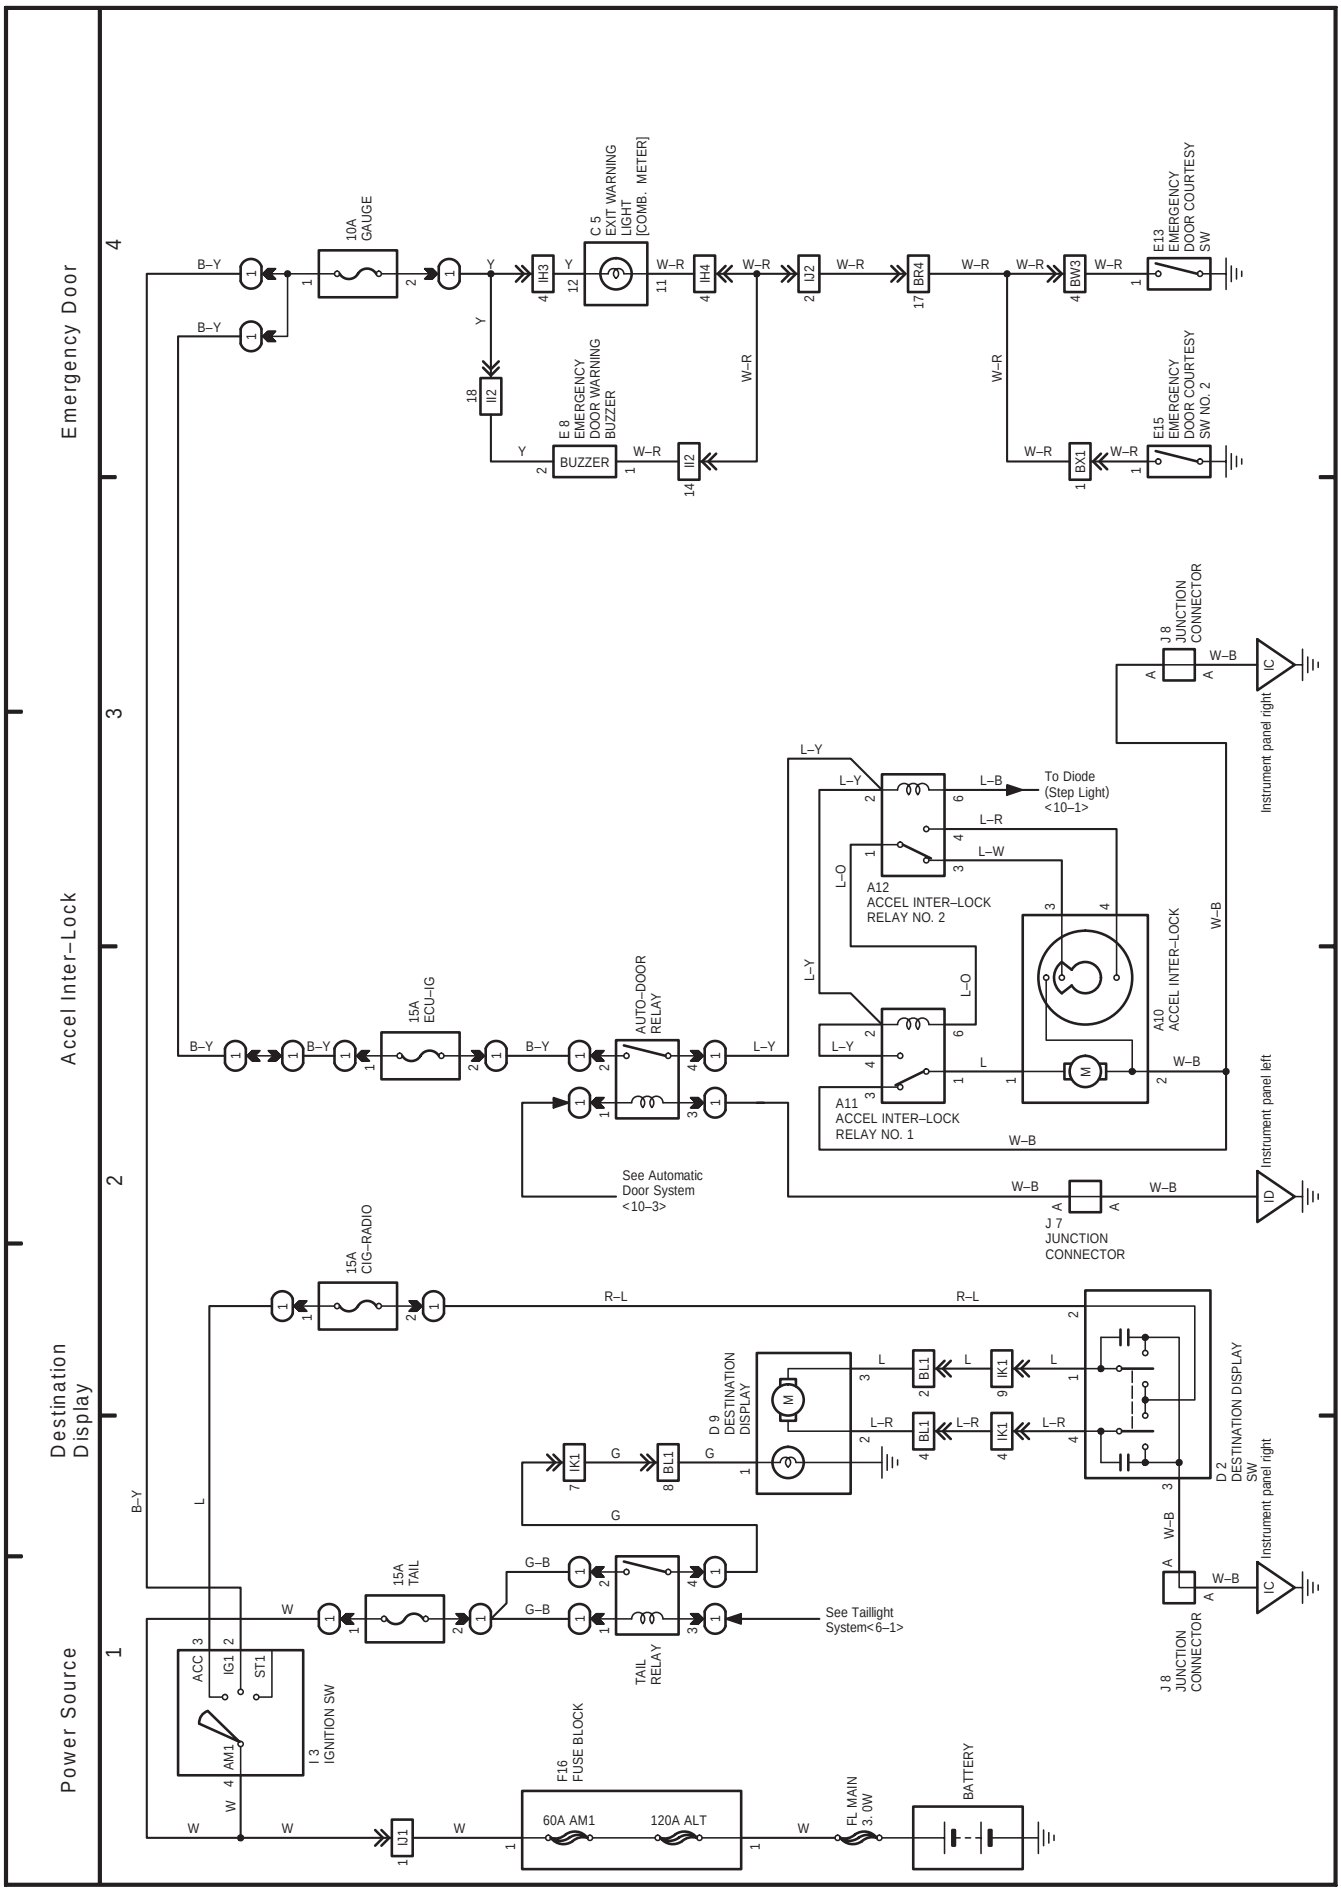

Power Source
Destination Display
Accel Inter–Lock
Emergency Door
1
2
3
4
10A GAUGE
C 5 EXIT WARNING LIGHT [COMB. METER]
E 8 EMERGENCY DOOR WARNING BUZZER
BUZZER
E13 EMERGENCY DOOR COURTESY SW
E15 EMERGENCY DOOR COURTESY SW NO. 2
J 8 JUNCTION CONNECTOR
Instrument panel right
To Diode (Step Light) <10–1>
A12 ACCEL INTER–LOCK RELAY NO. 2
A11 ACCEL INTER–LOCK RELAY NO. 1
A10 ACCEL INTER–LOCK
Instrument panel left
15A ECU–IG
AUTO–DOOR RELAY
See Automatic Door System <10–3>
J 7 JUNCTION CONNECTOR
15A CIG–RADIO
D 9 DESTINATION DISPLAY
D 2 DESTINATION DISPLAY SW
15A TAIL
TAIL RELAY
See Taillight System<6–1>
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A AM1
120A ALT
FL MAIN 3. 0W
BATTERY