

(Cont. next page)

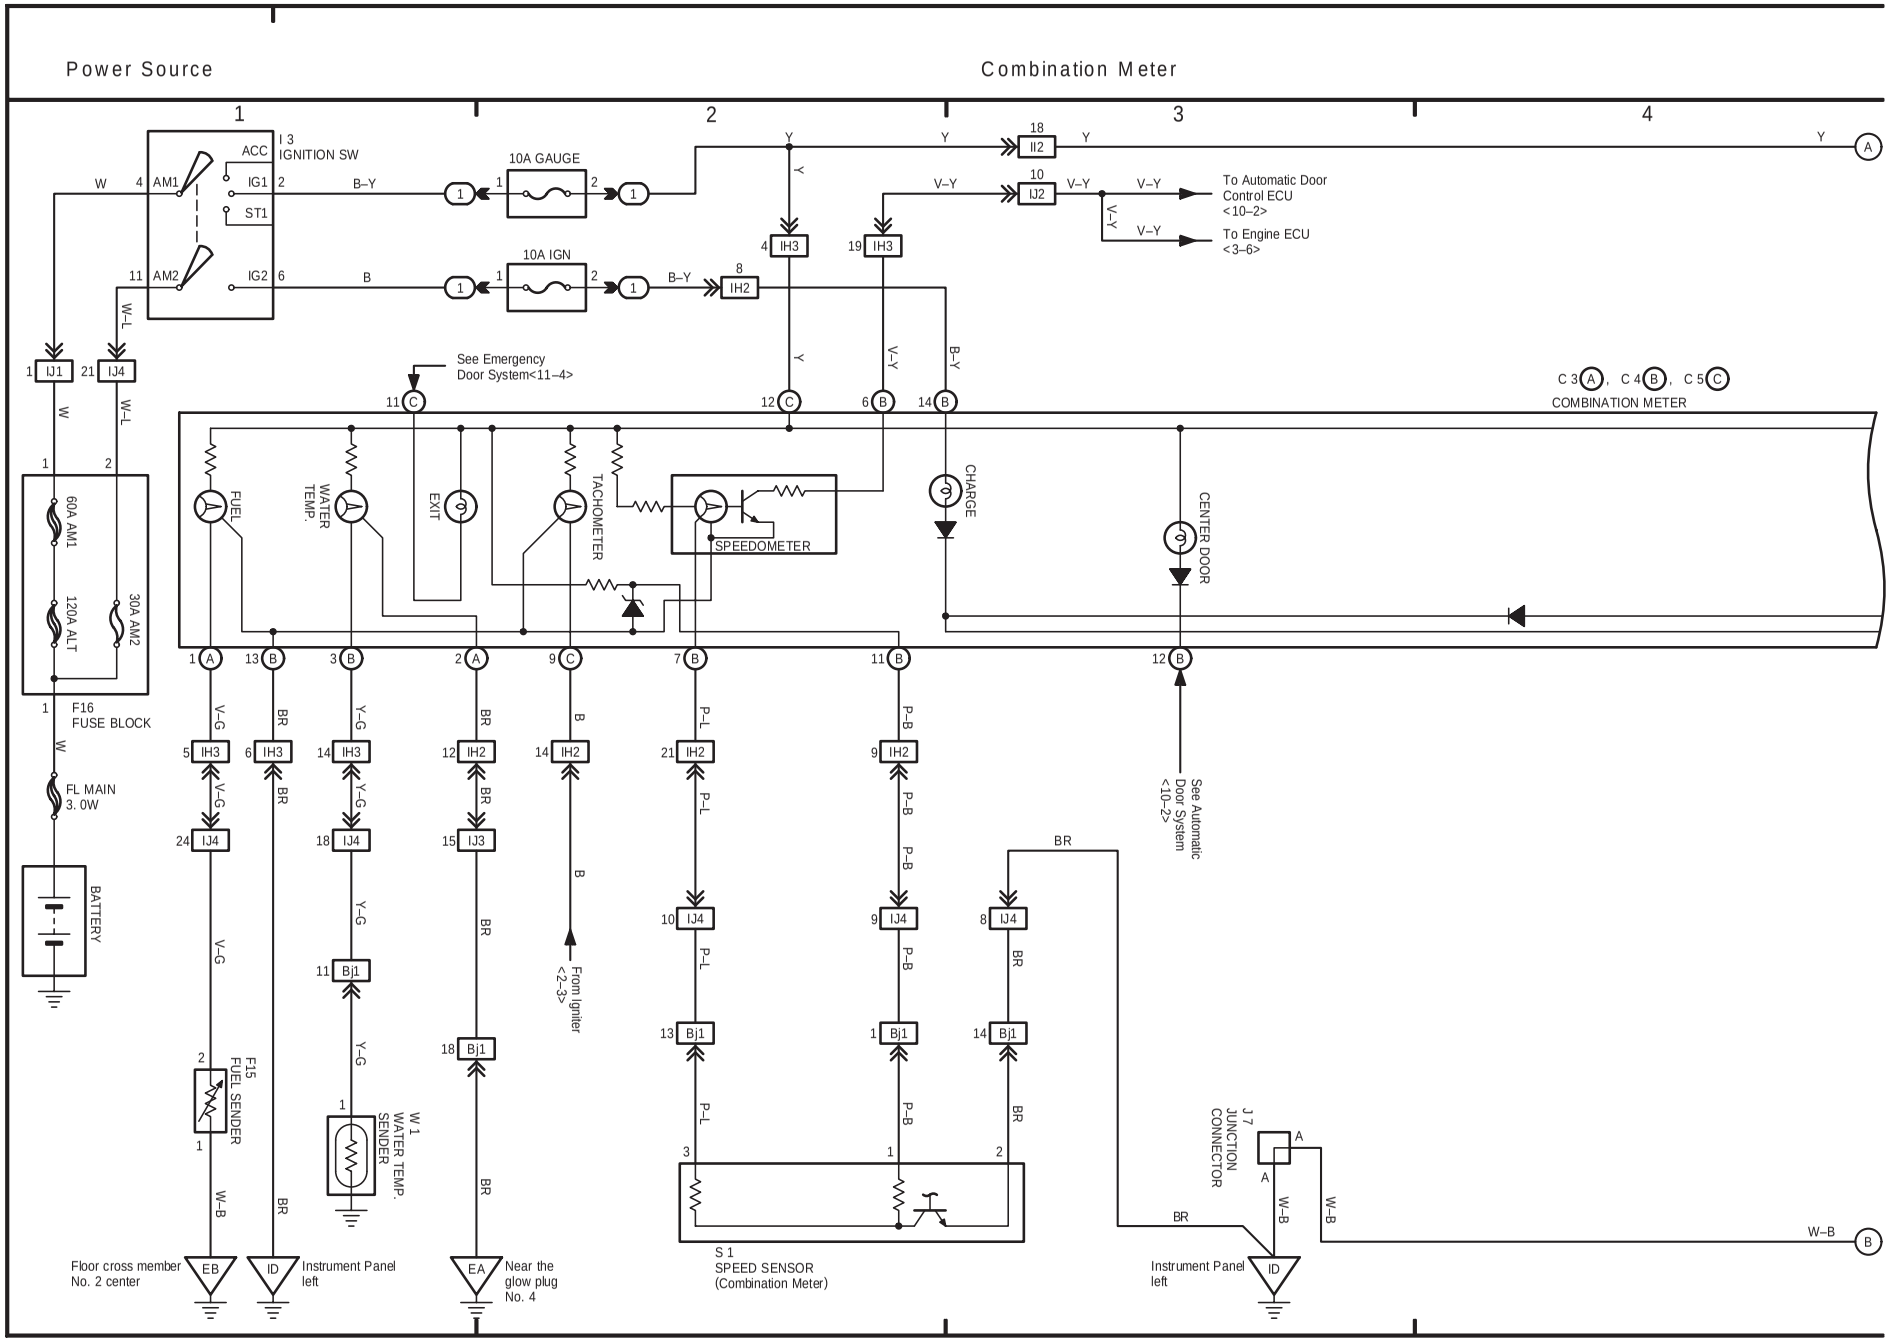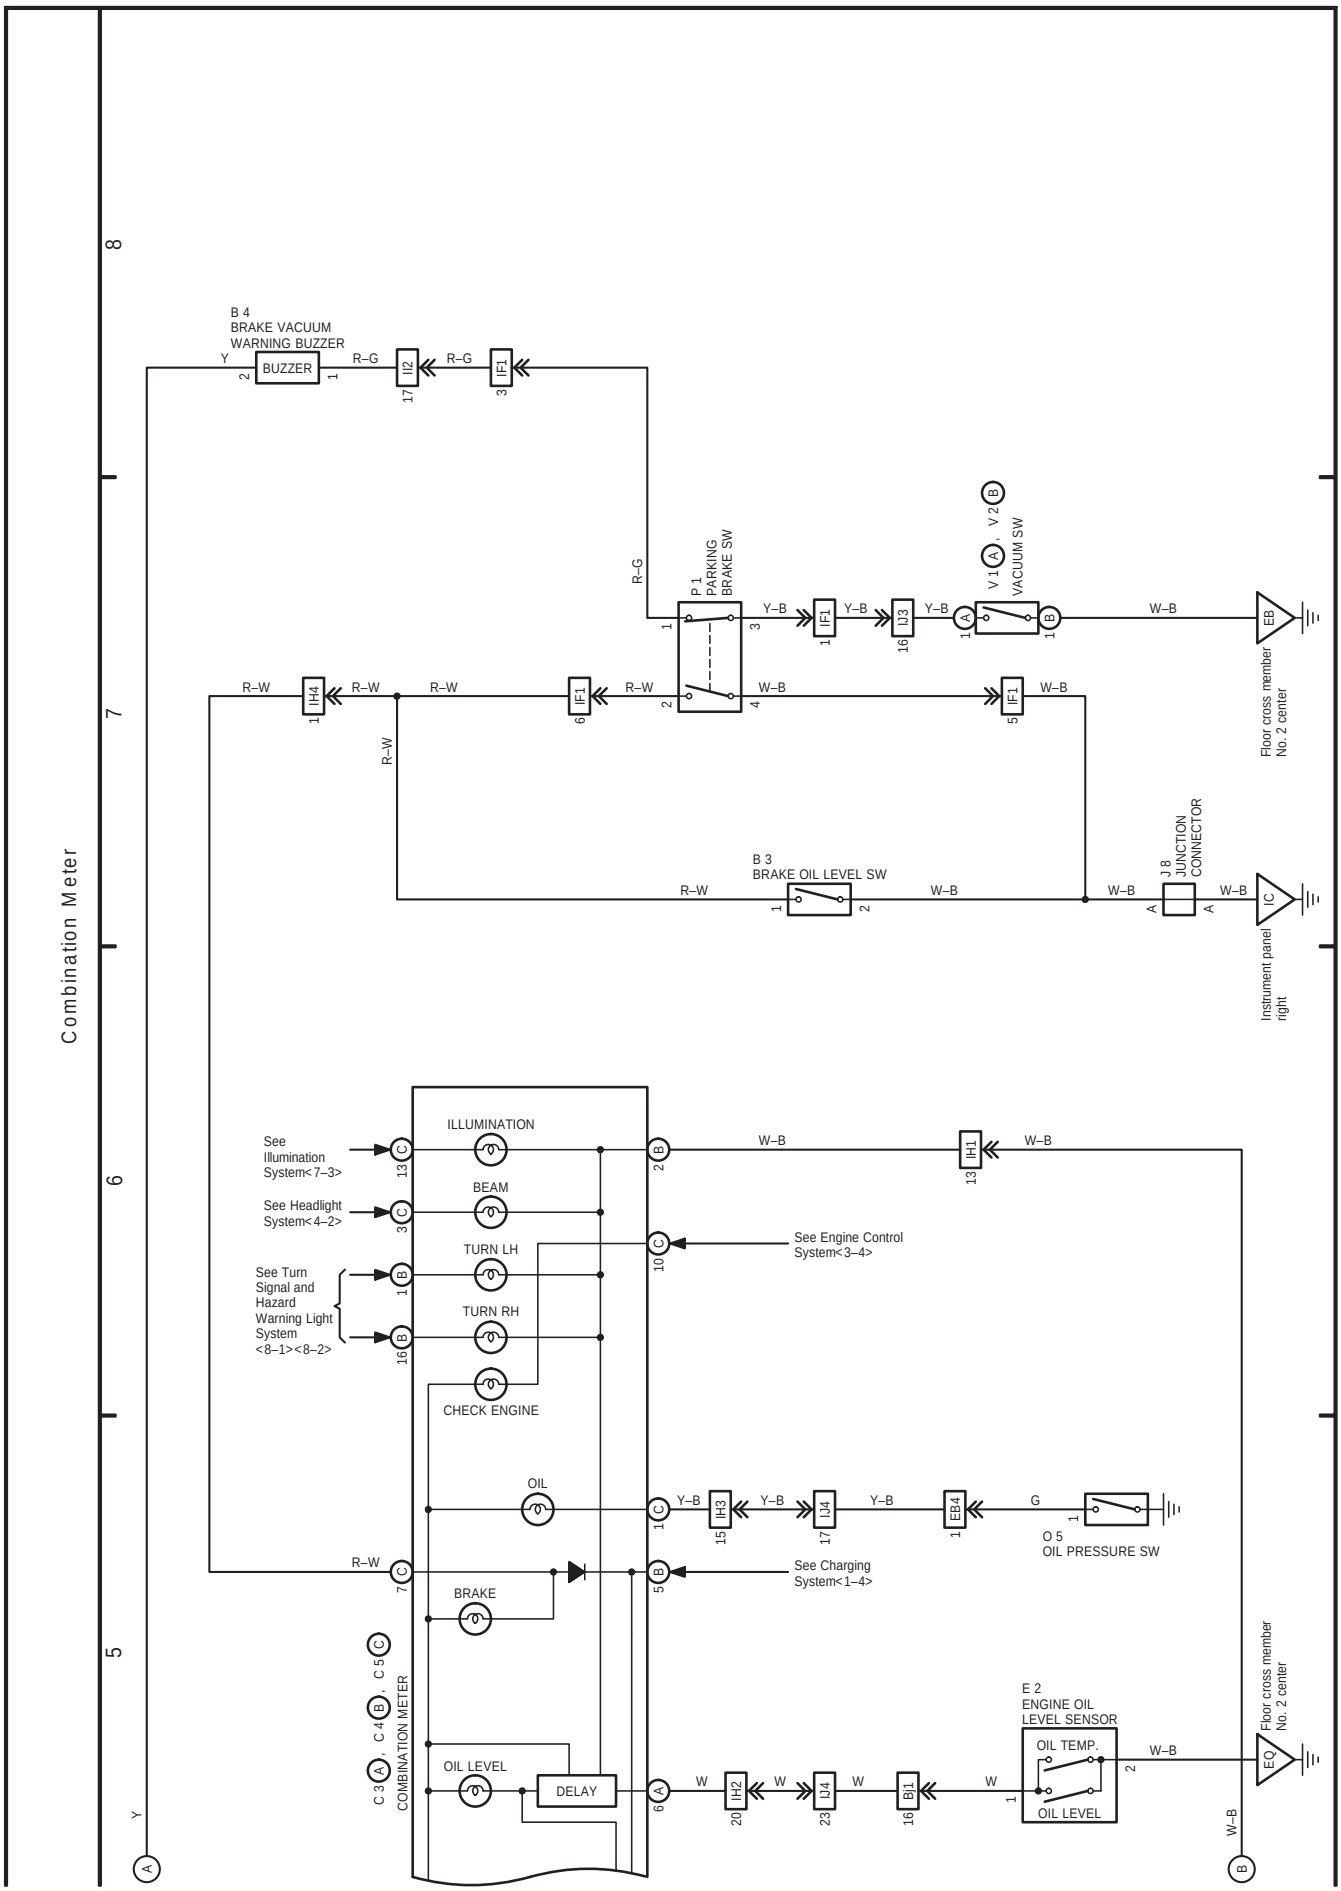


Combination Meter
B 4
BRAKE VACUUM
WARNING BUZZER
BUZZER
R–G
P 1
PARKING
BRAKE SW
V 1 , V 2
VACUUM SW
Y–B
W–B
Floor cross member
No. 2 center
R–W
B 3
BRAKE OIL LEVEL SW
J 8
JUNCTION
CONNECTOR
Instrument panel
right
ILLUMINATION
BEAM
TURN LH
TURN RH
CHECK ENGINE
OIL
BRAKE
OIL LEVEL
DELAY
See
Illumination
System< 7–3>
See Headlight
System< 4–2>
See Turn
Signal and
Hazard
Warning Light
System
<8–1><8–2>
See Engine Control
System< 3–4>
See Charging
System< 1–4>
O 5
OIL PRESSURE SW
E 2
ENGINE OIL
LEVEL SENSOR
OIL TEMP.
OIL LEVEL
COMBINATION METER
C 3 , C 4 , C 5
W
G