

■ SYSTEM DIAGRAM

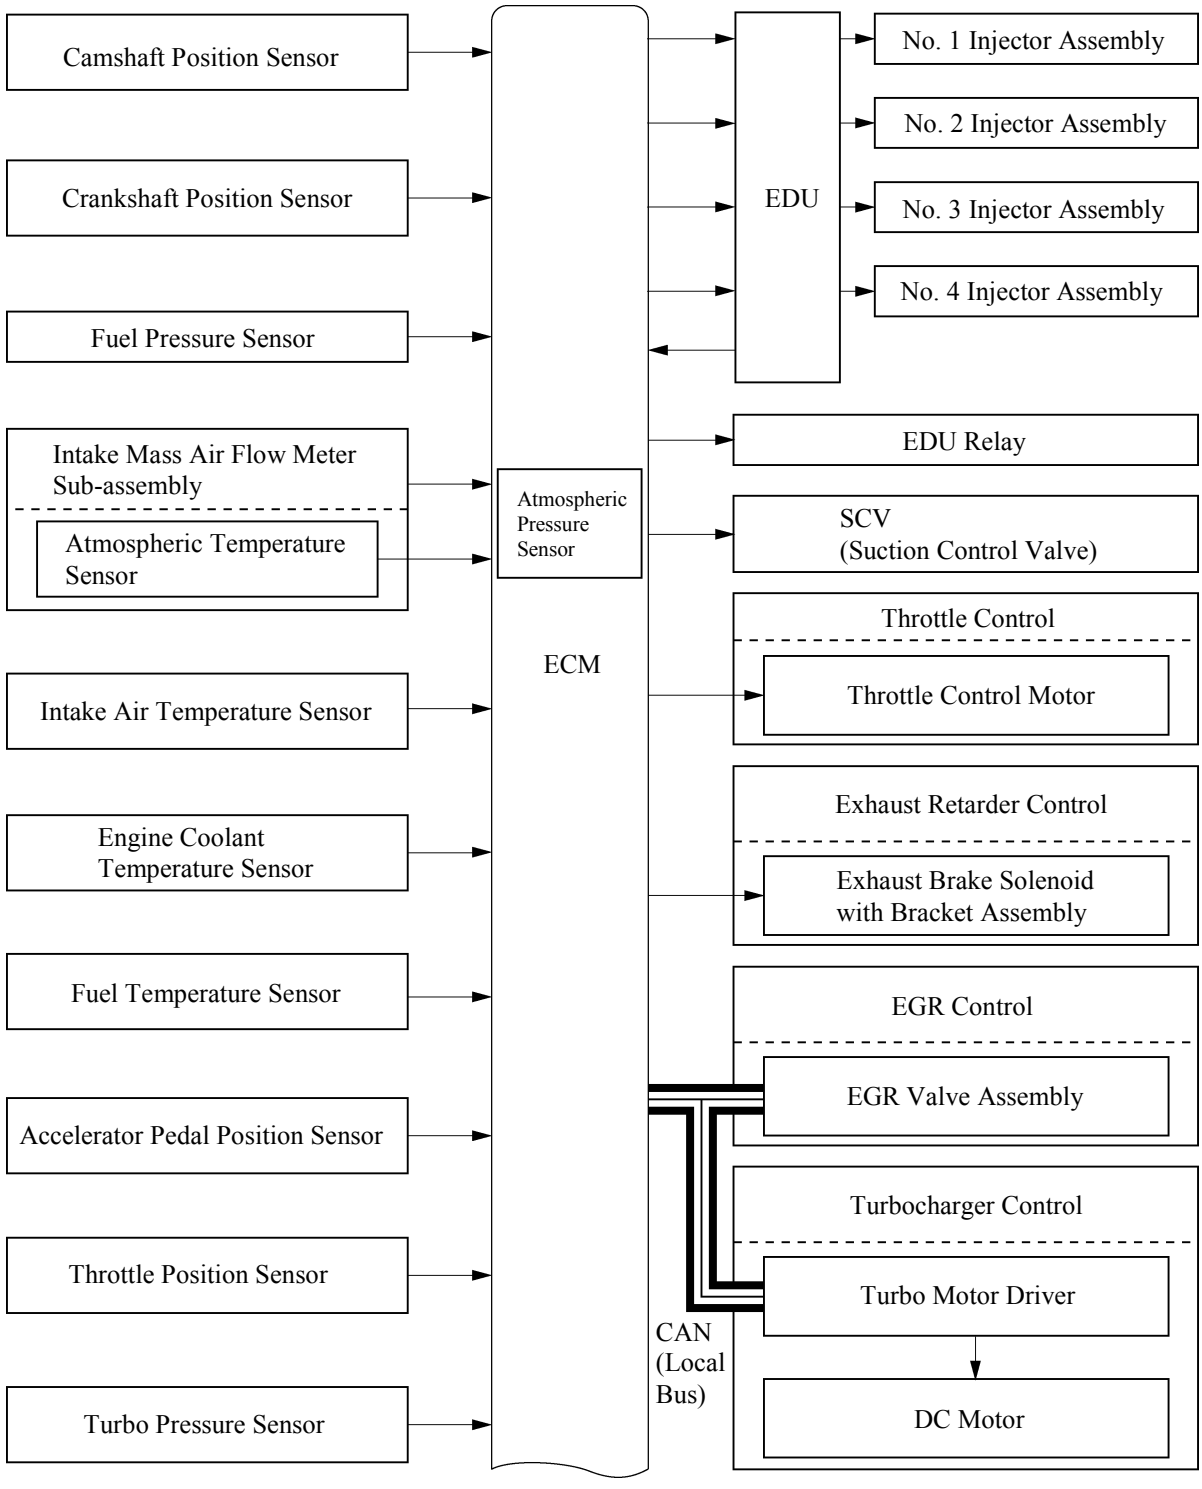


0479EG01

(Continued)

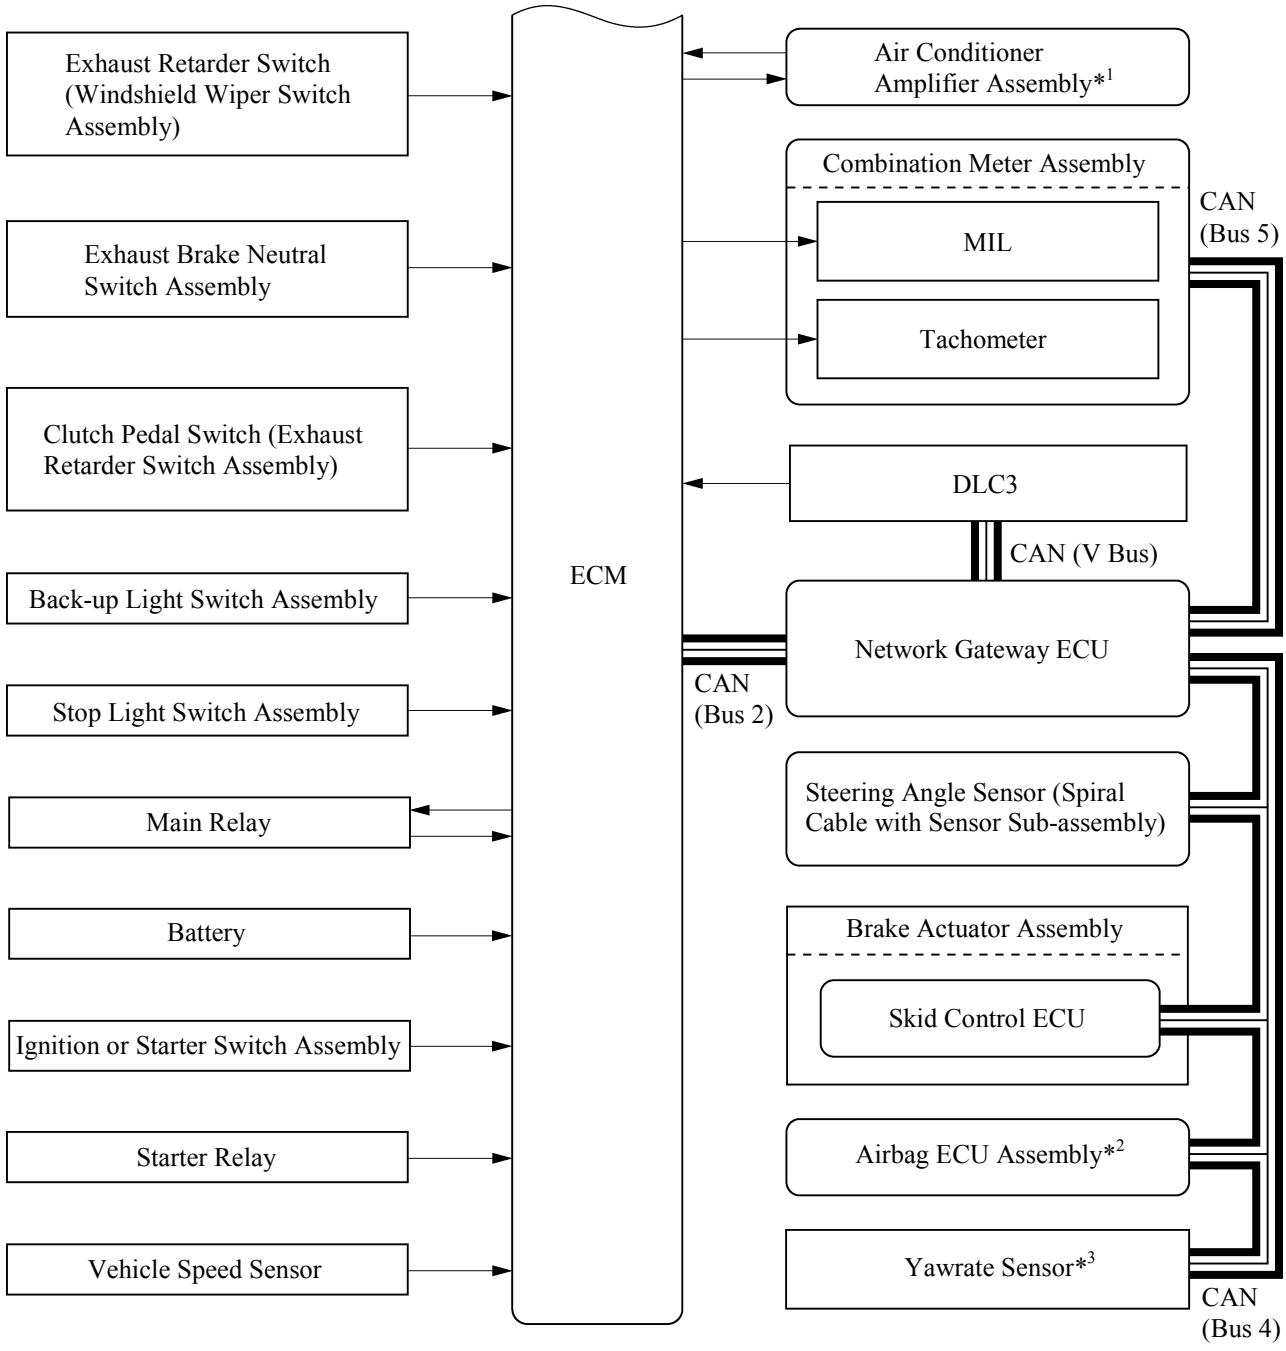

*1: Models with Air Conditioner
*2: Models with SRS Airbag System
*3: Models without SRS Airbag System

0479EG02

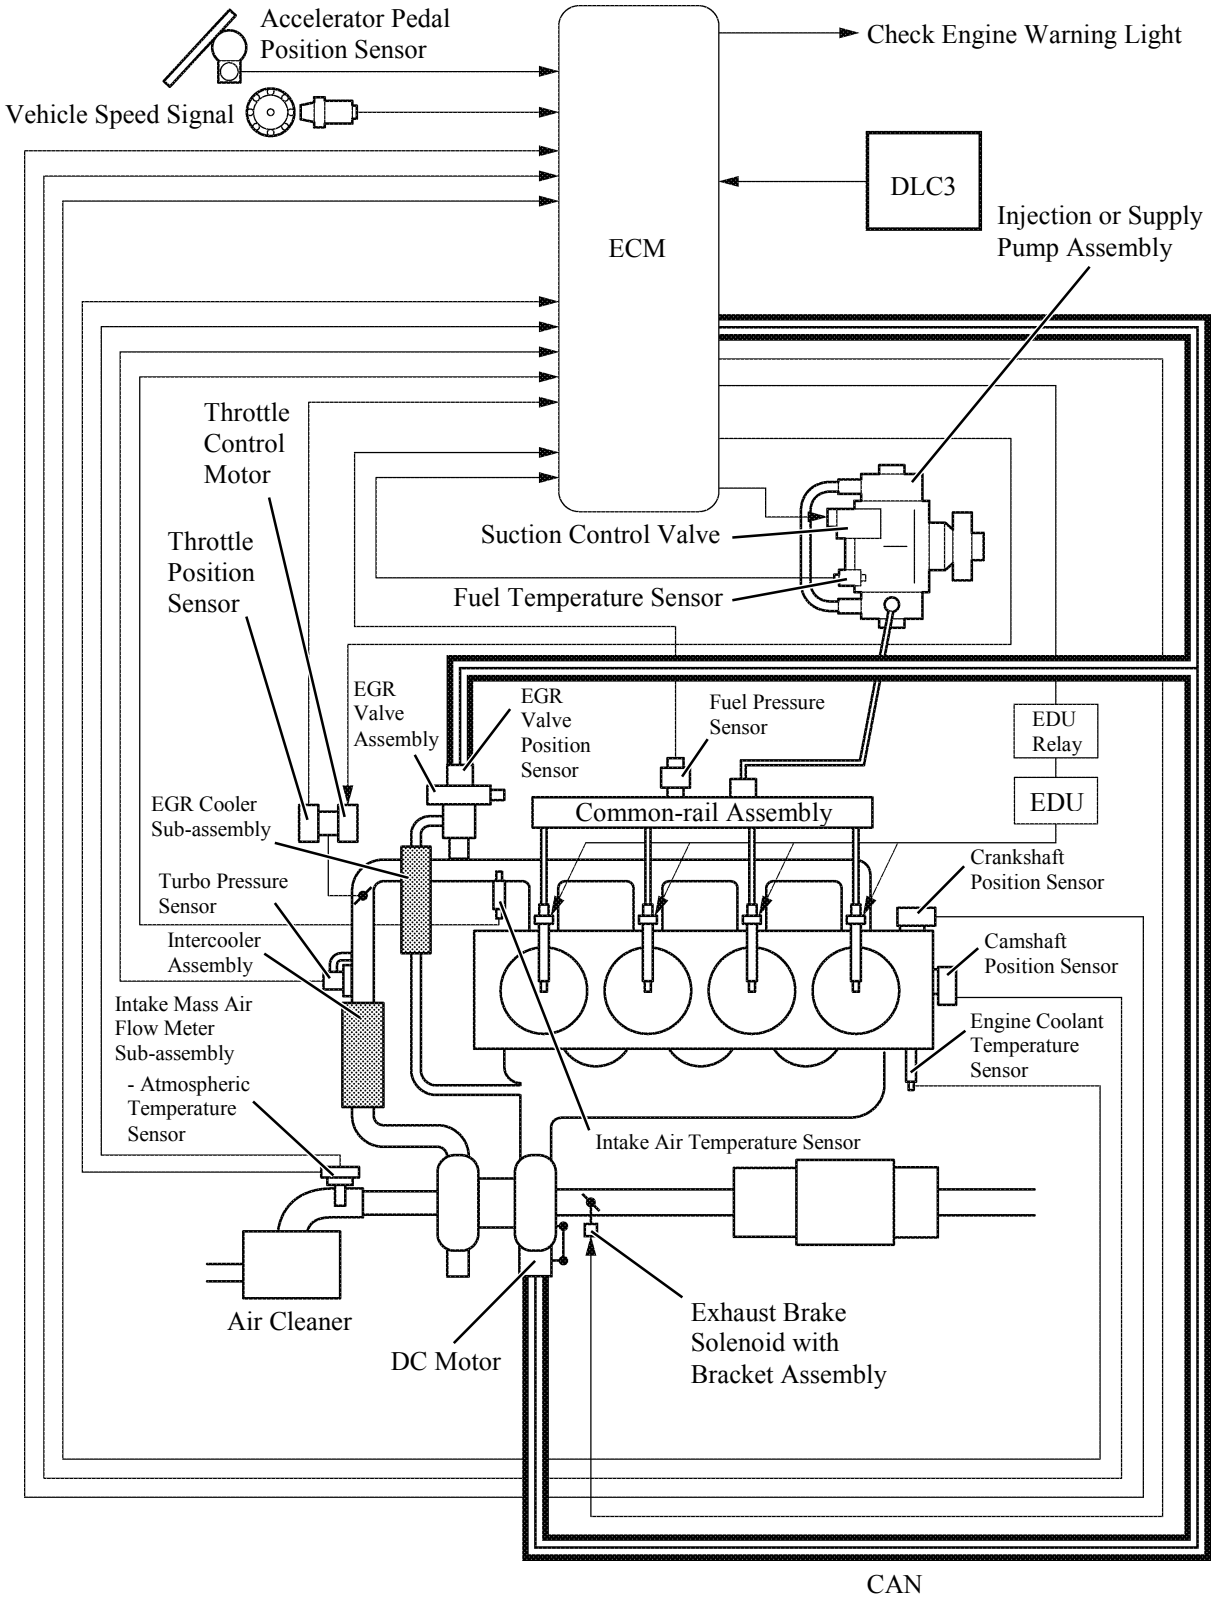
Accelerator Pedal Position Sensor
Vehicle Speed Signal
ECM
Check Engine Warning Light
DLC3
Injection or Supply Pump Assembly
Throttle Control Motor
Throttle Position Sensor
Suction Control Valve
Fuel Temperature Sensor
EGR Valve Assembly
EGR Valve Position Sensor
Fuel Pressure Sensor
EDU Relay
EDU
EGR Cooler Sub-assembly
Common-rail Assembly
Crankshaft Position Sensor
Turbo Pressure Sensor
Intercooler Assembly
Camshaft Position Sensor
Intake Mass Air Flow Meter Sub-assembly
Engine Coolant Temperature Sensor
- Atmospheric Temperature Sensor
Intake Air Temperature Sensor
Air Cleaner
DC Motor
Exhaust Brake Solenoid with Bracket Assembly
CAN

0479EG03