

■ PARTS LOCATION

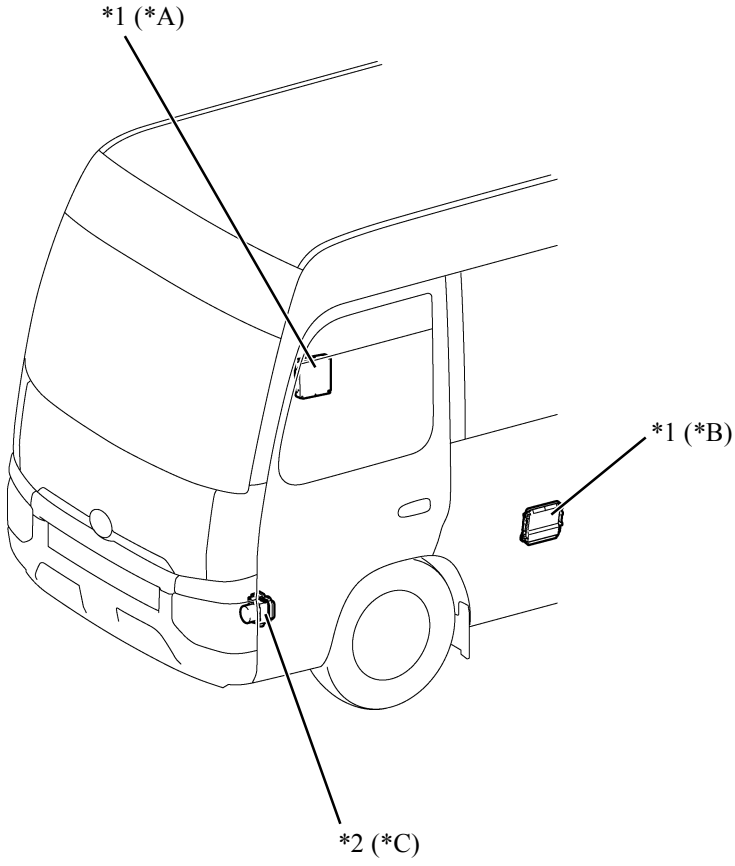

0479EG38

Text in Illustration

*A	LHD Models	*B	RHD Models
*C	Models with ABS	-	-
*1	ECM	*2	Brake Actuator Assembly · Skid Control ECU

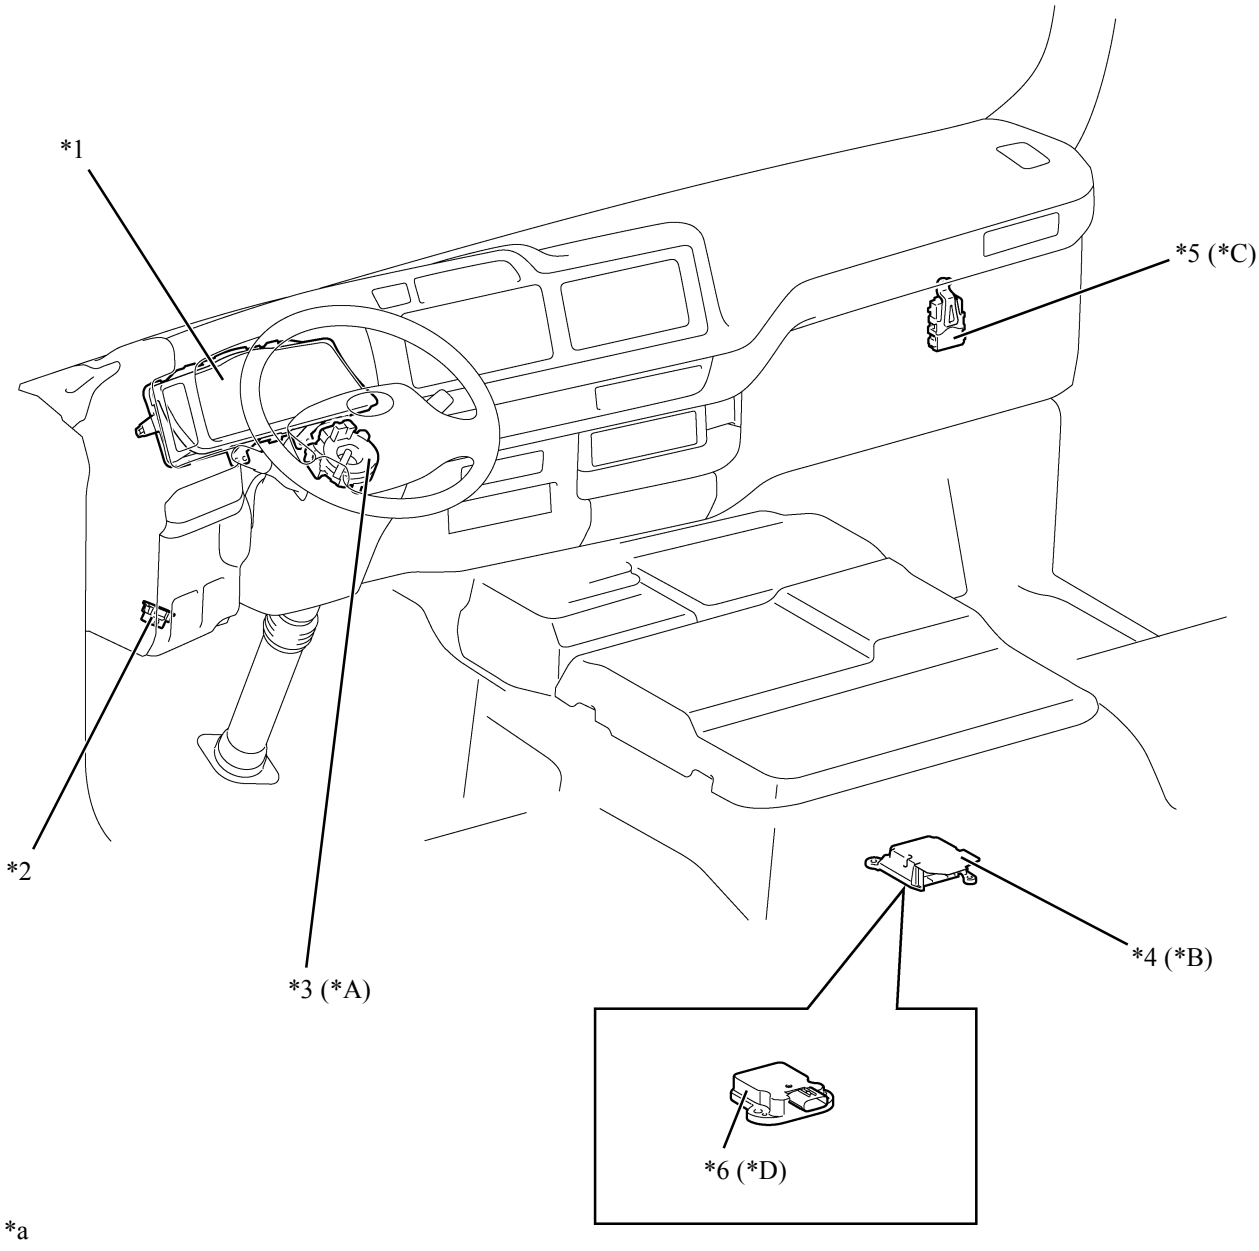

Text in Illustration

*A	Models with ABS	*B	Models with SRS Airbag System
*C	Models with Network Gateway ECU	*D	Models without SRS Airbag System
*1	Combination Meter Assembly	*2	DLC3
*3	Spiral Cable with Senor Sub-assembly · Steering Angle Sensor	*4	Airbag ECU Assembly
*5	Network Gateway ECU	*6	Yawrate Sensor
*a	The illustrations shown are examples only.	-	-