

■ PARTS LOCATION

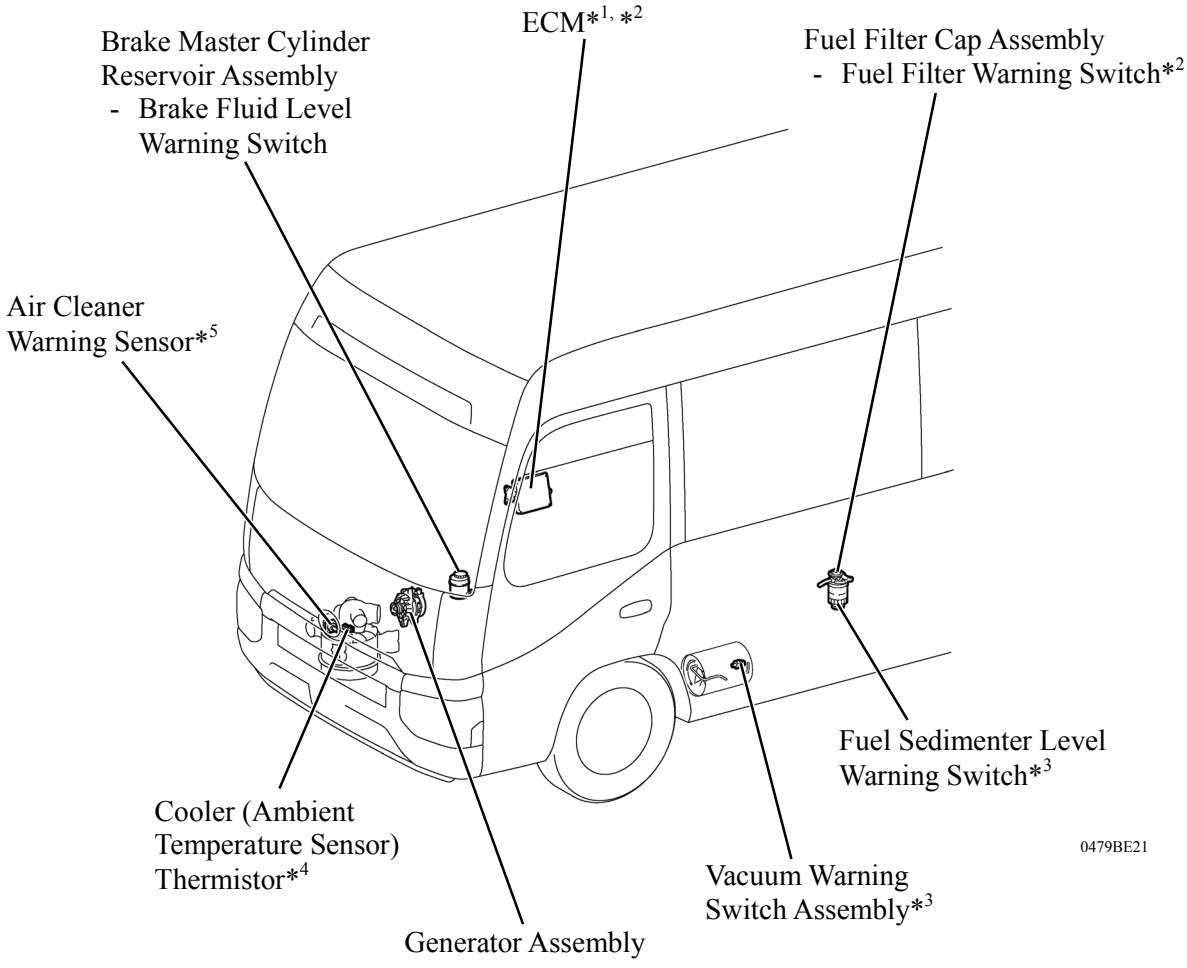


LHD Models

*1: Models with 2TR-FE Engine
*2: Models with N04C-VL, N04C-VQ or N04C-UH Engine
*3: Models with Diesel Engine
*4: Models with Multi-information Display
*5: Models with Air Cleaner Warning System

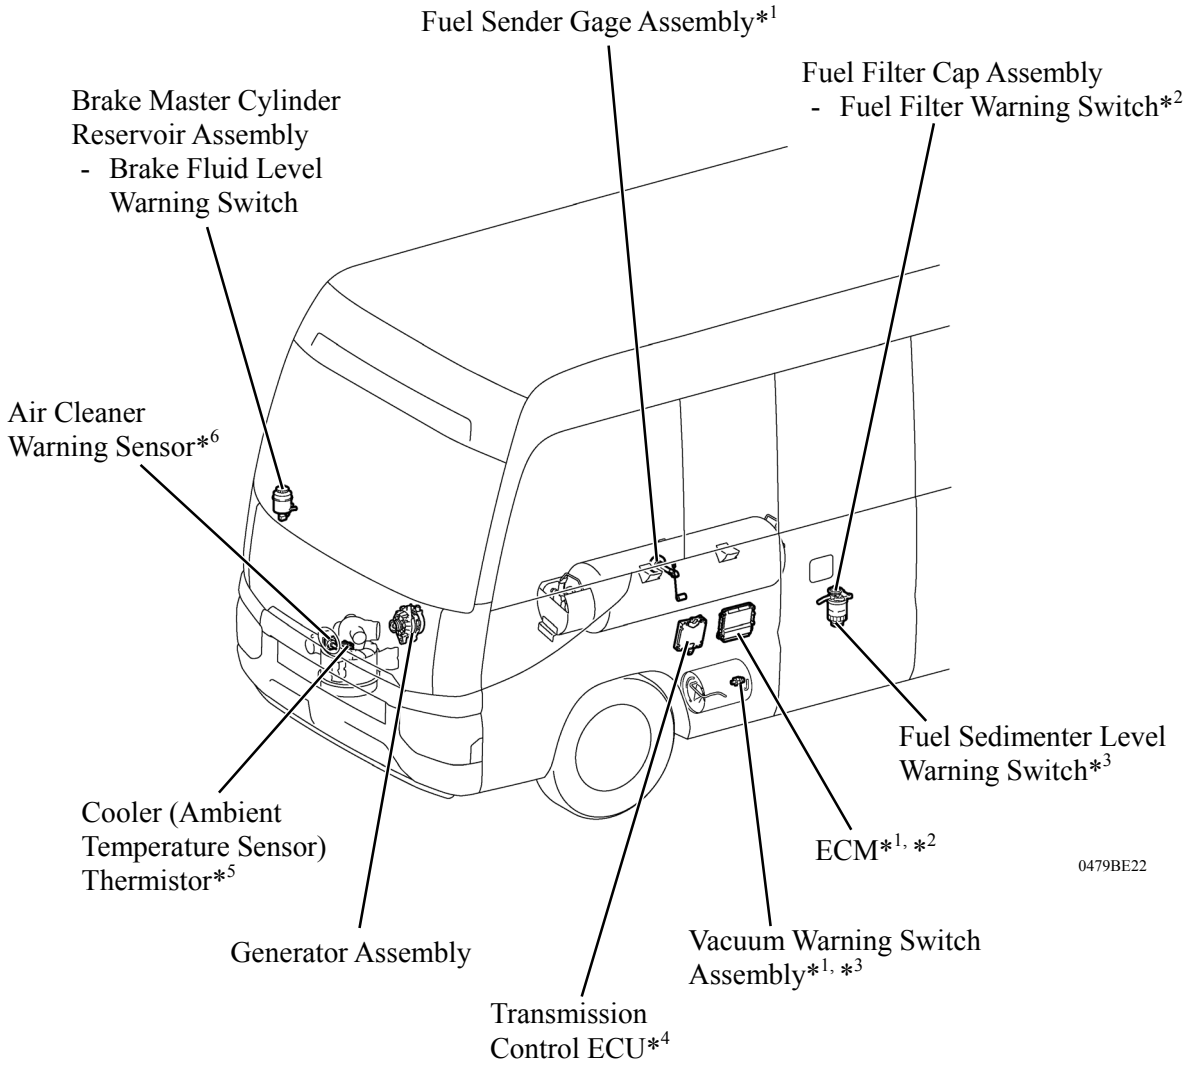

RHD Models


*1: Models with 1BZ-FPE Engine
*2: Models with N04C-UH Engine
*3: Models with Diesel Engine
*4: Models with A/T
*5: Models with Multi-information Display
*6: Models with Air Cleaner Warning System

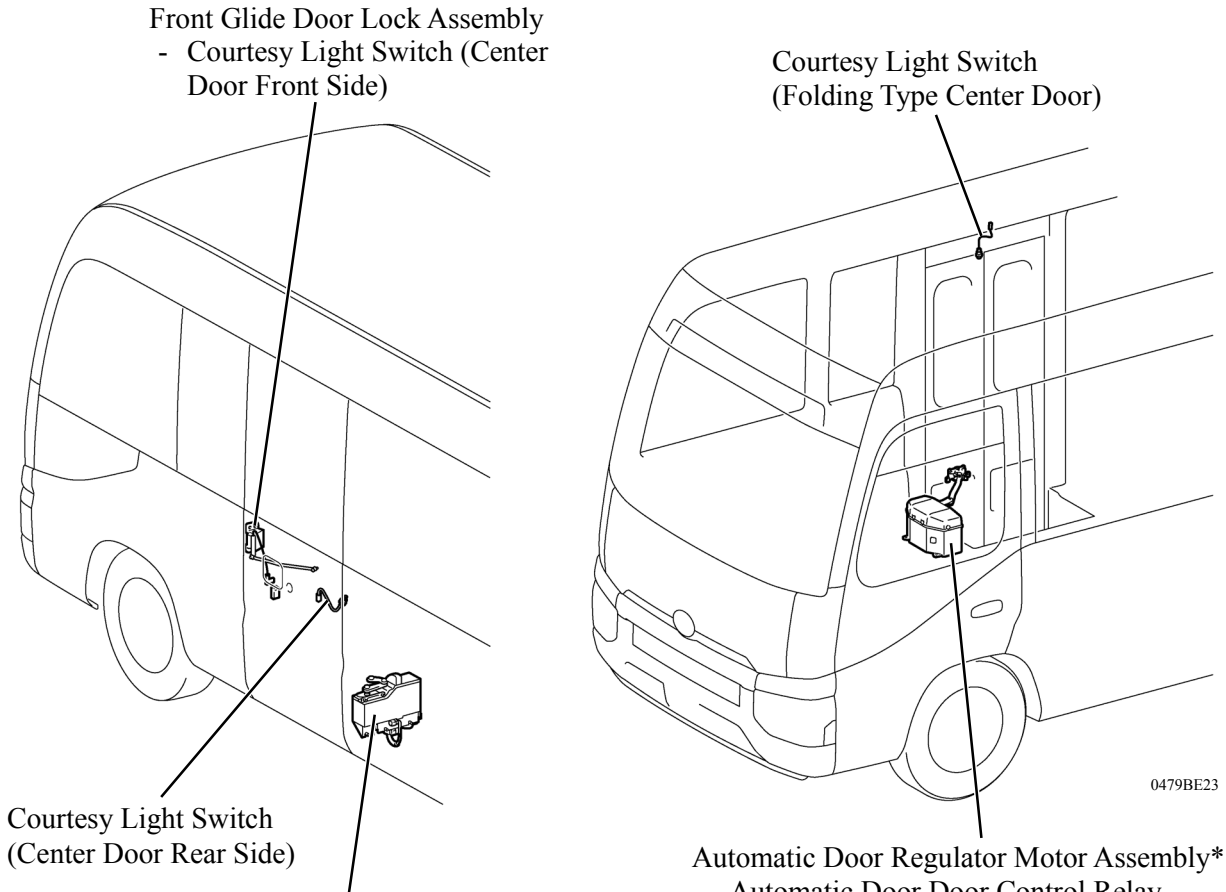

Models with Gliding Type Center Door


Models with Folding Type Center Door

*: Models with Automatic Center Door System

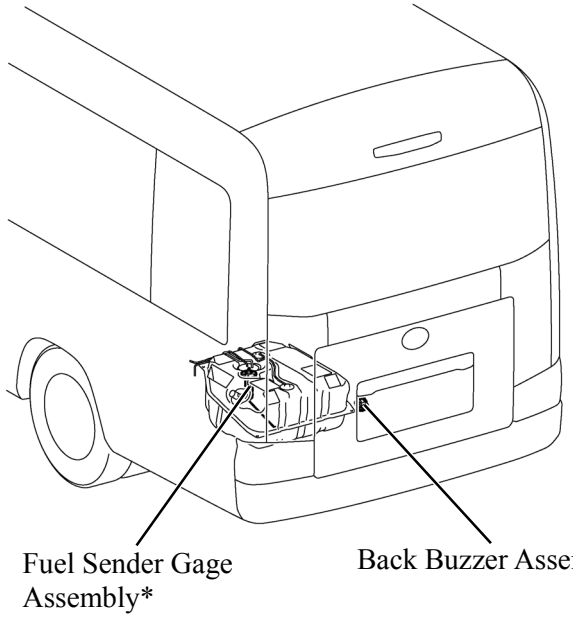

*: Models with Gasoline Engine or Diesel Engine

► **Models with Emergency Door** ◄

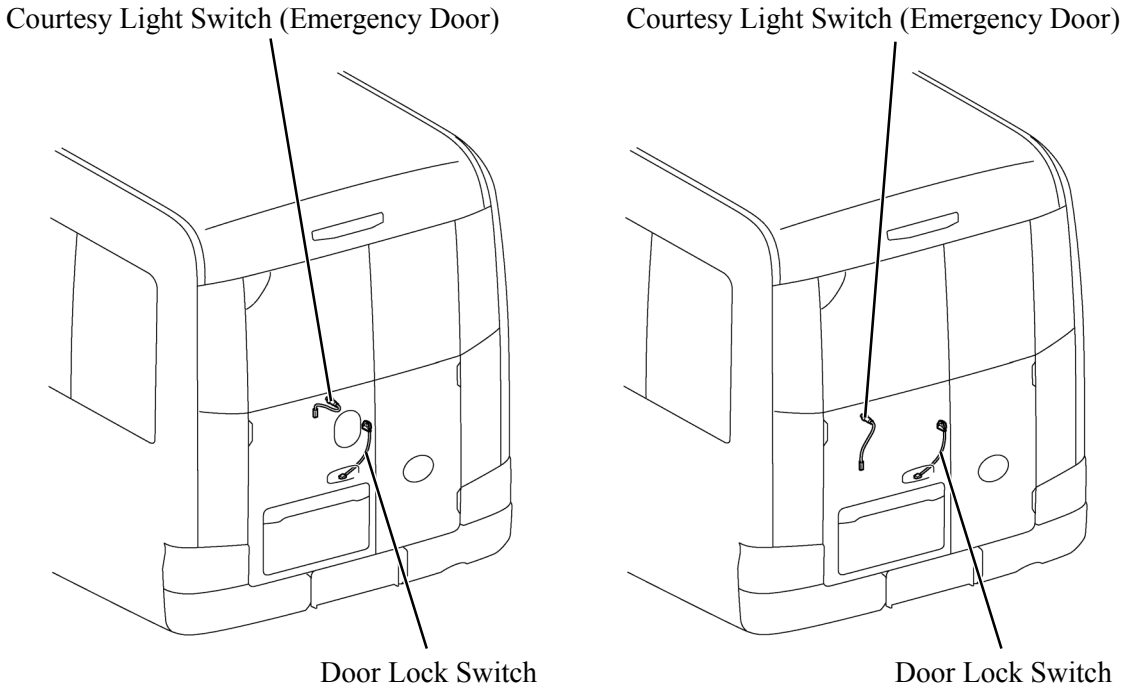


Models without Inside Back Door Handle Assembly

Models with Inside Back Door Handle Assembly

0479BE25

► **Models with ABS** ◄

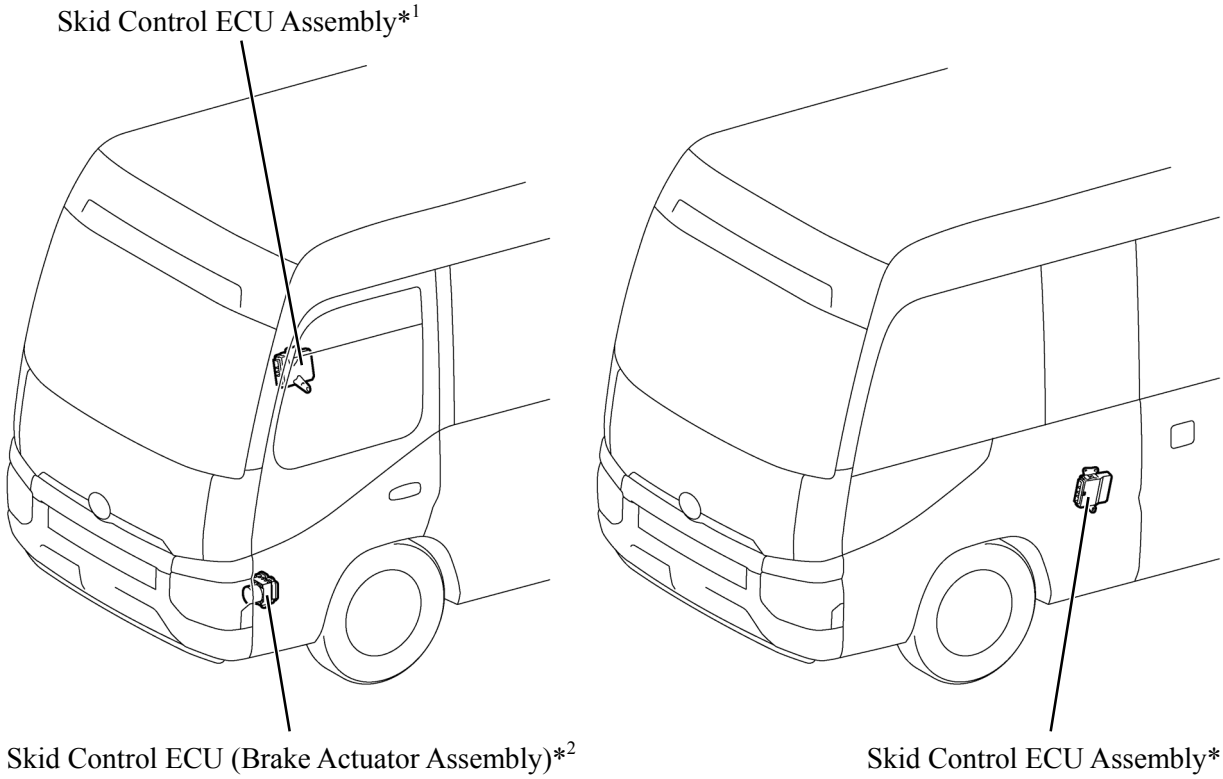


LHD Models

RHD Models


0479BE26

*1: Models without CAN Communication System
*2: Models with CAN Communication System

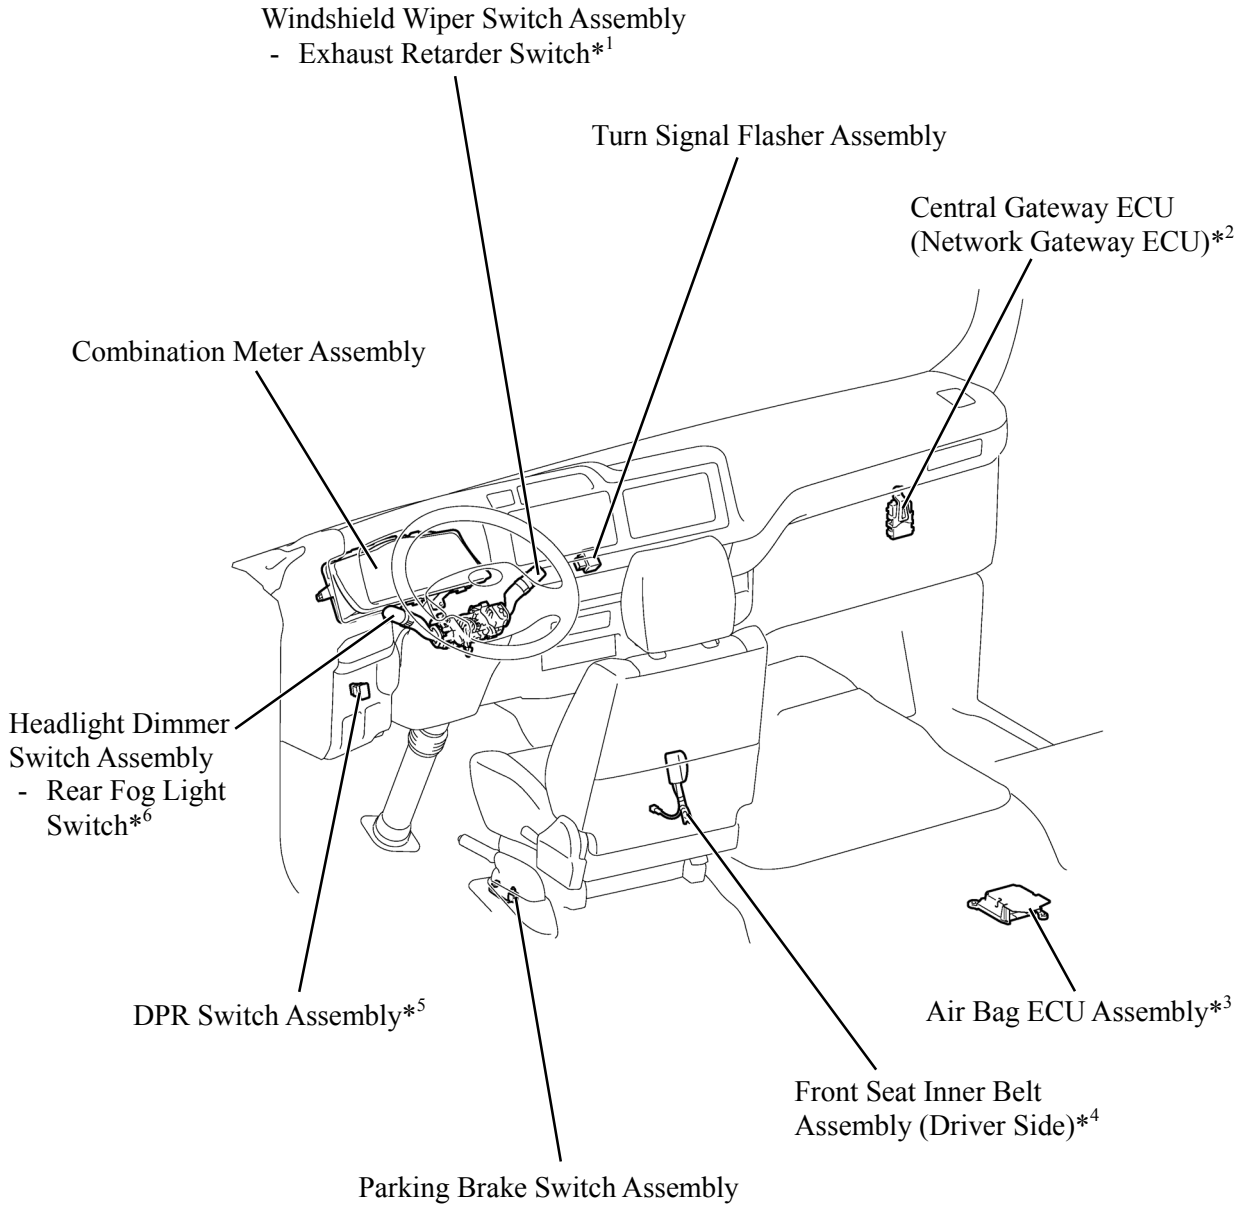

LHD Models


*1: Models with Exhaust Retarder Switch
*2: Models with CAN Communication System
*3: Models with SRS Airbag System
*4: Models with Driver Seat Belt Warning System
*5: Models with N04C-UH Engine
*6: Models with Rear Fog Light

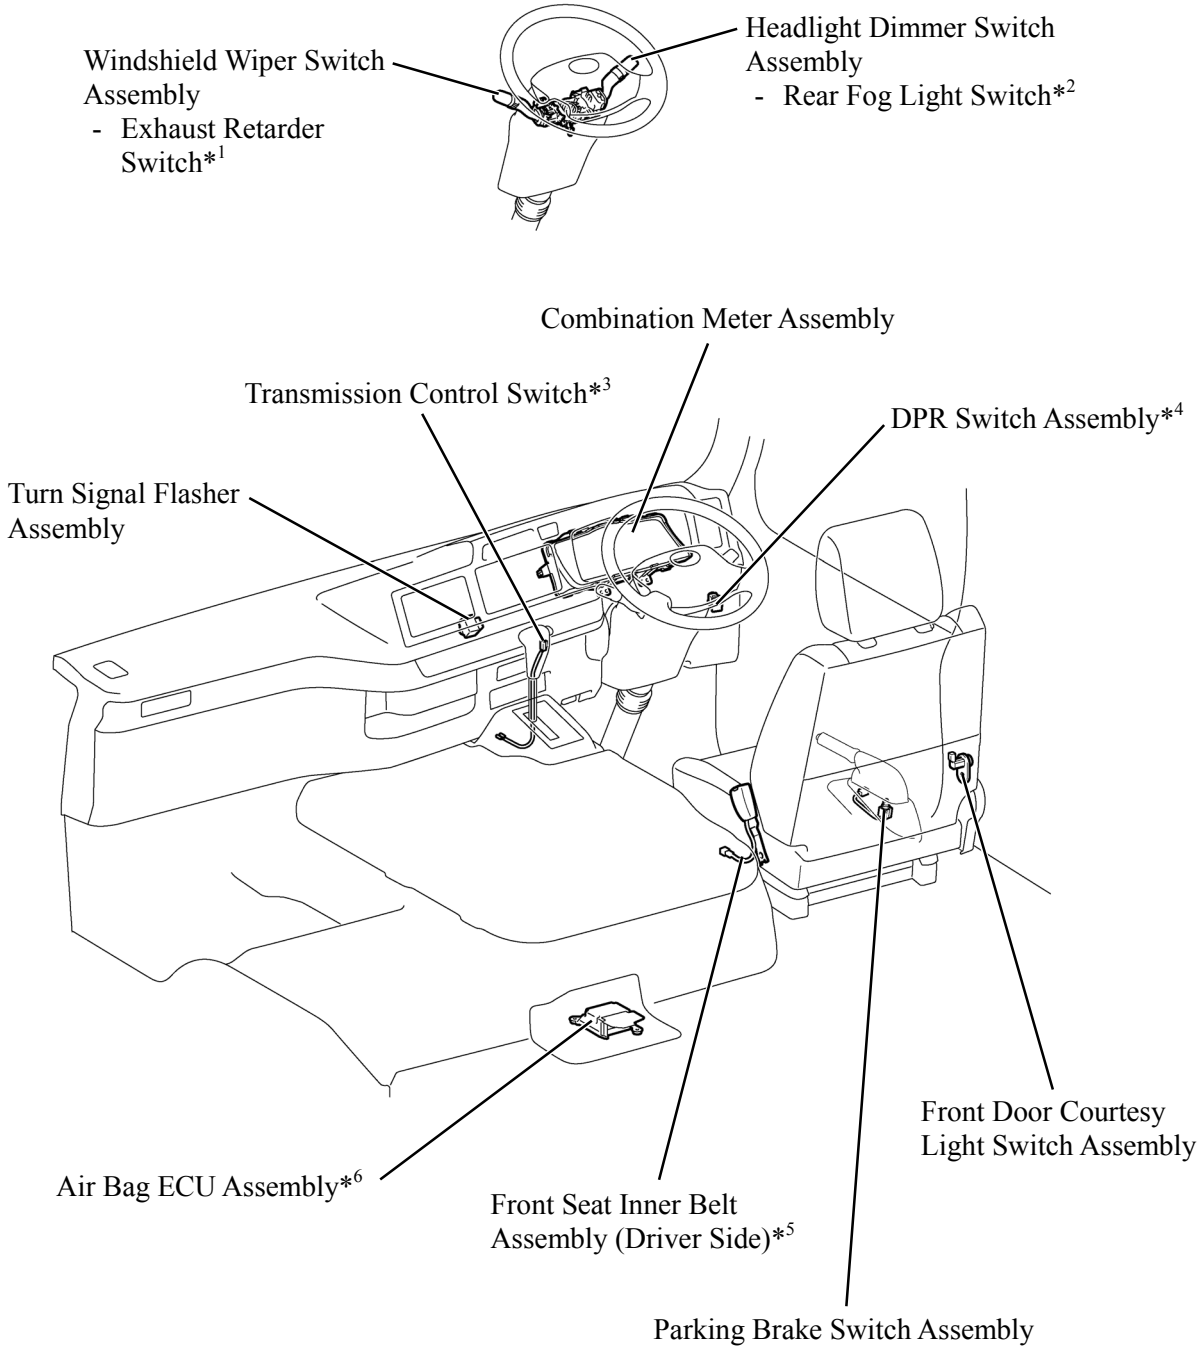


RHD Models

*1: Models with Exhaust Retarder Switch
*2: Models with Rear Fog Light
*3: Models with A/T
*4: Models with N04C-UH Engine
*5: Models with Driver Seat Belt Warning System
*6: Models with SRS Airbag System


► 14B Engine ◄

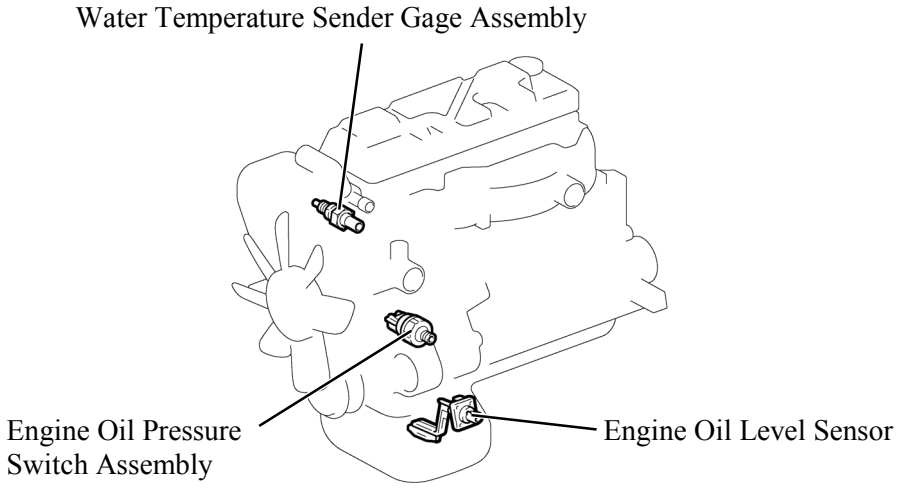


► N04C-VL, N04C-VQ and N04C-UH Engine ◄

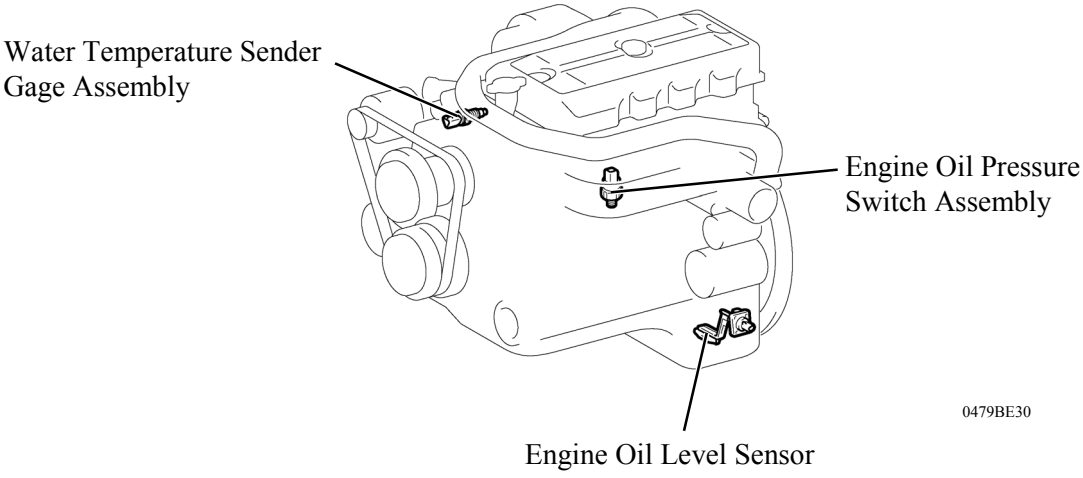


► 1HZ Engine ◄

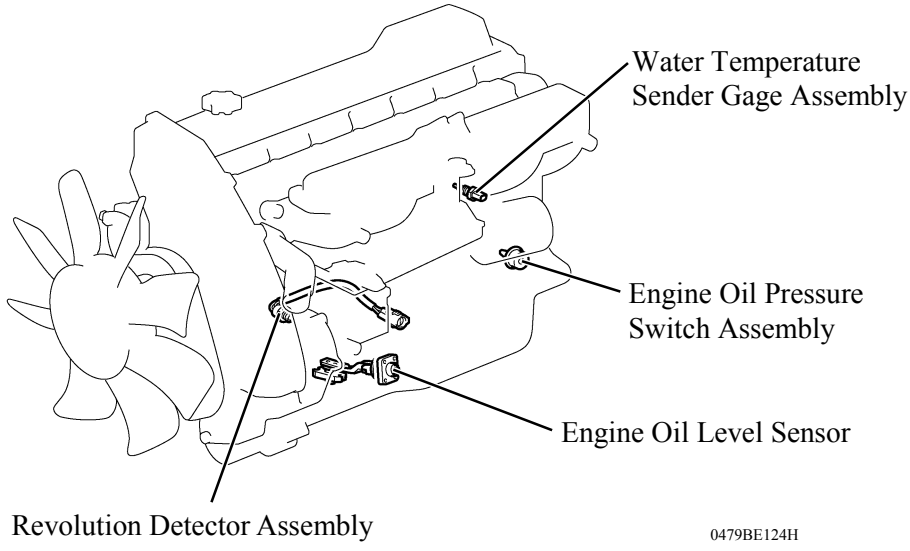


► 1BZ-FPE Engine ◄

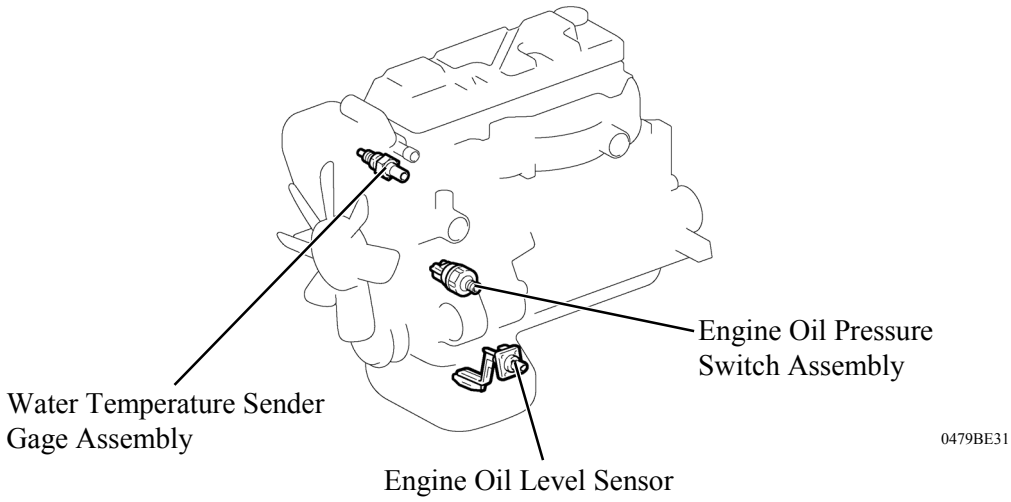

► 2TR-FE Engine ◄

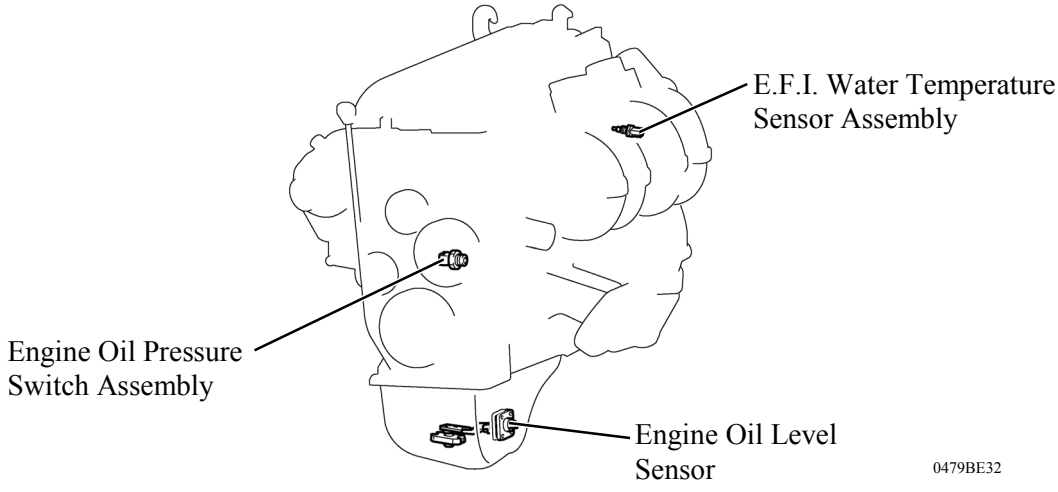


► M152, M155 and M156 Manual Transmission ◄

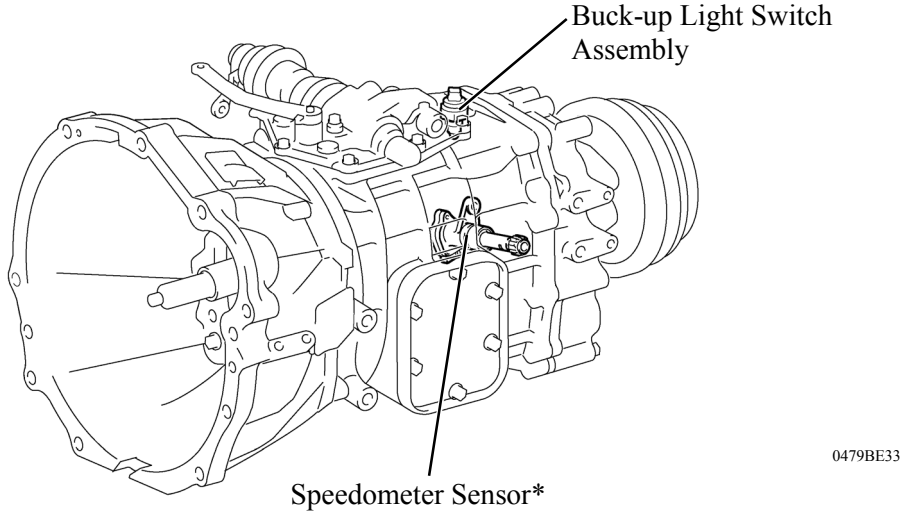

*: Models without CAN Communication System

► M551 Manual Transmission ◄

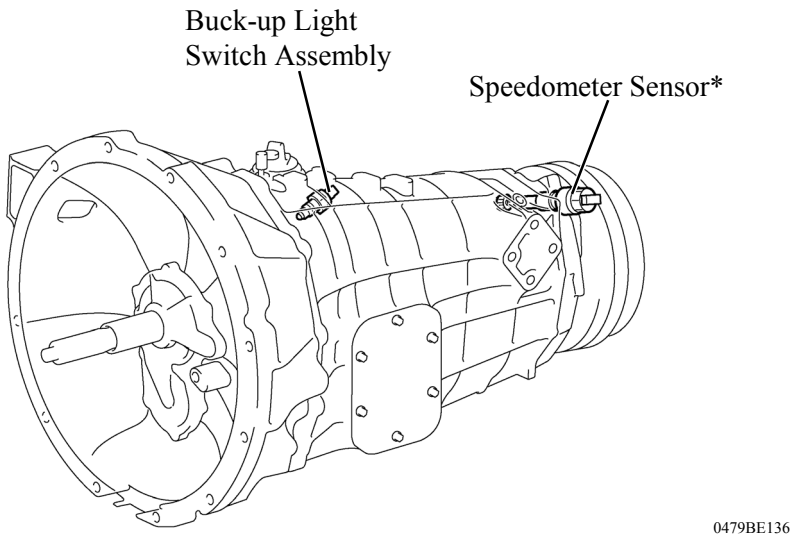

*: Models without CAN Communication System

► A444E Automatic Transmission ◄

