

■ PARTS LOCATION

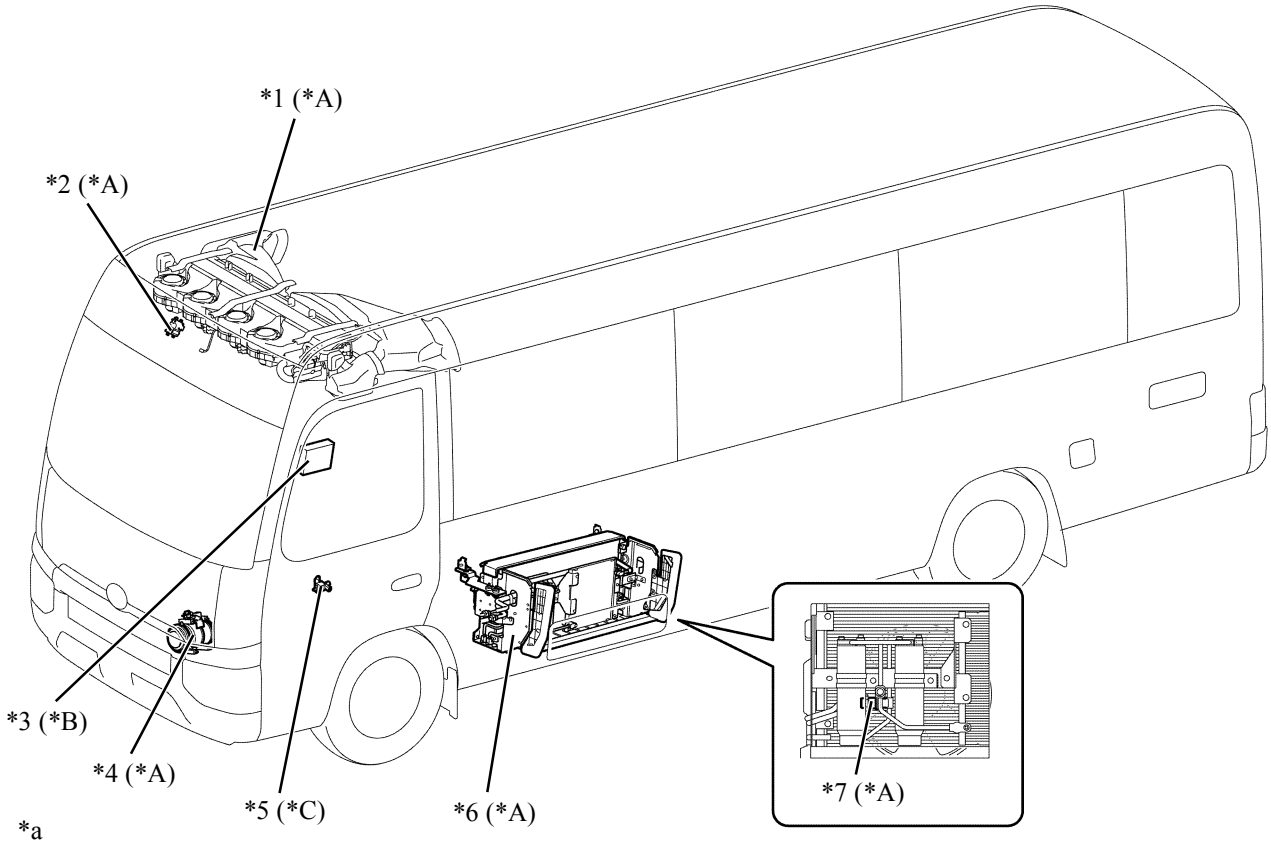

0479BE51D

► **Text in Illustration** ◄


*A	Models with Room Cooler	*B	Models without 14B or 1HZ Engine
*C	Models with Air Conditioning Idle Up VSV (Vacuum Switching Valve Assembly)	-	-
*1	Room Cooler Unit (Cooler Unit Assembly)	*2	Roof Ventilator Damper Servo Sub-assembly
*3	ECM	*4	Compressor with Magnet Clutch Assembly
*5	Air Conditioning Idle Up VSV (Vacuum Switching Valve Assembly)	*6	Condenser with Receiver Assembly
*7	No. 1 Pressure Switch	-	-
*a	The illustrations shown are examples only.	-	-

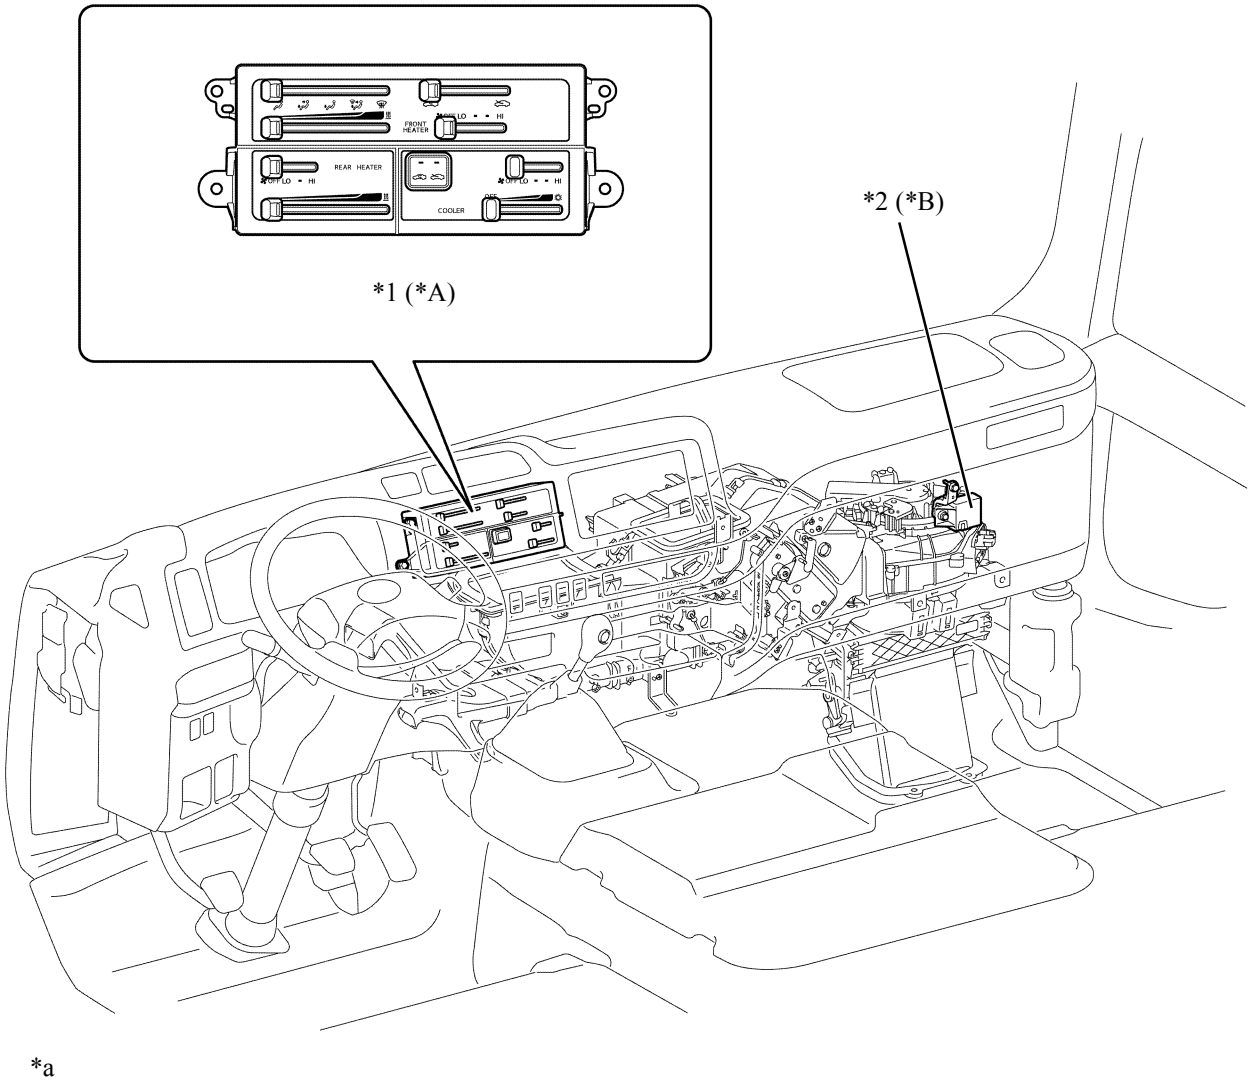

► **Text in Illustration** ◄

*A	Models with Air Conditioning Control Assembly	*B	Models with Room Cooler
*1	Air Conditioning Control Assembly	*2	Air Conditioning Amplifier Assembly
*a	The illustrations shown are examples only.	-	-


► Room Cooler Unit (Cooler Unit Assembly) ◄

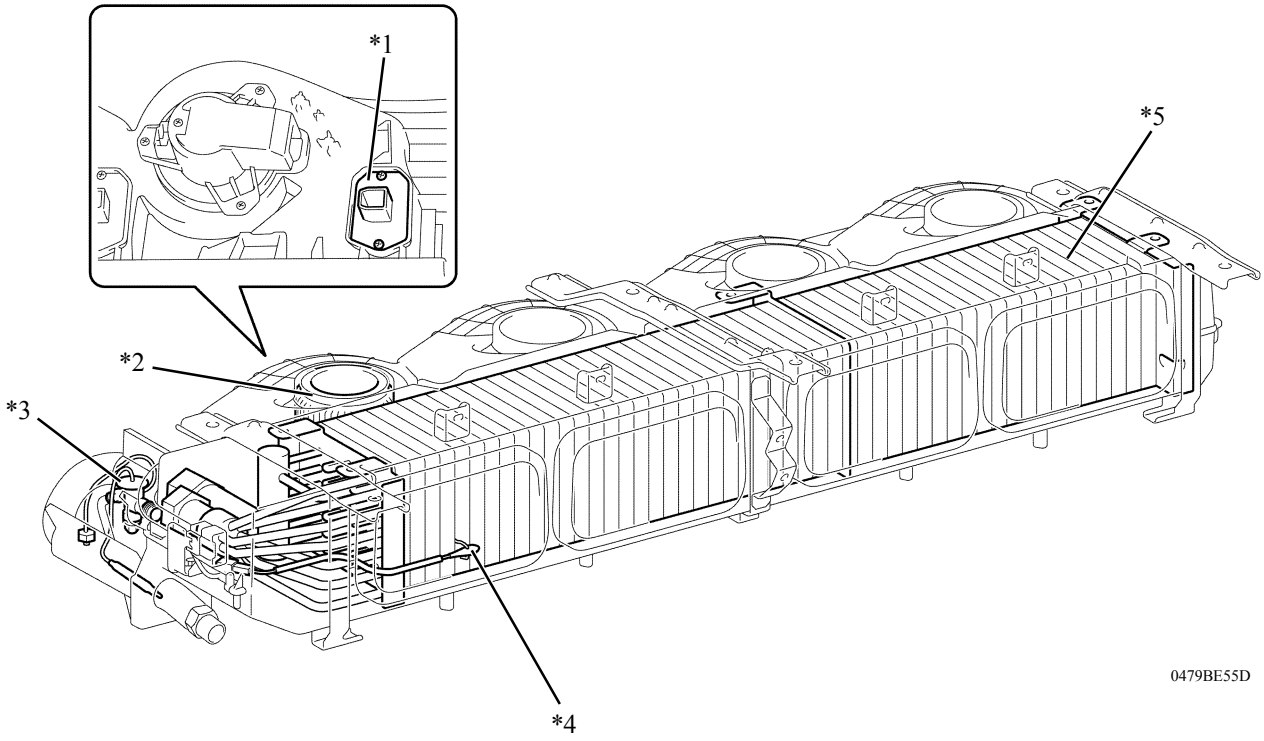

► Text in Illustration ◄

*1	Blower Resistor (Room Cooler)	*2	Room Cooler Blower Motor (Blower Motor with Fan Sub-assembly)
*3	Cooler Expansion Valve	*4	No. 1 Cooler Thermistor
*5	No. 1 Cooler Evaporator Sub-assembly	-	-

► **Front Heater Unit** ◄

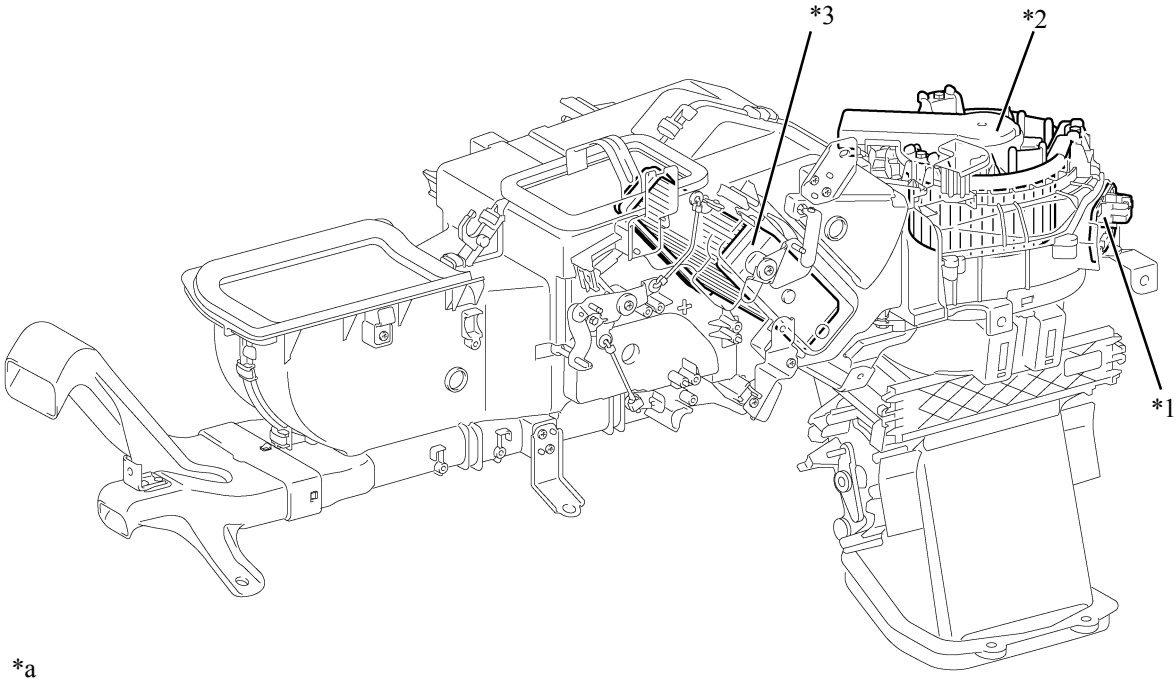


0479BE53D

► **Text in Illustration** ◄

*1	Heater Blower Resistor (Front Heater)	*2	Front Heater Blower Motor (Front Heater Blower Case Sub-assembly)
*3	Heater Radiator Unit Sub-assembly	-	-
*a	The illustrations shown are examples only.	-	-

► **Boost Ventilator Unit** ◄

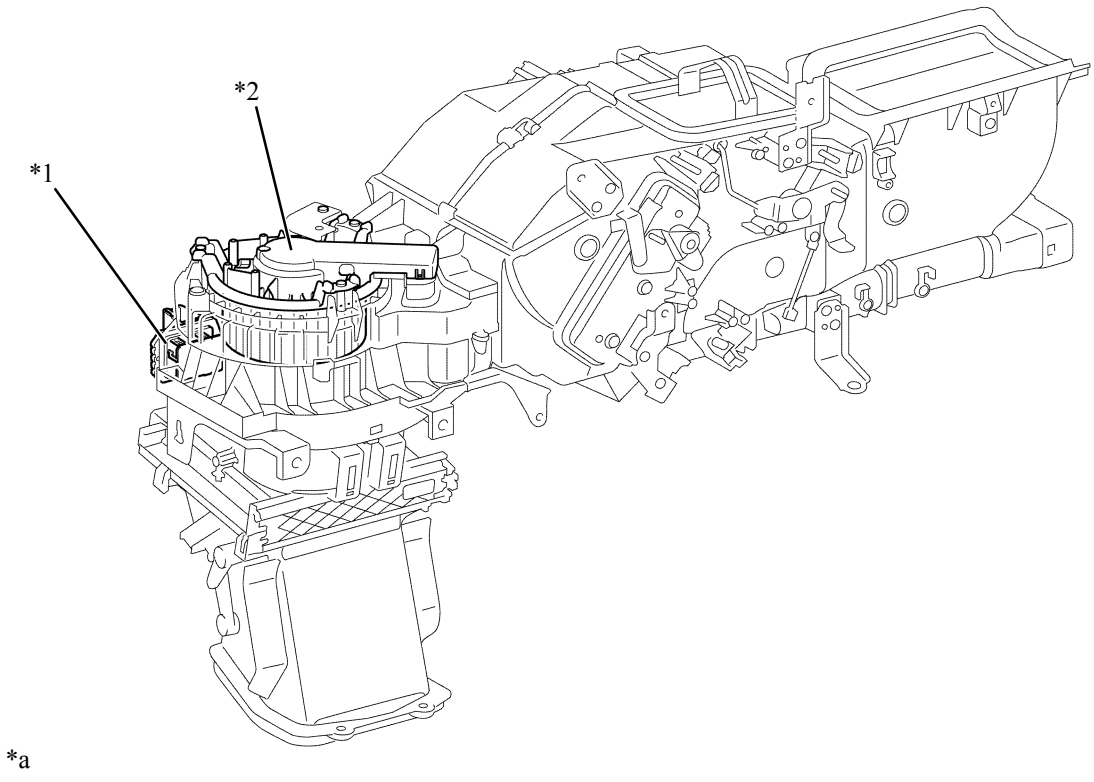


0479BE146D

► **Text in Illustration** ◄

*1	Heater Blower Resistor (Boost Ventilator)	*2	Boost Ventilator Blower Motor (Front Heater Blower Case Sub-assembly)
*a	The illustrations shown are examples only.	-	-


► **Rear Heater Unit** ◄

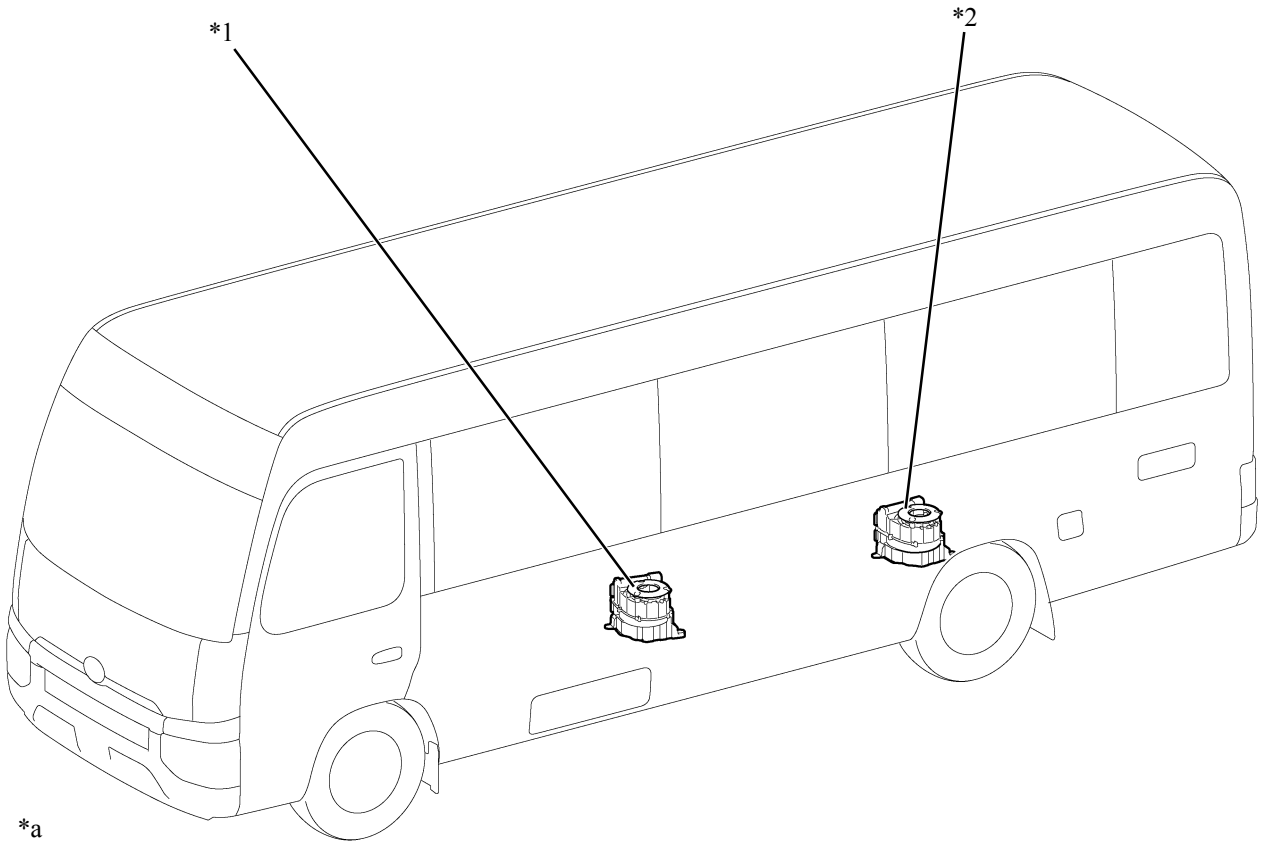

► **Text in Illustration** ◄

*1	Rear Heater Assembly	*2	No. 2 Rear Heater Assembly
*a	The illustrations shown are examples only.	-	-

► **Rear Heater Assembly and No. 2 Rear Heater Assembly** ◄

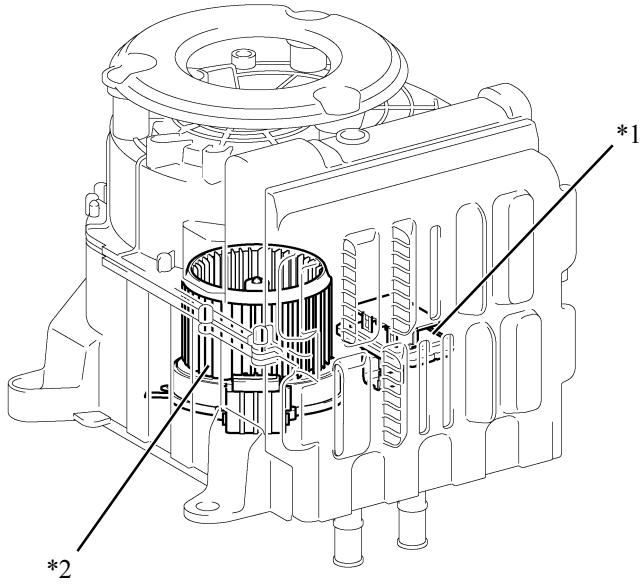

0479BE54D

► **Text in Illustration** ◄

*1	Heater Blower Resistor (Rear Heater)	*2	Rear Heater Blower Motor (Rear Heater Blower Case Sub-assembly)