
■ ROOM COOLER UNIT

A room cooler unit (cooler unit assembly) for the manual air conditioner has been adopted in the roof section at the front of the vehicle and provided depending on the specifications.


► Room Cooler Unit (Cooler Unit Assembly) Parts Location ◄

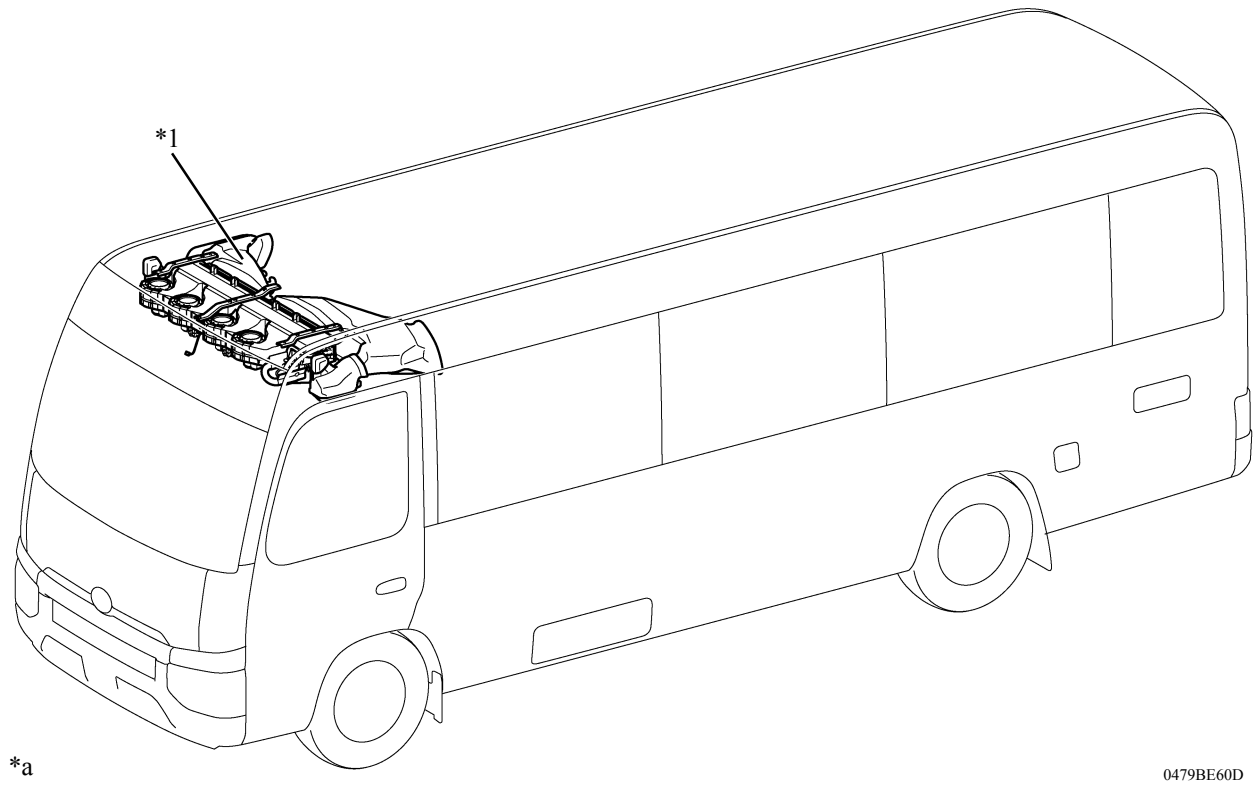

► Text in Illustration ◄

*1	Room Cooler Unit (Cooler Unit Assembly)	-	-
*a	The illustrations shown are examples only.	-	-


► Room Cooler Air Duct Parts Location ◄

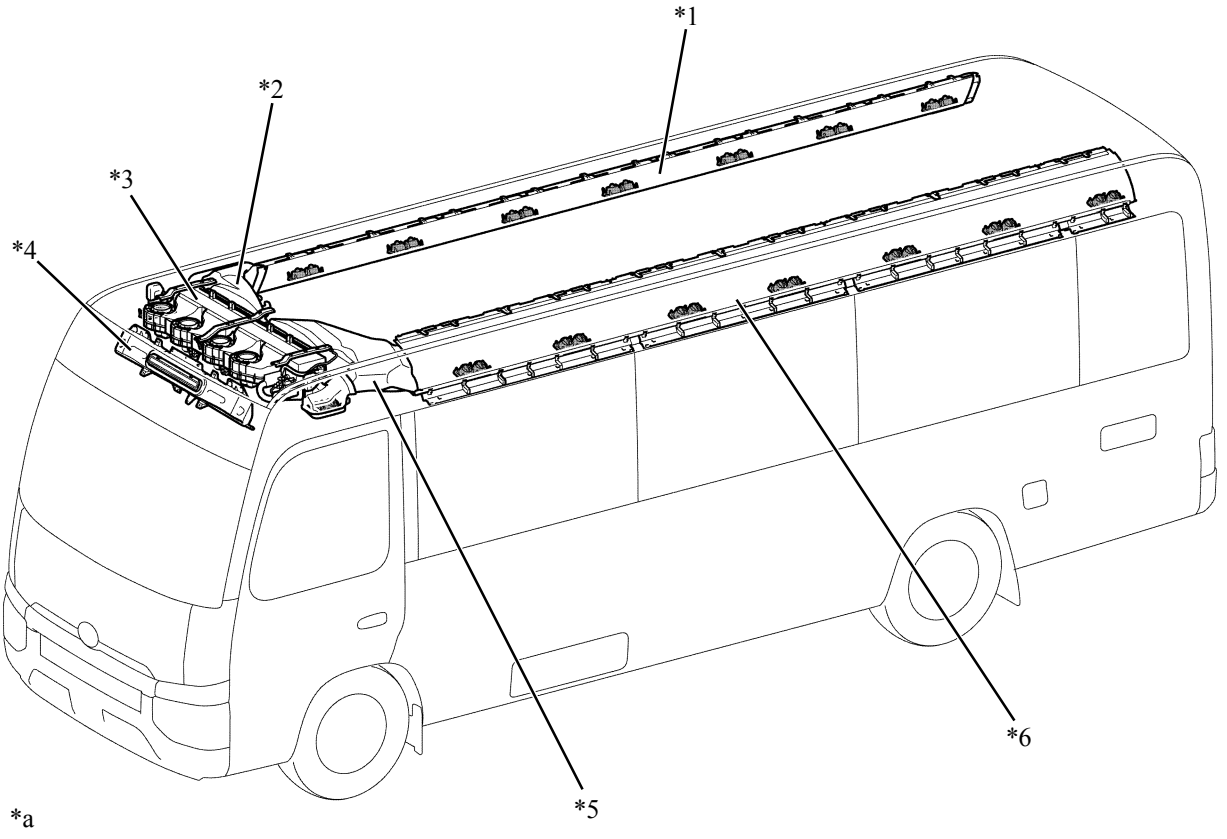

► Text in Illustration ◄

*1	Inner Cooler Duct RH	*2	No. 1 Air Duct Assembly
*3	Room Cooler Unit (Cooler Unit Assembly)	*4	Roof Ventilator Duct Assembly
*5	No. 2 Air Duct Assembly	*6	Inner Cooler Duct LH
*a	The illustrations shown are examples only.	-	-
0479BO78	No. 1 Air Outlet Register Assembly	-	-

► Room Cooler Air Outlet and Airflow ◄

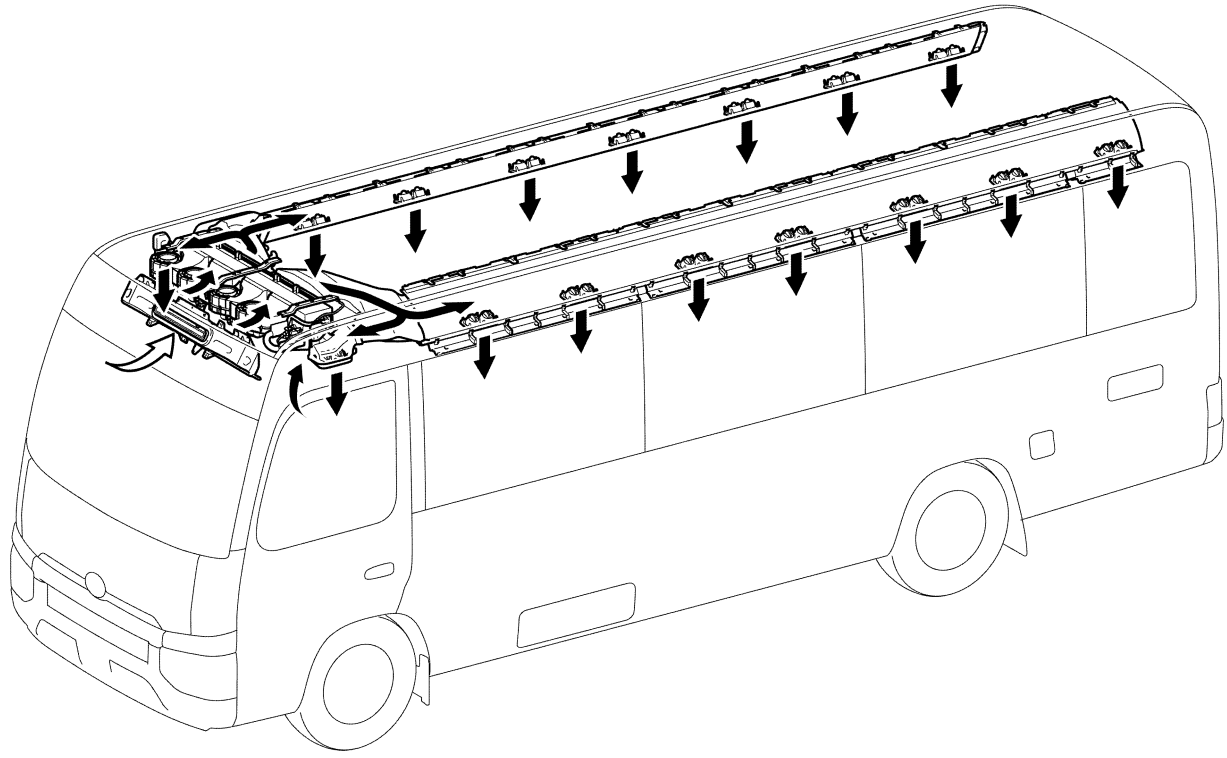

*a

0479BE62D

► Text in Illustration ◄

*a	The illustrations shown are examples only.	-	-
 0479EG26	Recirculation Airflow	 0479BE145	Fresh Airflow