
■ FRONT HEATER UNIT/ BOOST VENTILATOR UNIT

- A front heater unit for the manual air conditioner or a boost ventilator unit for the boost vent have been adopted in the instrument panel sub-assembly and provided depending on the specifications.
- A clean air filter (heater air filter) has been adopted and provided depending on the specifications.


► Front Heater Unit Parts Location ◄

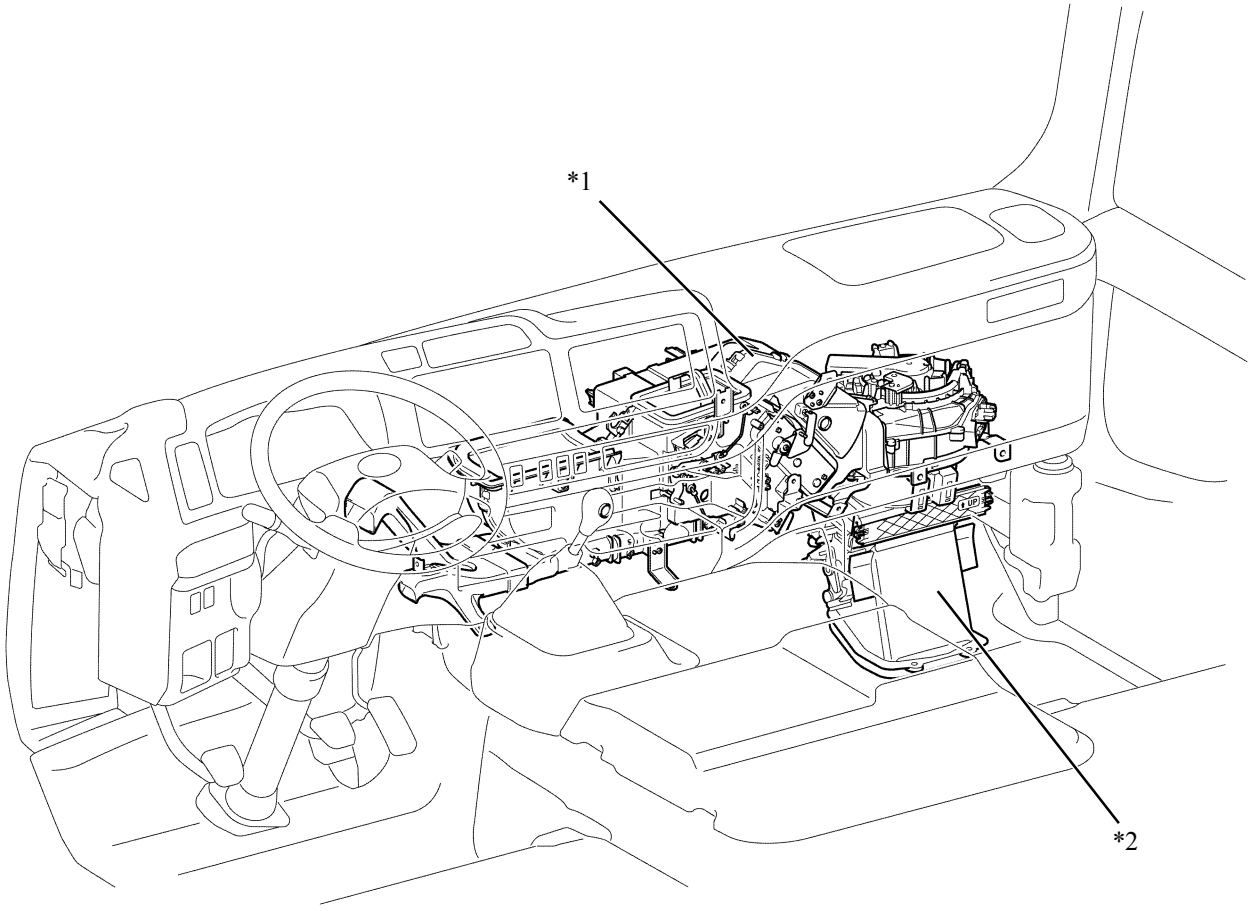

► Text in Illustration ◄

*1	Heater Assembly	*2	Air Damper Case Assembly
*a	The illustrations shown are examples only.	-	-


► Boost Ventilator Unit Parts Location ◄

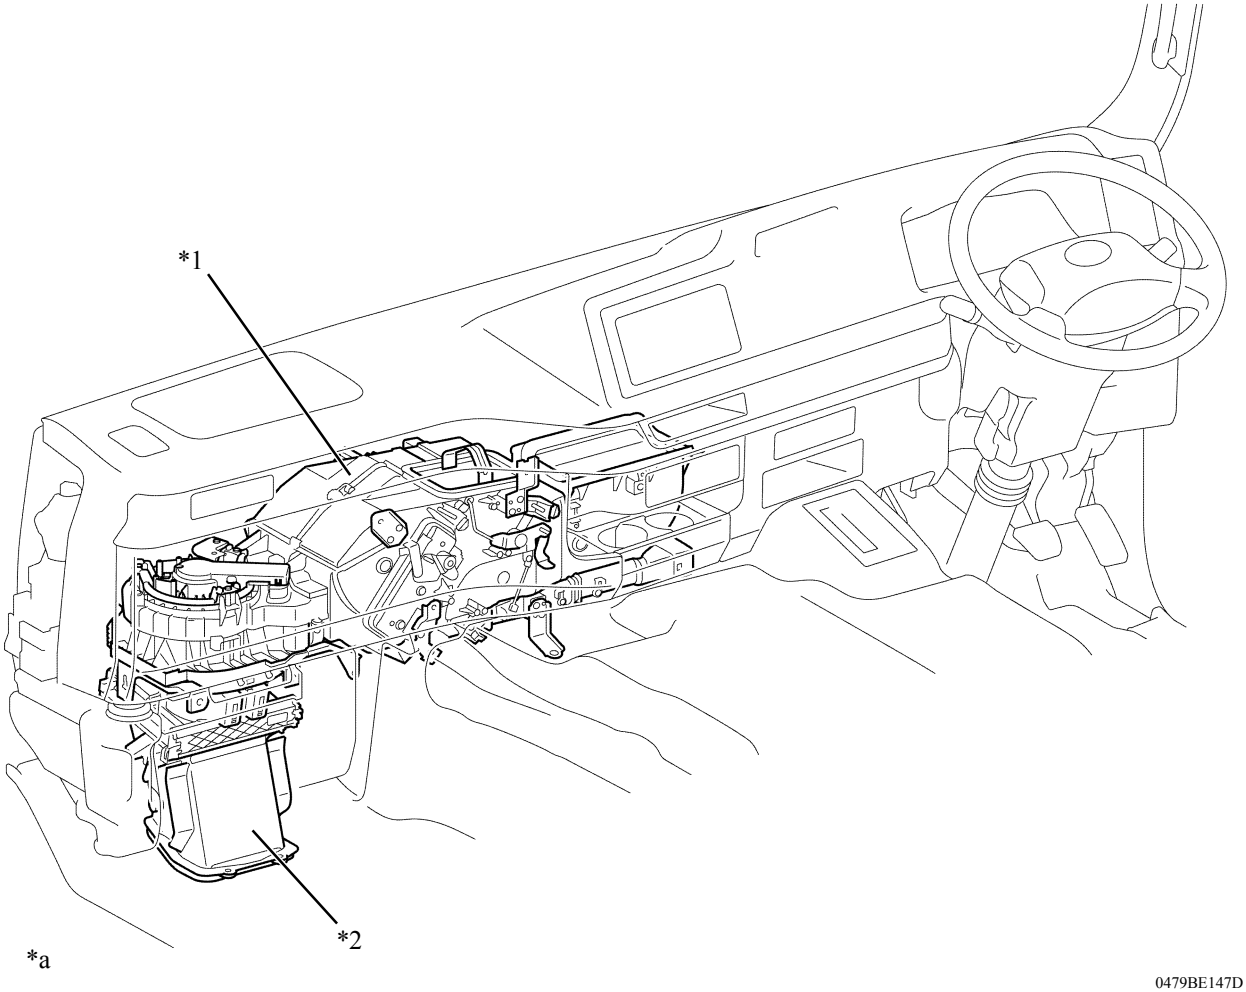

► Text in Illustration ◄

*1	Boost Ventilator Assembly	*2	Air Damper Case Assembly
*a	The illustrations shown are examples only.	-	-


► **Front Heater Duct Parts Location** ◄

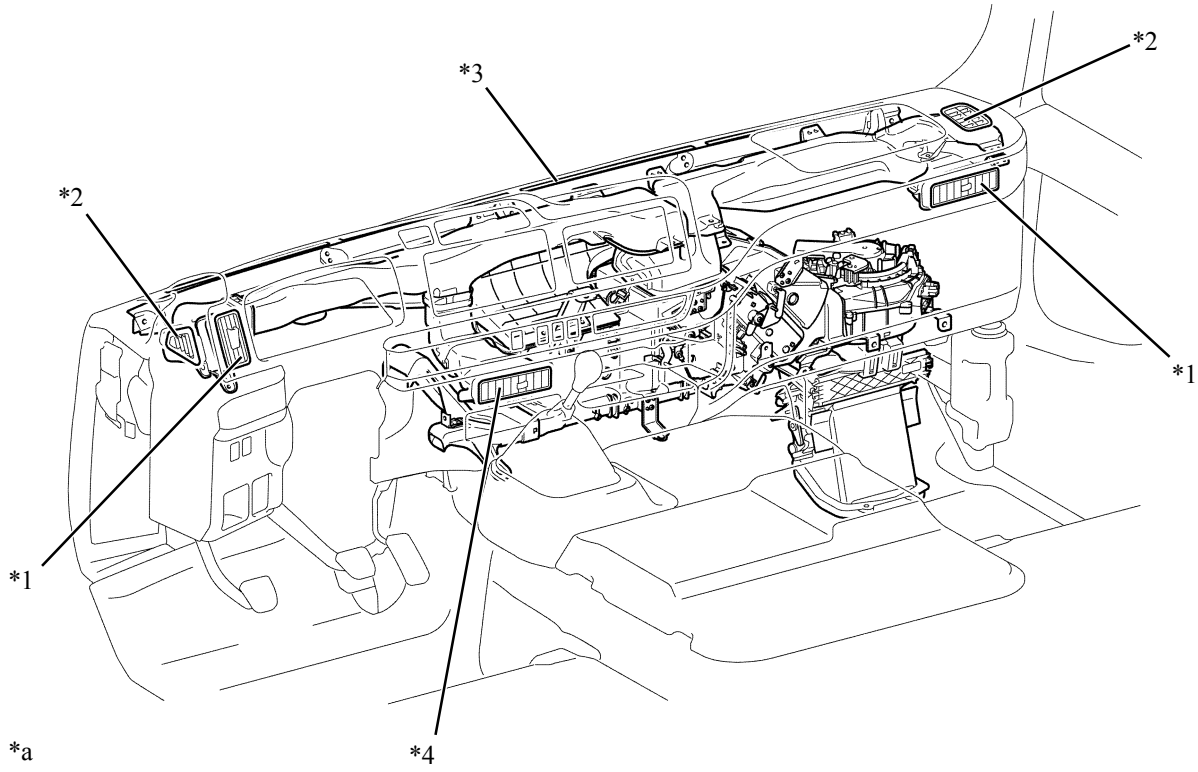

► **Text in Illustration** ◄

*1	Side Register	*2	Side Defroster
*3	Front Defroster	*4	Center Register
*a	The illustrations shown are examples only.	-	-


► Boost Ventilator Duct Parts Location ◄

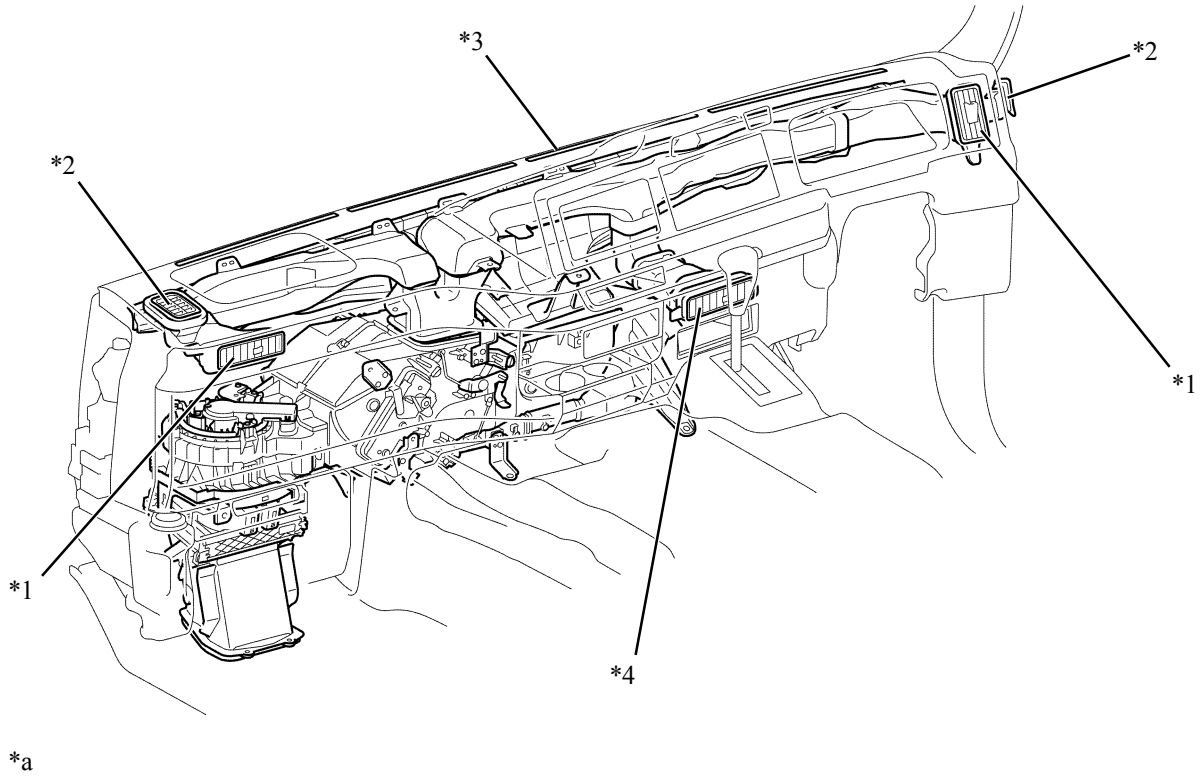

► Text in Illustration ◄

*1	Side Register	*2	Side Defroster
*3	Front Defroster	*4	Center Register
*a	The illustrations shown are examples only.	-	-

► Mode Position and Damper Operation (Models with Front Heater) ◄

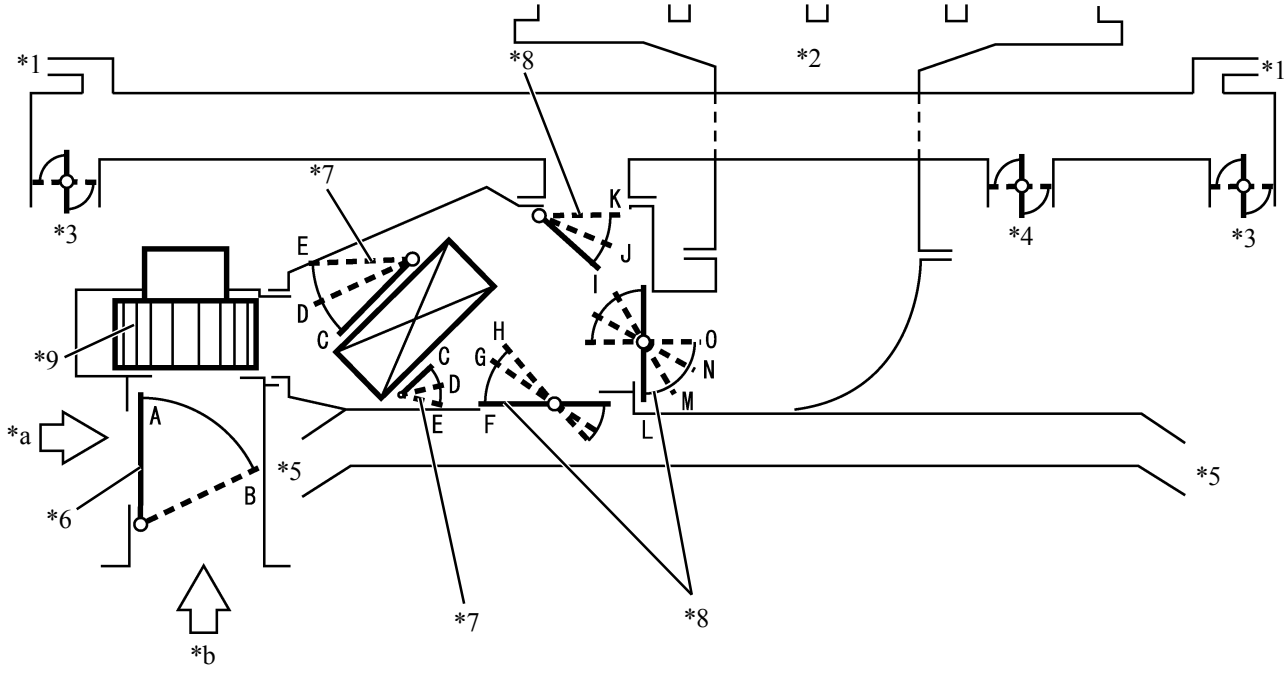


0479BE123

► Text in Illustration ◄

*1	Side Defroster	*2	Front Defroster
*3	Side Register	*4	Center Register
*5	Footwell Register Duct	*6	Recirculation/Fresh Air Control Door
*7	Air Mix Control Door	*8	Mode Control Door
*9	Front Heater Blower Motor (Front Heater Blower Case Sub-assembly)	-	-
*a	Recirculation Air	*b	Fresh Air
*c	This illustration is a model diagram showing the door positions in each mode. The parts layout and the number of the door in the illustration are different from those of the actual system.	-	-

Control Door	Operation Position	Door Position	Operation
Recirculation/Fresh Air Control Door	FRESH	A	Brings in fresh air.
	RECIRCULATION	B	Recirculates internal air.
Air Mix Control Door	MAX COLD to MAX HOT	E to D to C	Varies the mixture ratio of the cold air and the hot air in order to regulate the temperature continuously from HOT to COLD.
Mode Control Door	DEF	F, I, O	Air blows out of the front defroster, side defroster, center register and side register.
	FOOT/DEF	G, J, N	Air blows out of the front defroster, side defroster, center register, side register and footwell register duct.
	FOOT	H, K, M	Air blows out of the center register, side register and footwell register duct. In addition, air blows out slightly from the front defroster and side defroster.
	BI-LEVEL	G, J, L	Air blows out of the center register, side register and footwell register duct. In addition, air blows out slightly from the side defroster.
	FACE	F, I, L	Air blows out of the side defroster, center register and side register.

1. Air Outlets and Airflow Volume (Models with Front Heater)

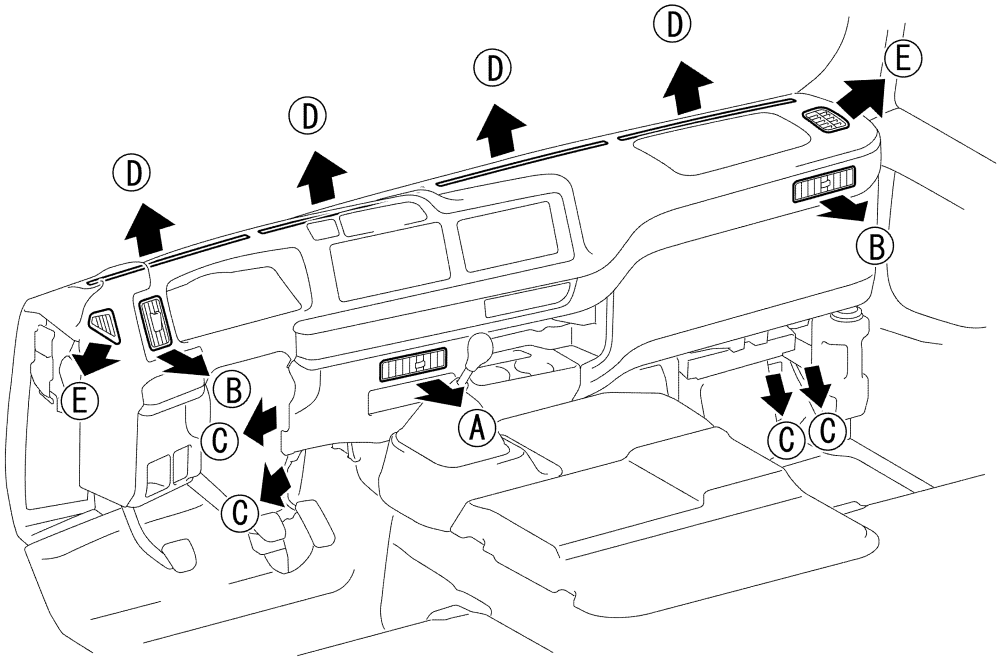

MODE		Ⓐ	Ⓑ	Ⓒ	Ⓓ	Ⓔ
	FACE	○	○	—	—	○
	B/L	○	○	○	—	○
	FOOT	○	○	○	○	○
	F/D	○	○	○	○	○
	DEF	○	○	—	○	○

The size of the circle "o" indicates the proportion of air flow volume.

The illustrations shown are examples only.

0479BE59D