

■ PARTS LOCATION

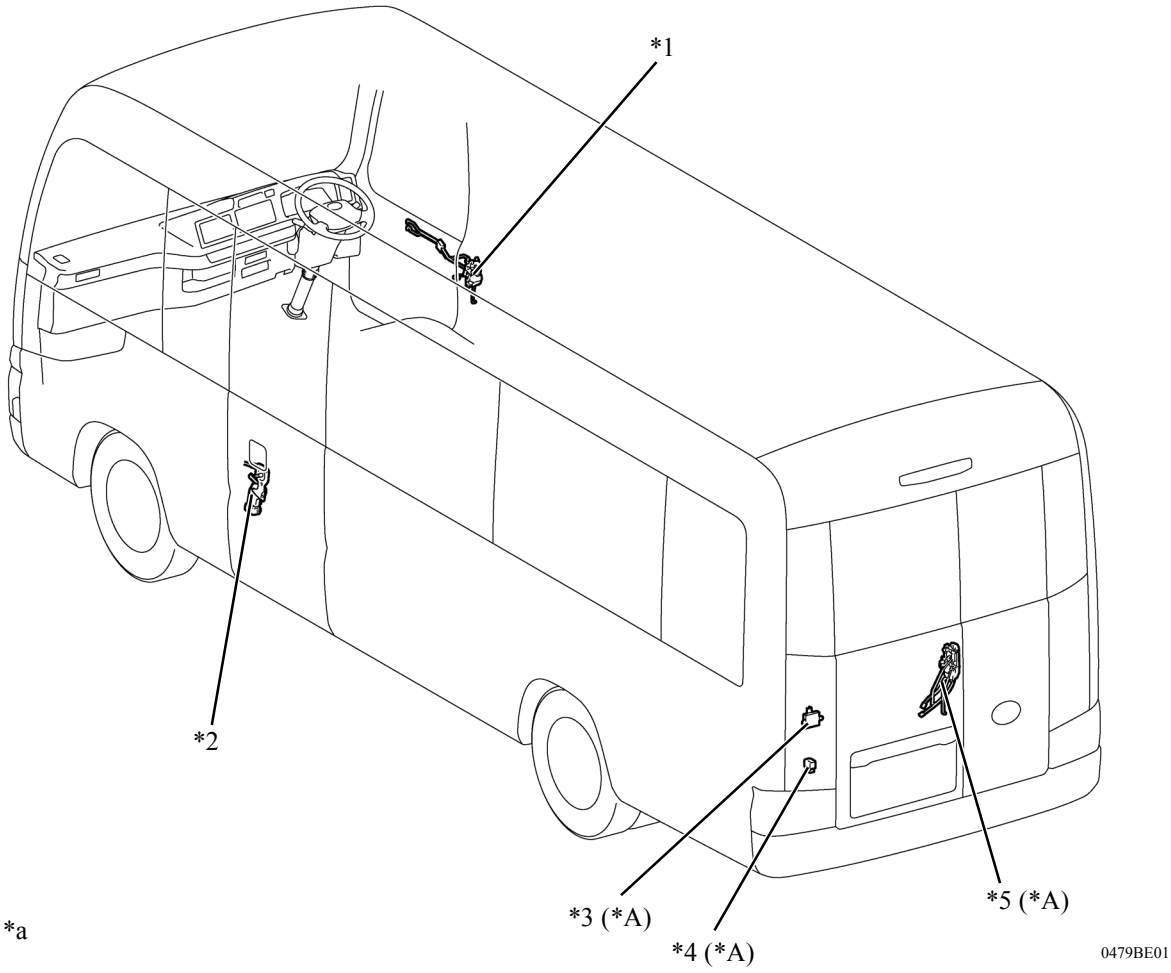

Text in Illustration

*A	Models with IG ON Unlock System	-	-
*1	Front Door Lock Assembly RH · Key Link Switch (Door Lock Switch RH)	*2	Center Door Lock (Door Control Motor Assembly)
*3	No. 2 Door Lock Relay Assembly	*4	No. 1 Door Lock Relay Assembly
*5	Back Door Lock Assembly	-	-
*a	The illustrations shown are examples only.	-	-

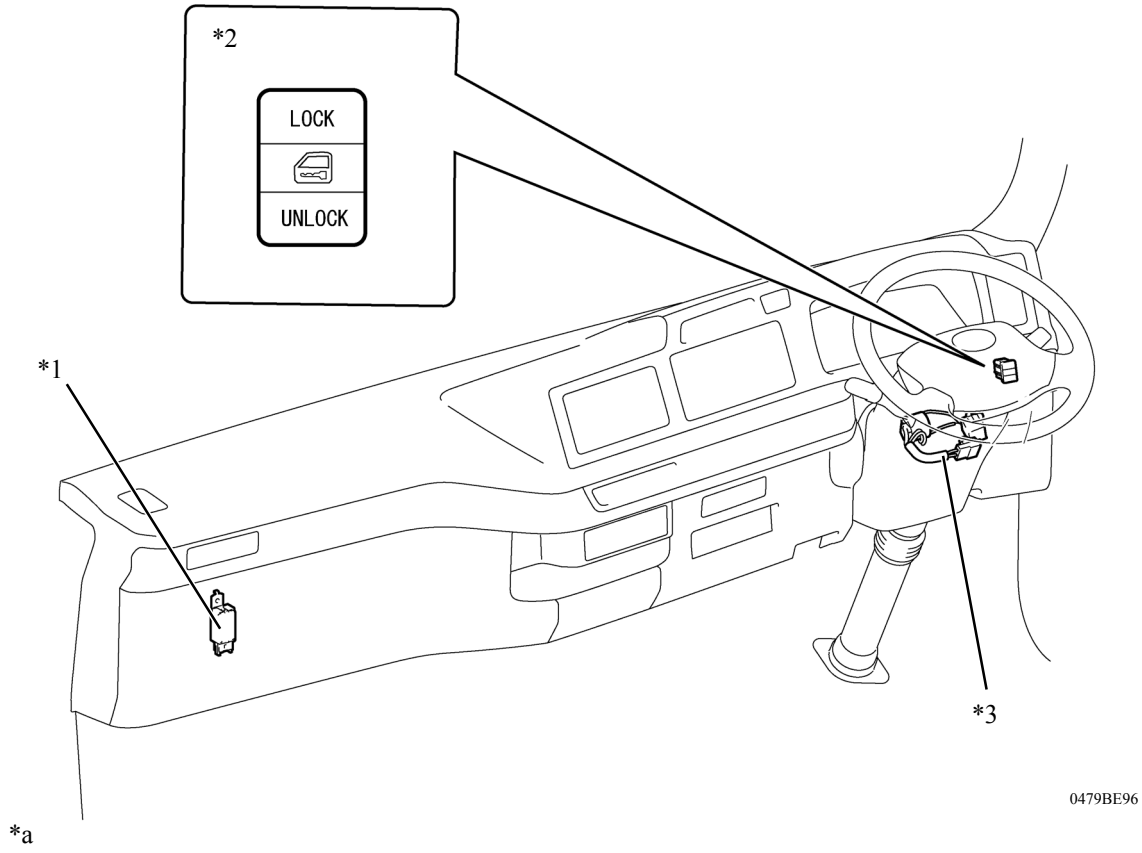

Text in Illustration

*1	Door Control Relay	*2	Door Lock Unlock Switch
*3	Ignition or Starter Switch Assembly	-	-
*a	The illustrations shown are examples only.	-	-