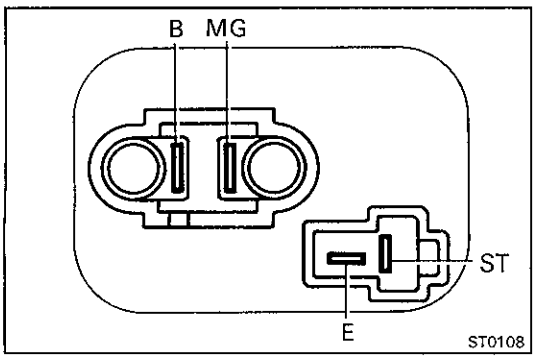
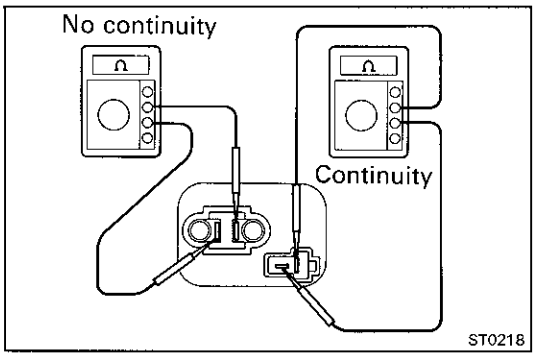



# STARTER RELAY (HZB and HDB)

LOCATION: Inside wall adjacent to center door.



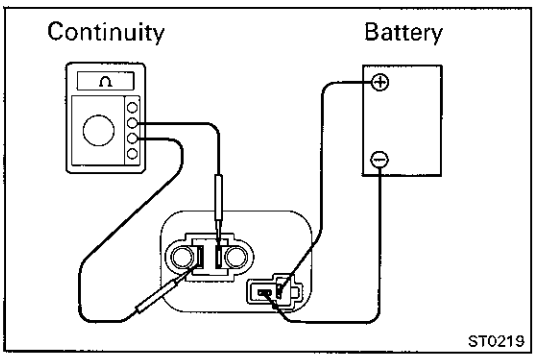

## INSPECTION OF STARTER RELAY

### 1. INSPECT RELAY CONTINUITY

(a) Using an ohmmeter, check that there is continuity between terminals E and ST.

(b) Check that there is no continuity between terminals B and MG.

If continuity is not as specified, replace the relay.




### 2. INSPECT RELAY OPERATION

(a) Apply battery voltage across terminals E and ST.

(b) Using an ohmmeter, check that there is continuity between terminals B and MG.

If operation is not as specified, replace the relay.