
# VOLTAGE CONVERTER TIMER (HZJ80 and HDJ80) (w/ 24 V Starter)

LOCATION: In the cowl on the passenger's side.

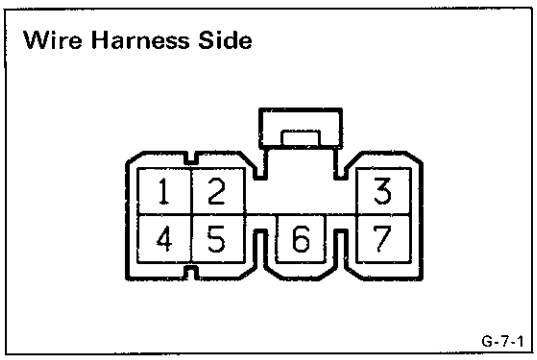


## INSPECTION OF VOLTAGE CONVERTER TIMER

### INSPECT VOLTAGE CONVERTER TIMER

Disconnect the connector from the voltage converter timer, and check the connector on the wire harness side as shown in the following chart.

| Check for | Tester connection | Condition | Specified value |
|---|---|---|---|
| Voltage | 1 – Ground | Turn starter switch OFF | No voltage |
| | | Turn starter switch START | Battery voltage |
| Voltage | 2 – Ground | Turn starter switch OFF | No voltage |
| | | Turn starter switch ON | Battery voltage |
| Voltage | 3 – Ground | Turn starter switch OFF | No voltage |
| | | Turn starter switch START | Battery voltage |
| Continuity | 4 – Ground | – | Continuity |
| Continuity | 5 – 6 | – | Continuity |
| Continuity | 7 – Ground | – | Continuity |