
FRONT HEATER UNIT


AC0UK-01

FRONT HEATER UNIT REMOVAL


1. **DRAIN ENGINE COOLANT FROM RADIATOR**
   HINT: It is not necessary to drain out all the coolant.
2. **REMOVE RADIATOR GRILLE**

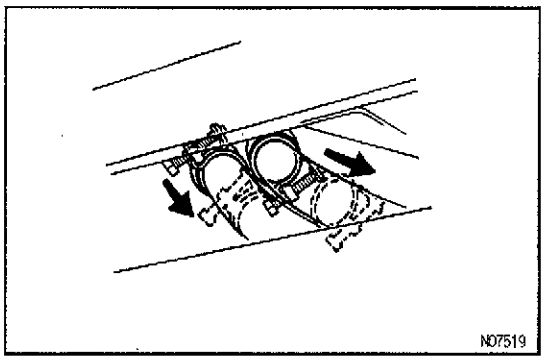

3. **DISCONNECT WATER HOSES FROM HEATER RADIATOR**
   (a) Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.
   (b) Disconnect the water hoses.
4. **REMOVE WIPER MOTOR**
   (See page BO–45)

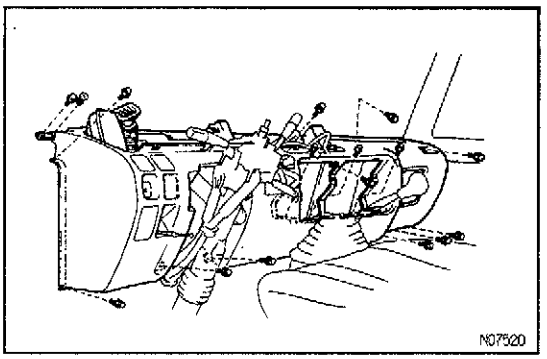



5. **REMOVE INSTRUMENT PANEL**
   (See page BO–71)

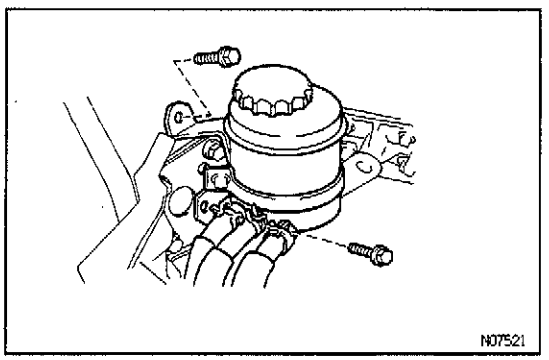


6. **REMOVE RESERVOIR TANK**
   Remove the 2 bolts and the reservoir tank.

7. **DISCONNECT CONNECTORS AND WIRE HARNESS CLAMP**
8. **REMOVE COLUMN MOUNTING BOLTS**
   Remove the 4 column mounting bolts.
9. **REMOVE NO. 1 AND NO. 5 INSTRUMENT PANEL REINFORCEMENTS**
   Remove the 7 bolts and the 2 nuts and the reinforcements.
10. **REMOVE NO.2 INSTRUMENT PANEL REINFORCEMENT**
    Remove the 11 bolts and the reinforcement.

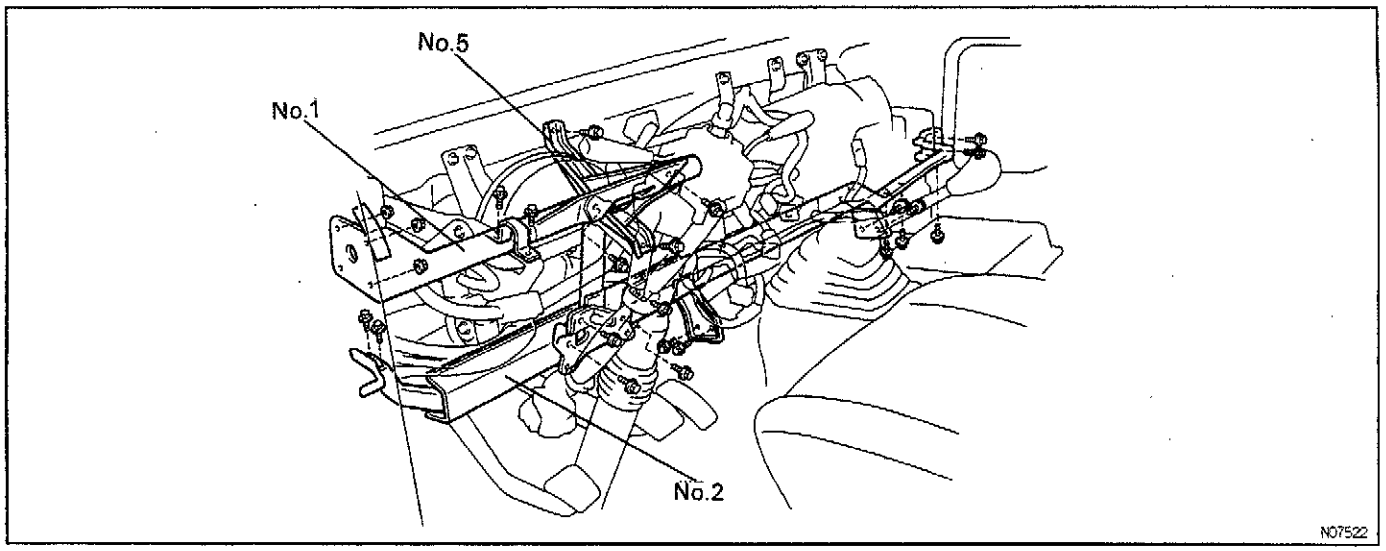

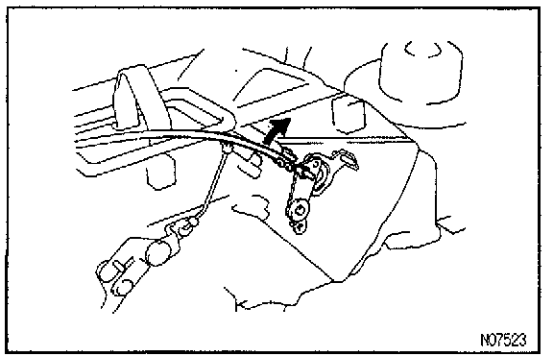


11. **DISCONNECT AIR MIX DAMPER CONTROL CABLE**

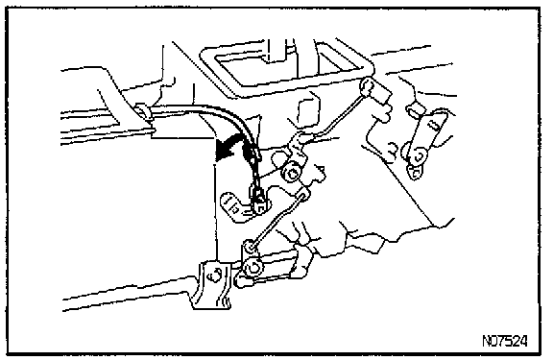


12. **DISCONNECT MODE DAMPER CONTROL CABLE**

13. REMOVE FRONT HEATER UNIT


Remove the 6 bolts and the heater unit.

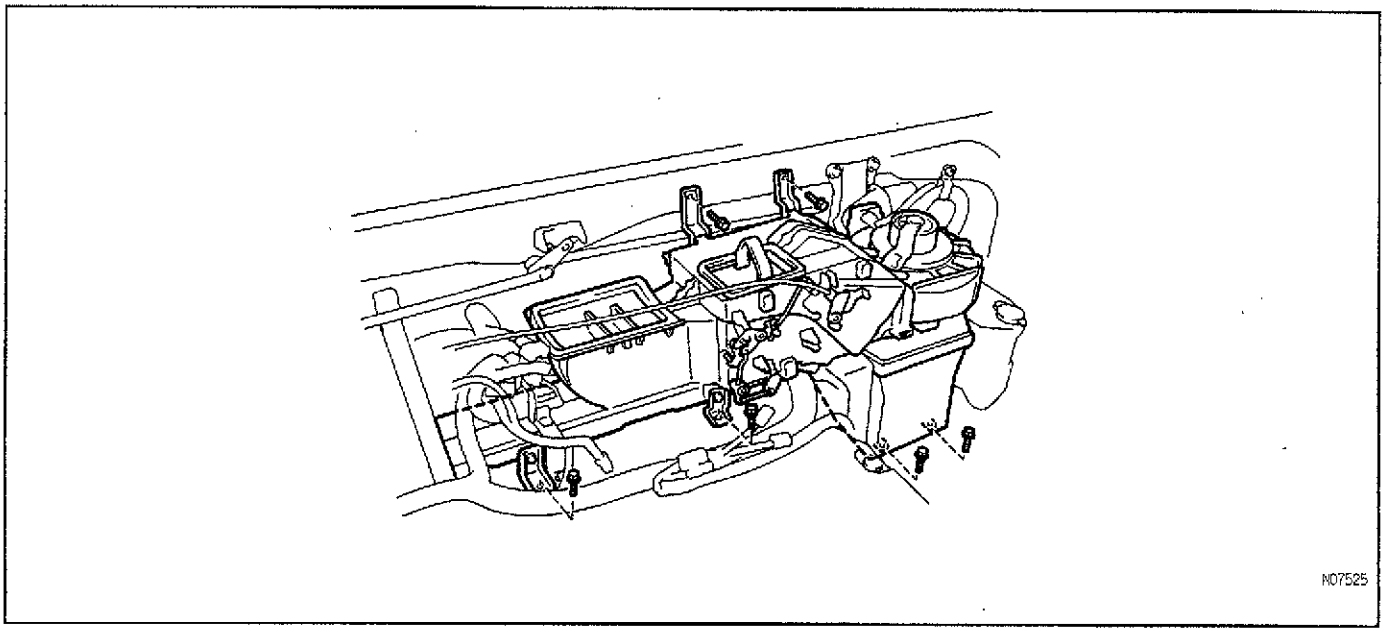

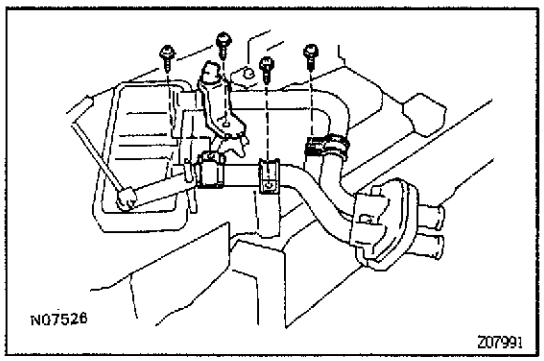

14. REMOVE FRONT HEATER RADIATOR

Remove the 4 screws and pull out the heater radiator.

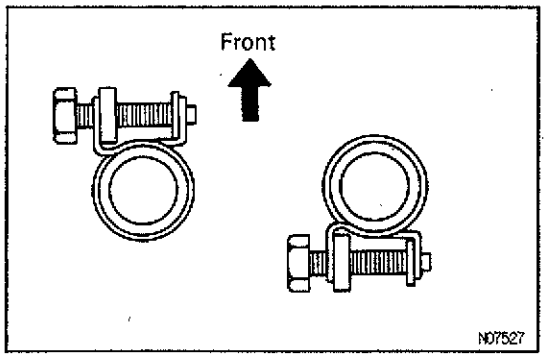

FRONT HEATER UNIT INSTALLATION

ACOUL-01

Install by following the removal procedure in reverse order.

HINT:

- Push the water hose onto the heater radiator pipe as far as the ridge on the pipe.
- Install the hose clip in position, as shown in the illustration.
- For installing the control cable, refer to "A/C Control Cables Adjustment".