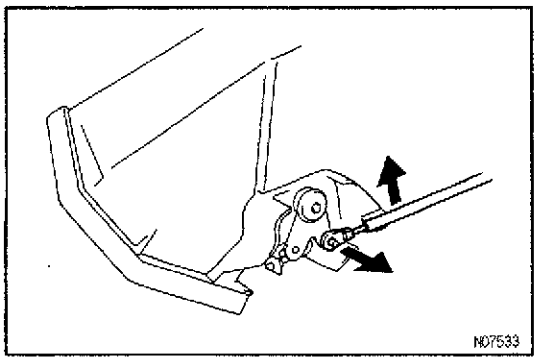



FRONT BLOWER UNIT

FRONT BLOWER UNIT REMOVAL


ACOUF-01

REMOVE FRONT BLOWER UNIT

(a) Disconnect the air inlet control cable from the air conditioning control assembly.

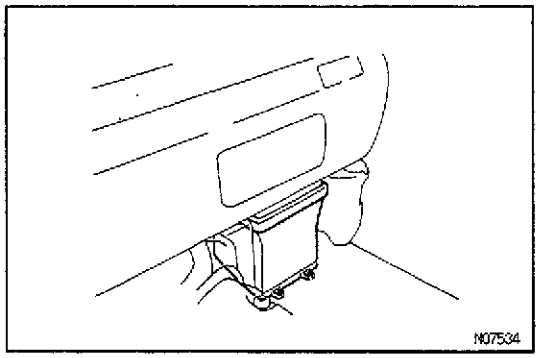

(b) Remove the 2 bolts and the air damper case.

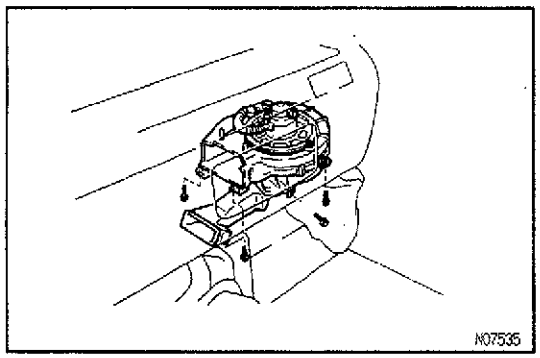

(c) Disconnect the connector.
(d) Remove a bolt and the air duct.
(e) Remove the 3 bolts and the blower unit.

AC

FRONT BLOWER UNIT INSTALLATION

ACOUG-01

Install by following the removal procedure in reverse order.

HINT: For installing the control cable, refer to "Air Conditioning Control Cables Adjustment".