
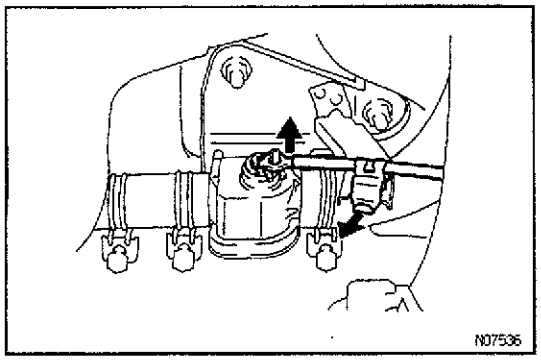


WATER VALVE


AC0U7-01

WATER VALVE REMOVAL

1. **DRAIN ENGINE COOLANT FROM RADIATOR**
   HINT: It is not necessary to drain out all the coolant.
2. **DISCONNECT WATER VALVE CONTROL CABLE**

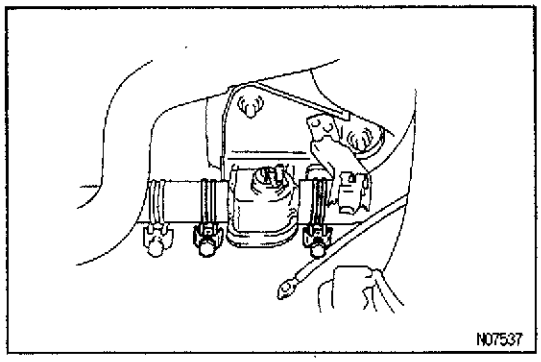


3. **DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPE AND WATER VALVE**
   (a) Slide the clip along the hose to a place where it does not clamp the hose to the pipe.
   (b) Disconnect the water hoses.

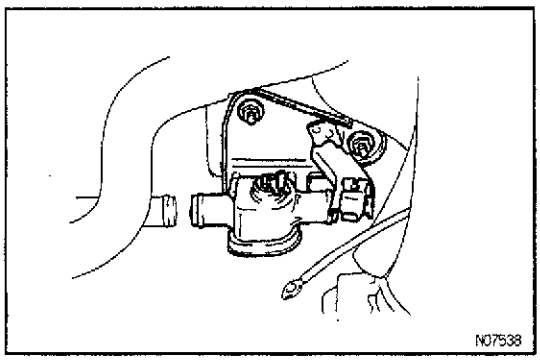

4. **REMOVE WATER VALVE**
   Remove the 2 bolts and the water valve.

AC

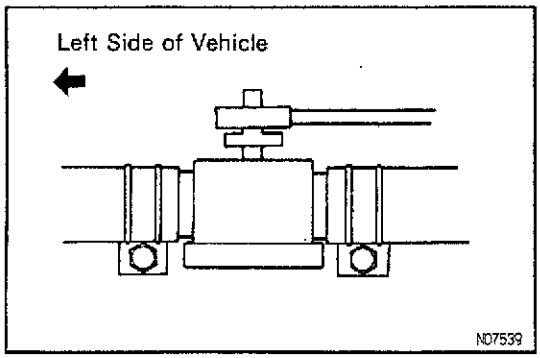

WATER VALVE INSTALLATION

AC0U8-01

Install by following the removal procedure in reverse order.
HINT:

- Push the water hose onto the heater radiator pipe as far as the ridge on the pipe.
- Install the hose clip in position, as shown in the illustration.
- For installing the control cable, refer to "A/C Control Cables Adjustment".