
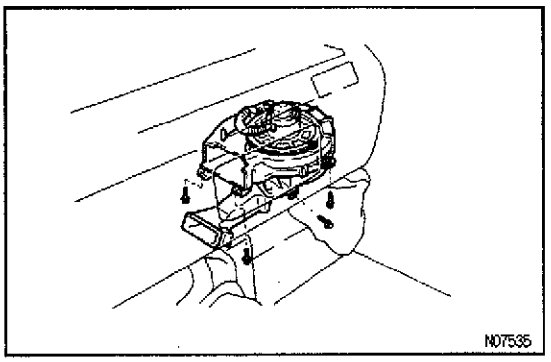


FRONT BLOWER MOTOR

FRONT BLOWER MOTOR REMOVAL


AC0U4-01

1. **DISCONNECT NEGATIVE (–) CABLE FROM BATTERY**
2. **REMOVE FRONT BLOWER UNIT**
   (See page AC–43)

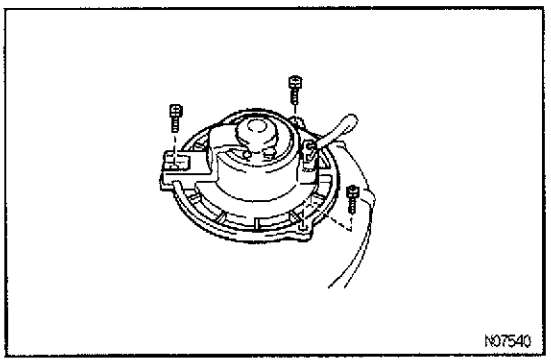

3. **REMOVE FRONT BLOWER MOTOR**

(a) Disconnect the connector from the blower motor.
(b) Remove the 3 screws and the blower motor.

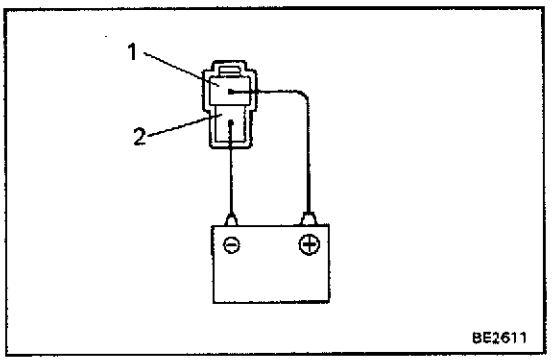


FRONT BLOWER MOTOR INSPECTION

AC07W-02

INSPECT FRONT BLOWER MOTOR OPERATION

Connect the position (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2, then check that the motor operation is smooth.

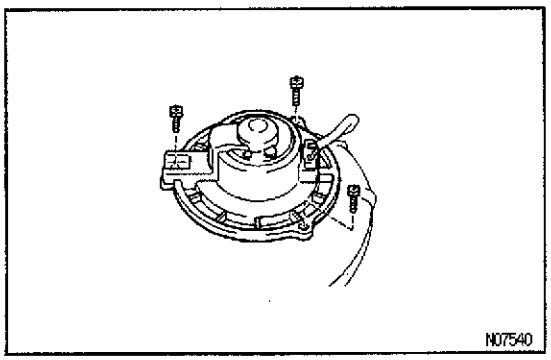

FRONT BLOWER MOTOR INSTALLATION

AC0U5-01

1. **INSTALL FRONT BLOWER MOTOR**

(a) Install the blower motor with the 3 screws.
(b) Connect the connector to the blower motor.

2. **INSTALL FRONT BLOWER UNIT**
   (See page AC–43)