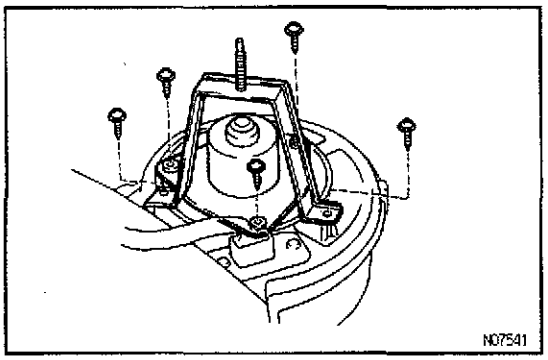


REAR BLOWER MOTOR

AC07X–03

REAR BLOWER MOTOR REMOVAL

1. **REMOVE REAR BLOWER UNIT**
   (See page AC–44)
2. **REMOVE REAR BLOWER MOTOR**

(a) Remove the 2 screws and the bracket.
(b) Remove the 3 screws from the motor.
(c) Remove the rear blower motor from the rear blower unit.

REAR BLOWER MOTOR INSPECTION

(See "Front Blower Motor Inspection" on page AC–68.)

REAR BLOWER MOTOR INSTALLATION

Install by following the removal procedure in reverse order.