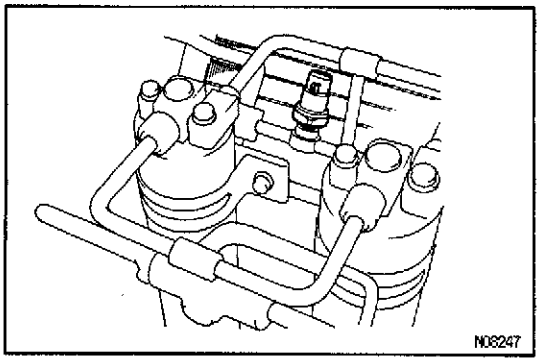


PRESSURE SWITCH

PRESSURE SWITCH REMOVAL AND INSTALLATION

AC0UW-01

REMOVE PRESSURE SWITCH

(a) Disconnect the connector.


(b) Remove the pressure switch.

INSTALL PRESSURE SWITCH BY FOLLOWING REMOVAL SEQUENCE IN REVERSE

ON–VEHICLE INSPECTION

AC0L1-03

1. **INSTALL MANIFOLD GAUGE SET**
2. **DISCONNECT THE CONNECTOR OF PRESSURE SWITCH**
3. **RUN ENGINE AT APPROX. 2000 RPM**

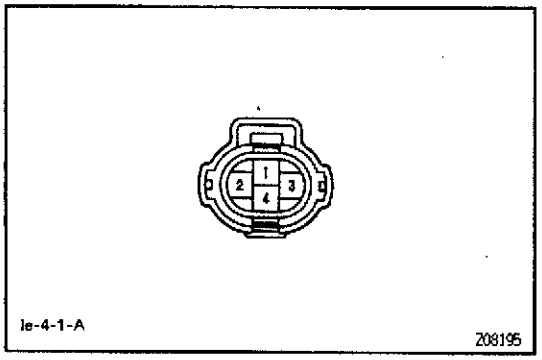


4. **INSPECT PRESSURE SWITCH OPERATION**

   Check continuity between 1 and 4 terminals when refrigerant pressure is changed, as shown.

   If operation is not as specified, replace the pressure switch.

5. **STOP ENGINE AND REMOVE MANIFOLD GAUGE SET**
6. **CONNECT THE CONNECTOR TO PRESSURE SWITCH**

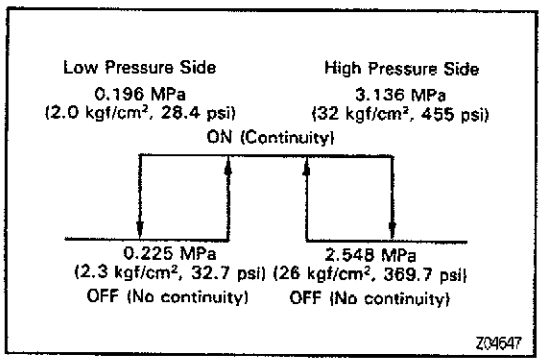

AC