# SERVOMOTOR


AC0U2-01

## (Inside Air Vent Mode Damper Control Servomotor)

## SERVOMOTOR REMOVAL AND INSTALLATION

(See "Cooling Unit" on page AC–31, 36)


## SERVOMOTOR INSPECTION

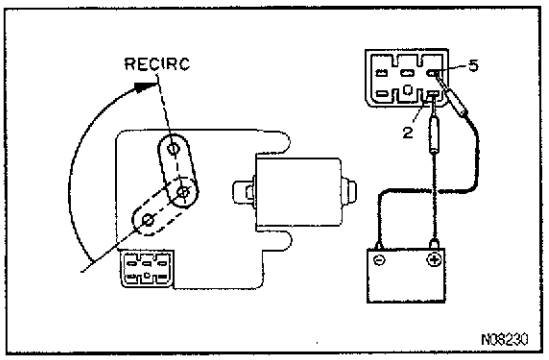


### INSPECT SERVOMOTOR

(a) Connect the positive (+) lead to terminal 2 and negative (–) lead to terminal 5.

(b) Check that the lever turns smoothly to "RECIRC" side.

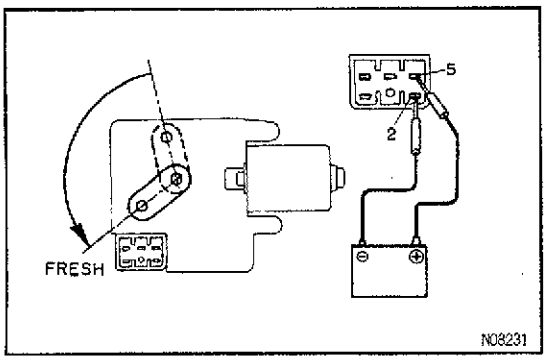


(c) Reverse the polarity, check that the lever turns smoothly to "FRESH" side.
If operation is not as specified, replace the servomotor.


AC

## (Outside Air Vent Mode Damper Control Servomotor)

## SERVOMOTOR REMOVAL AND INSTALLATION

(See "Cooling Unit" on page AC–31, 36)


## SERVOMOTOR INSPECTION

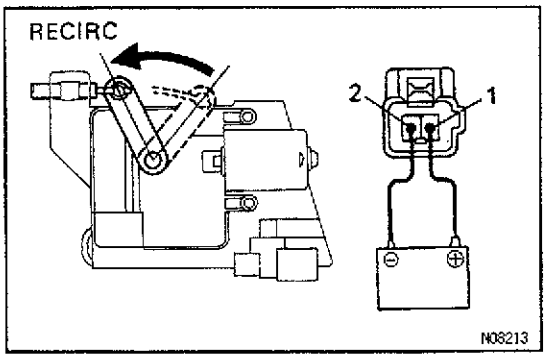


### INSPECT SERVOMOTOR

(a) Connect the positive (+) lead to terminal 1 and negative (–) lead to terminal 2.

(b) Check that the lever turns smoothly to "RECIRC" side.

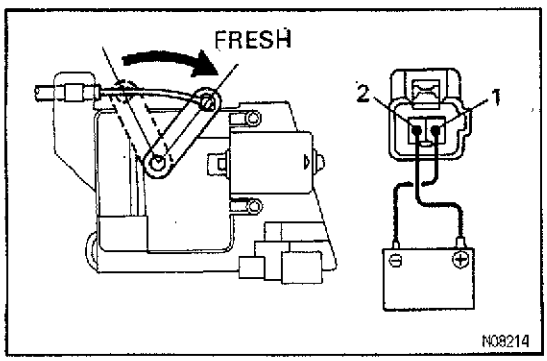


(c) Reverse the polarity, check that the lever turns smoothly to "FRESH" side.
If operation is not as specified, replace the servomotor.