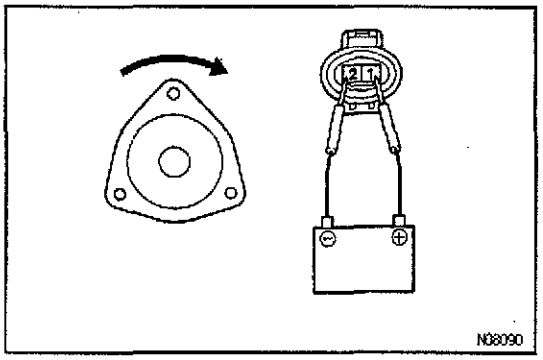



CONDENSER FAN MOTOR

ON–VEHICLE INSPECTION

AC01U–01

INSPECT CONDENSER FAN MOTOR NO.1, NO.2


(a) Disconnect the connector.
(b) Connect the positive (+) lead to terminal 1 and negative (–) lead to terminal 2.
(c) Check that the motor turns clockwise smoothly.
If operation is not as specified, replace the motor.

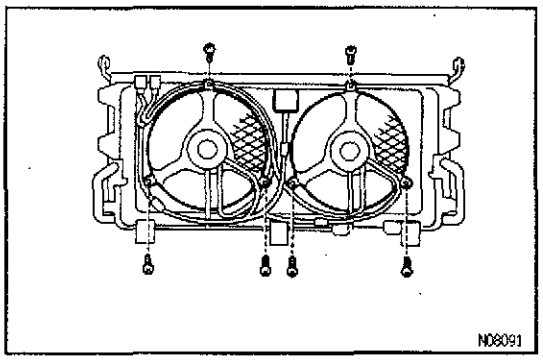

CONDENSER FAN MOTOR REMOVAL

REMOVE CONDENSER FAN MOTOR

(a) Remove the 6 screws and the fan shroud.

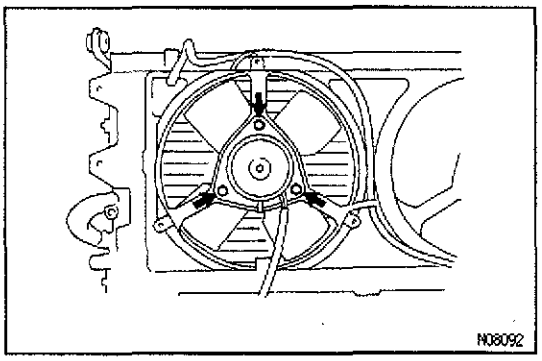

(b) Remove the 3 bolts and the motor.

AC

CONDENSER FAN MOTOR INSTALLATION

Install by following the removal procedure in reverse order.