

IGNITION SWITCH

PARTS LOCATION

BE00F-02

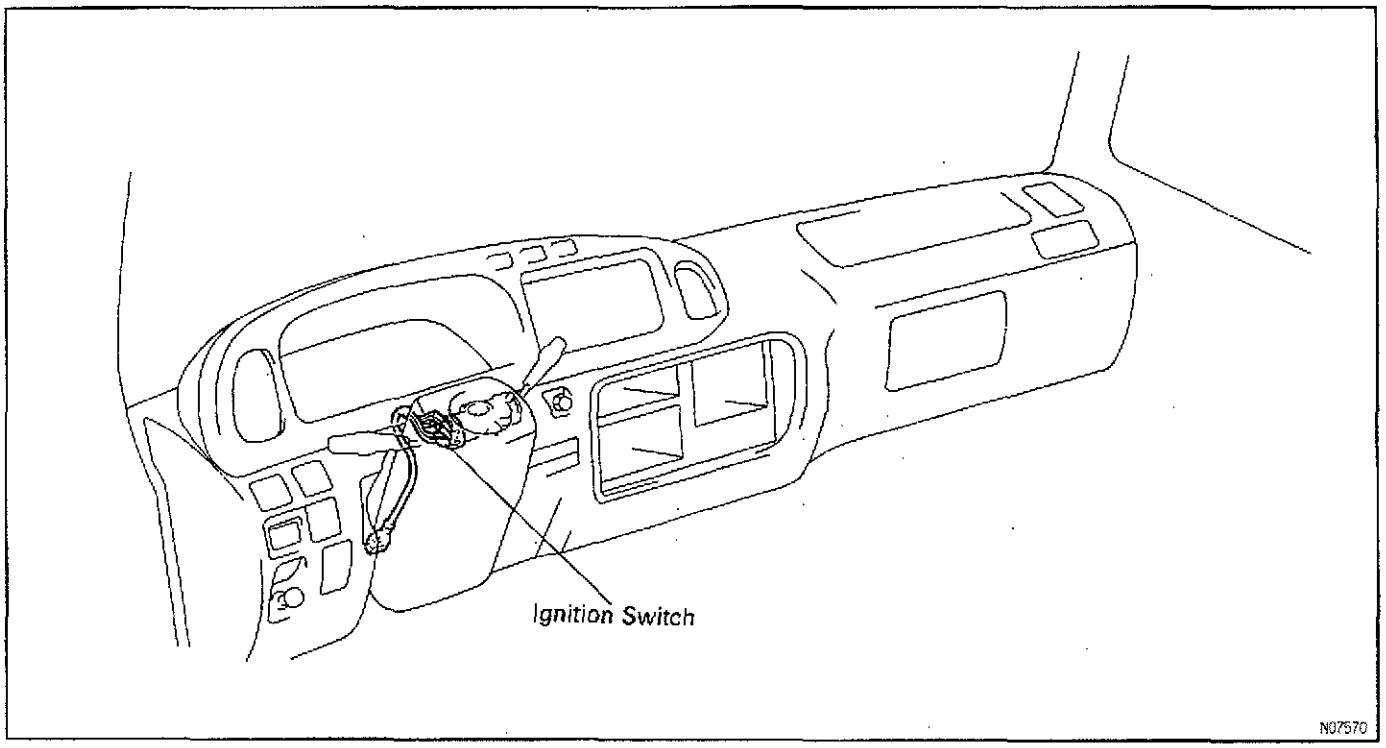

BE

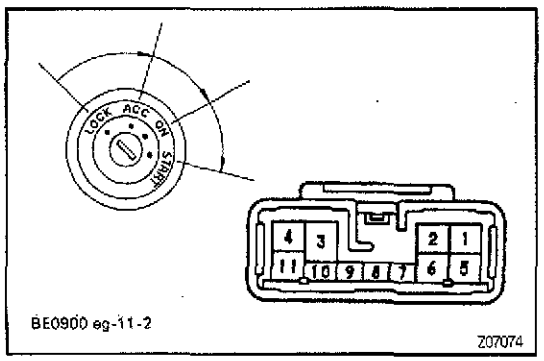

IGNITION SWITCH

BE00G-02

INSPECT IGNITION SWITCH

Inspect the switch continuity between terminals.

Switch position	Tester connection to terminal number	Specified value
LOCK	–	No continuity
ACC	3 – 4	Continuity
ON	2 – 3 – 4 6 – 11	Continuity
START	1 – 2 – 4 5 – 6 – 11	Continuity

If continuity is not as specified, replace the switch.