

STOP LIGHT SYSTEM
PARTS LOCATION

BE02E-01

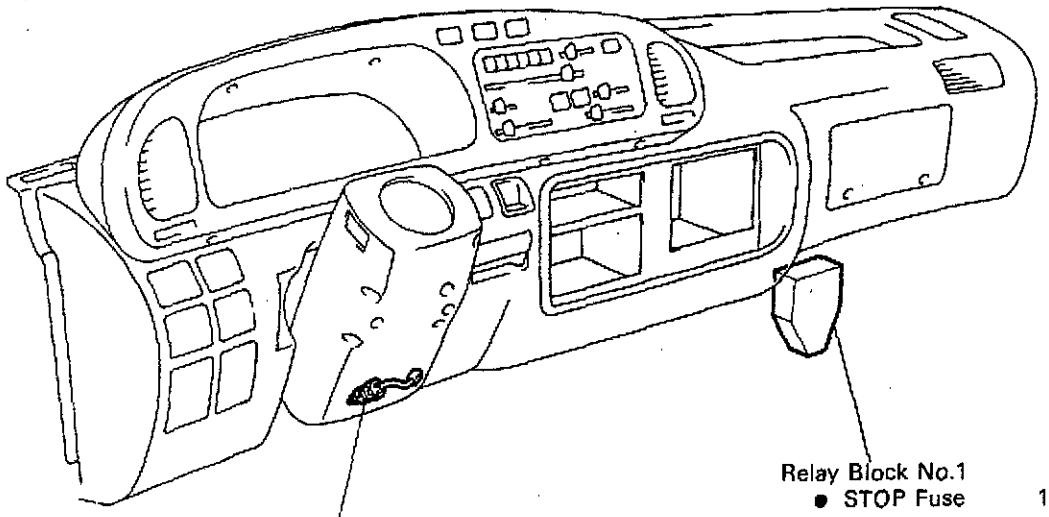

Relay Block No.1
● STOP Fuse 10A

Stop Light Switch

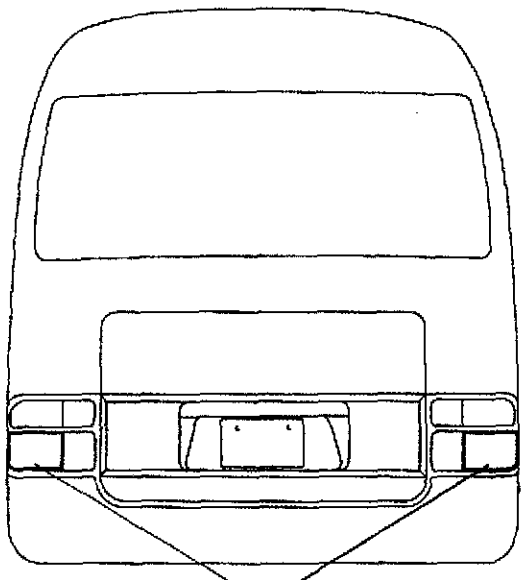

Stop Light

N08036
N08035


Z07132

BE0ZF-01

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts' name	See page
Stop light does not light up	1. STOP Fuse	BE–9 and 10
	2. Stop Light Switch	BE–29
	3. Wire Harness	
	4. Bulb	BE–6
Stop light remains always on	1. Stop Light Switch	BE–29
	2. Wire Harness	
Only one light does not light up	1. Wire Harness	
	2. Bulb	BE–6

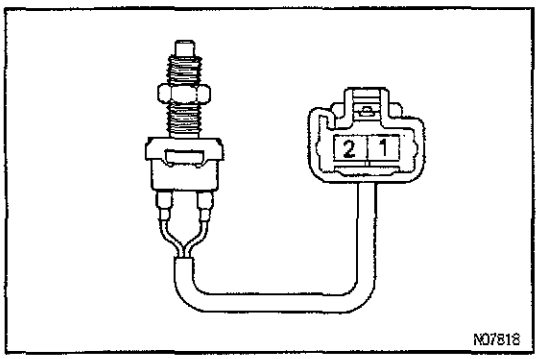

BE0ZG-01

STOP LIGHT SWITCH

INSPECT STOP LIGHT SWITCH

Inspect the switch continuity between terminals.

Switch position	Tester connection to terminal number	Specified value
Switch pin free	1 – 2	Continuity
Switch pin pushed in	–	No continuity

If continuity is not as specified, replace the switch.