

BACK–UP LIGHT SYSTEM
PARTS LOCATION

BE0ZH–01

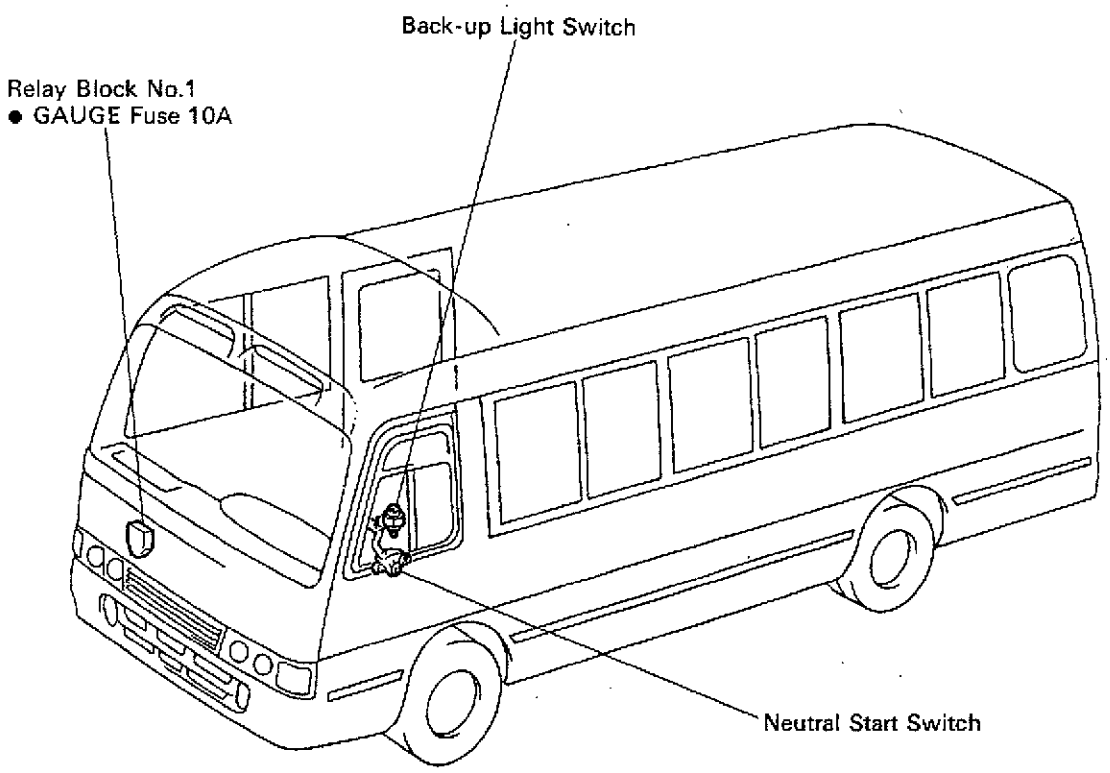

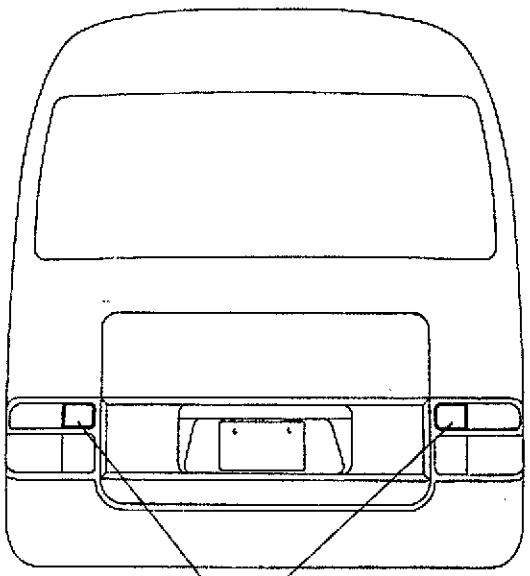

N08042
N08038


ZD7891

TROUBLESHOOTING

BE0ZJ–01

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts' name	See page
Back–Up Light does not light up	1. GAUGE Fuse	BE–9 and 10
	2. Ignition Switch	BE–13
	3. Wire Harness	
	4. Bulb	BE–6
Back–Up Light remains always on	1.Wire Harness	
Only one light does not light up	1. Wire Harness	
	2. Bulb	BE–6

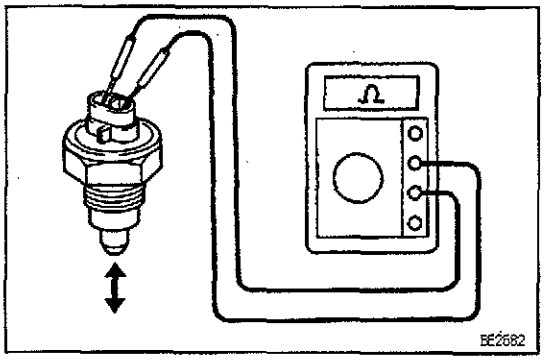

BACK–UP LIGHT SWITCH

BE0ZK–01

INSPECT BACK–UP LIGHT SWITCH

Inspect relay continuity between terminals.

Switch position	*Tester connection*	*Specified value*
Free	–	No continuity
Push	1 – 2	Continuity

If continuity is not as specified, replace the switch.

NEUTRAL START SWITCH

BE0ZL–01

INSPECT NEUTRAL START SWITCH

See AT section