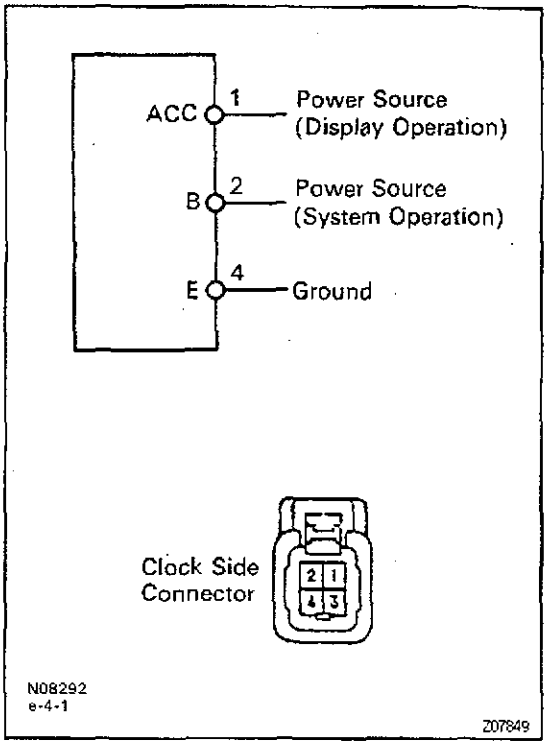


CLOCK


CLOCK ASSEMBLY

BE10K-01

1. INSPECT CLOCK ASSEMBLY

Inspect the clock continuity between terminals.

Tester connection	Condition	Specified value
1 – 4	Constant	Continuity

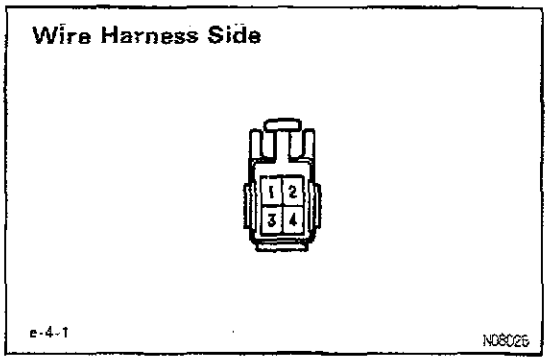

2. INSPECT WIRE HARNESS SIDE

Inspect the terminal of wire harness side continuity or voltage

(VOLTAGE)

Tester connection	Condition	Specified value
1 – Ground	Ignition Switch "ACC" position	Battery voltage
2 – Ground	Constant	Battery voltage

(CONTINUITY)

Tester connection	Condition	Specified value
4 – Ground	Constant	Continuity