

FRONT DOOR
COMPONENTS

B00ZF–01

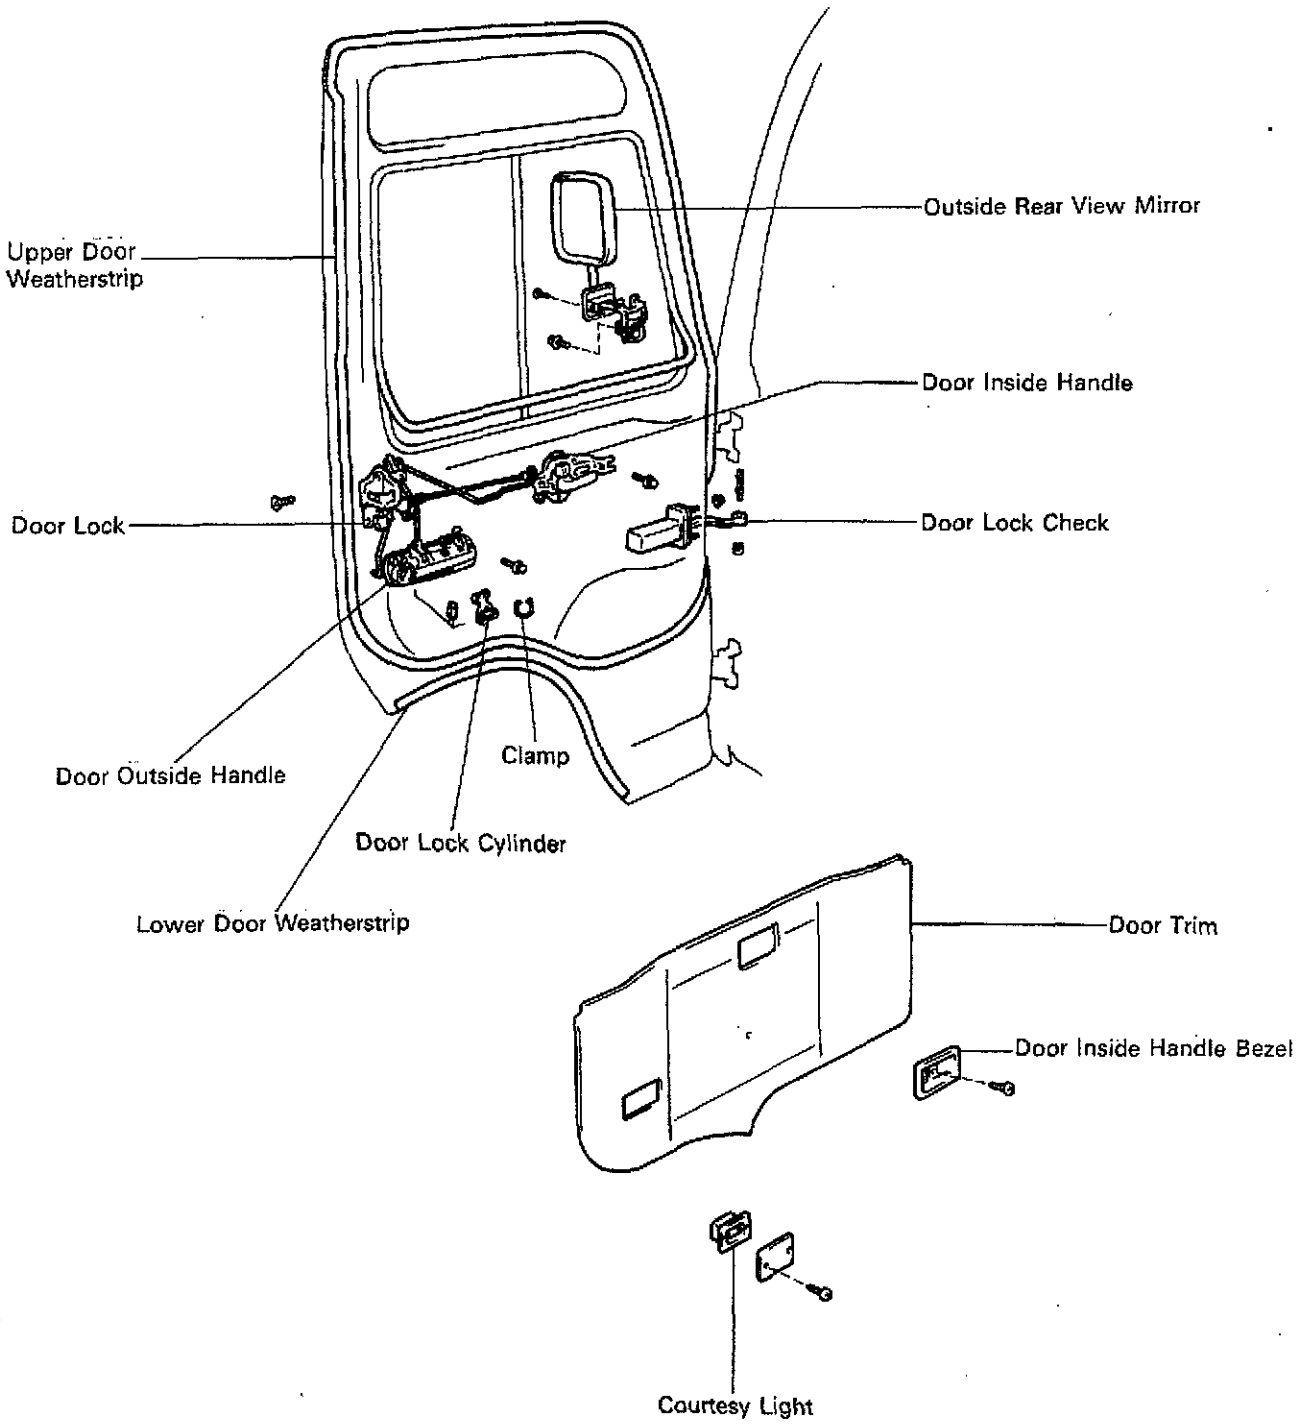

N07911

COMPONENTS (Cont'd)

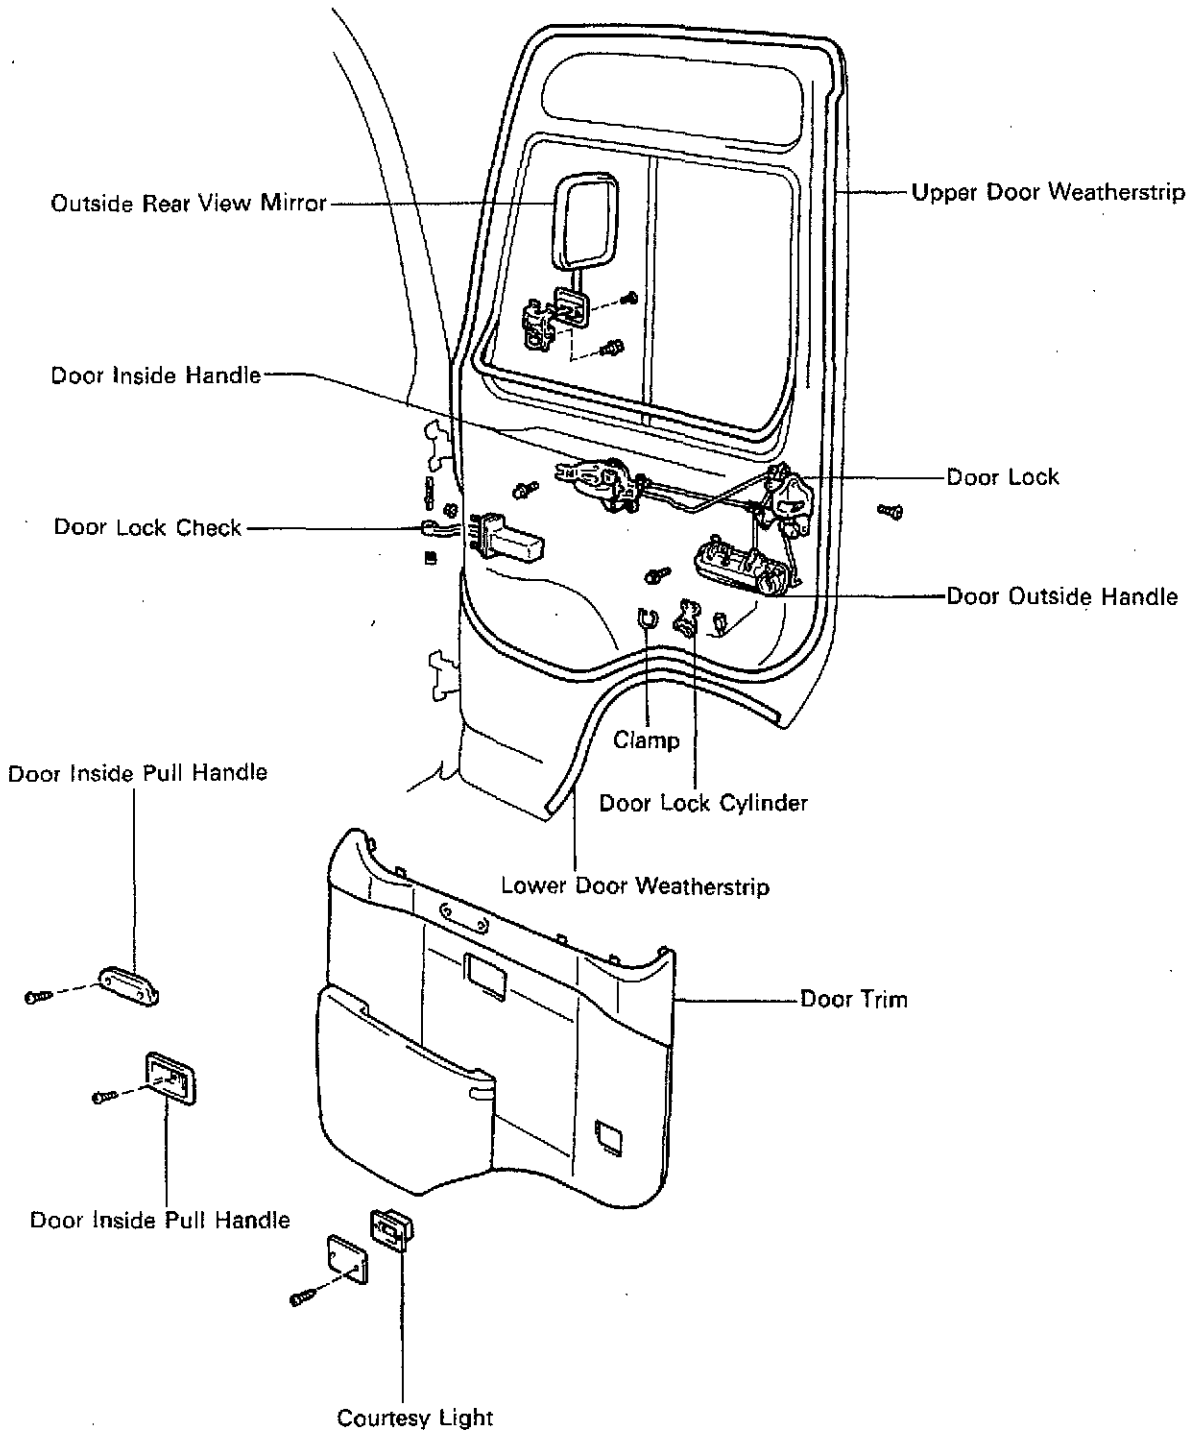


FRONT DOOR ADJUSTMENT


B00ZJ-01

1. ADJUST FRONT DOOR IN FORWARD /REARWARD AND VERTICAL DIRECTIONS

(a) Remove the instrument panel.
(See page BO–71)

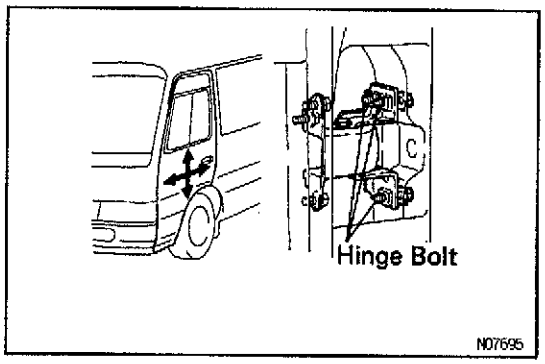


(b) Adjust the door by slightly loosening the upper and lower hinge bolts of the body.
(c) Reinstall the instrument panel.
(See page BO–71)

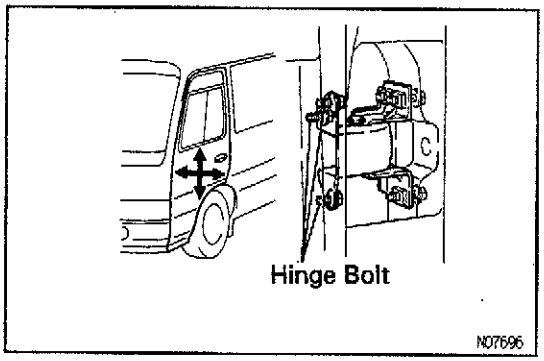

2. ADJUST FRONT DOOR IN LEFT /RIGHT AND VERTICAL DIRECTIONS

Adjust the door by slightly loosening the upper and lower hinge bolts of the door side.

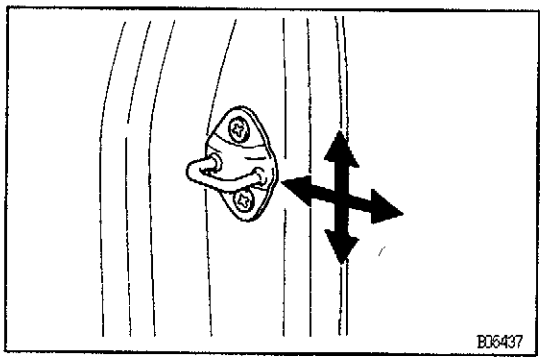

3. ADJUST FRONT DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.
(b) Slightly loosen the striker mounting screws.
(c) Using a plastic–faced hammer, adjust the striker by tapping it.


FRONT DOOR DISASSEMBLY

B00ZM-01

1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY


2. REMOVE FOLLOWING PARTS:

(a) Courtesy light
(b) Door inside pull handle
(c) Inside handle bezel

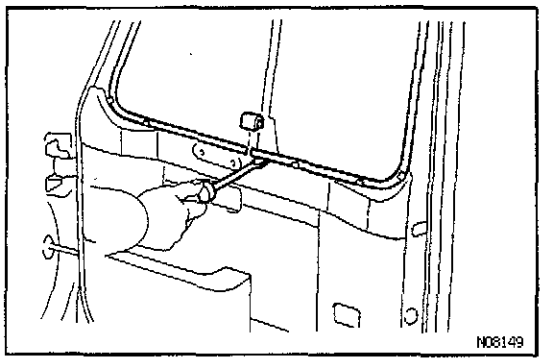


3. REMOVE DOOR TRIM

(a) Disconnect the lower side of the door sash clip from the door sash and door panel.

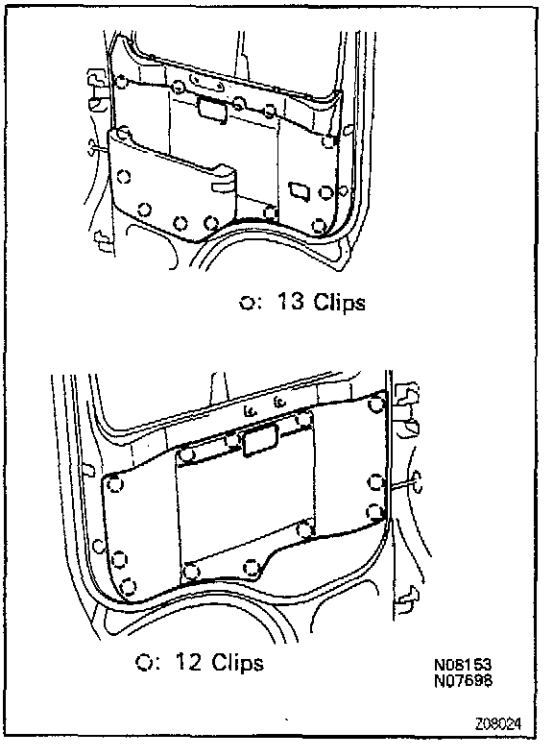


(b) Insert a screwdriver between the door trim and panel to pry out.
HINT: Tape the screwdriver tip before use.
(c) Remove the door trim.
(d) Remove the service hole cover.

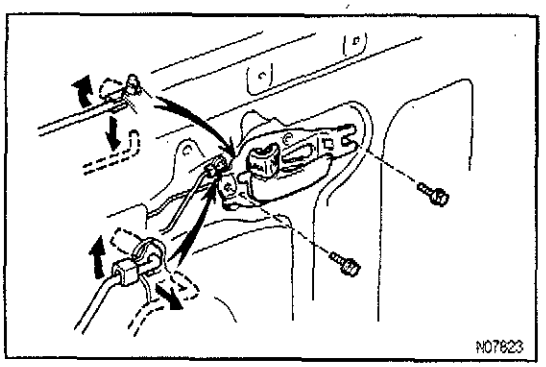


4. REMOVE DOOR INSIDE HANDLE

(a) Remove the 2 mounting bolts.
(b) Disconnect the door opening control link from the inside handle.
(c) Remove the inside hadle.

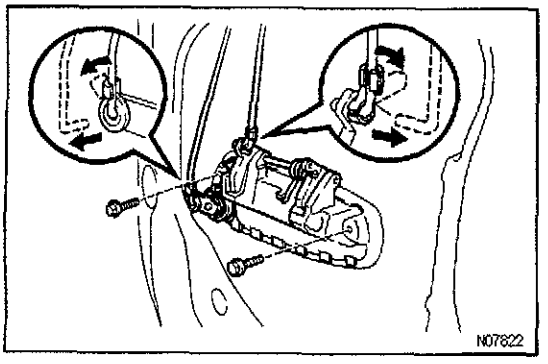


5. REMOVE DOOR OUTSIDE HANDLE

(a) Remove the hole cover.
(b) Disconnect the door control link from the outside handle.
(c) Remove the 2 bolts and outside handle.

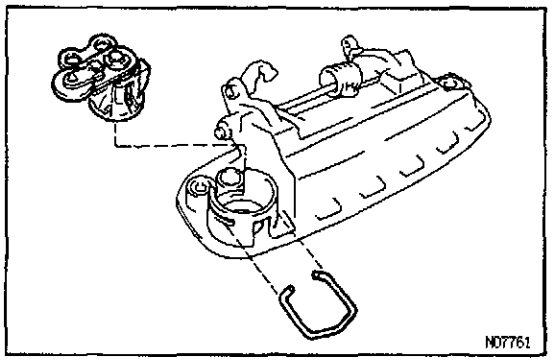


6. REMOVE DOOR LOCK CYLINDER

(a) Disconnect the door lock control link from the lock cylinder.
(b) Remove the clamp and bolt.
(c) Remove the lock cylinder from the door outside handle.

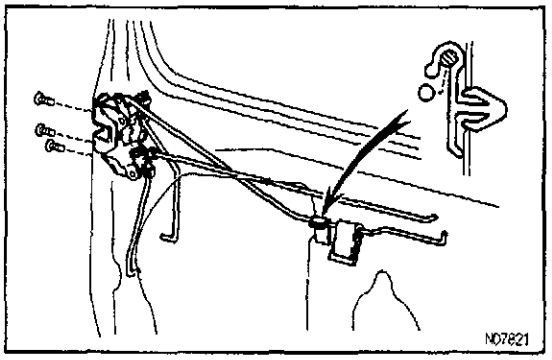


7. REMOVE DOOR LOCK

(a) Remove the control link pad.
(b) Disconnect the control links from the clamps.
(c) Remove the 3 screws and door lock.

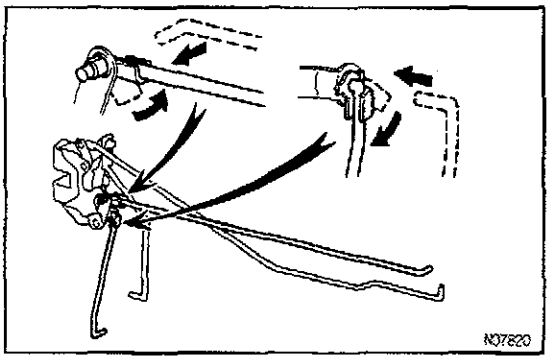

8. REMOVE CONTROL LINKS FROM DOOR LOCK

Remove the door opening and locking control links from the door lock.

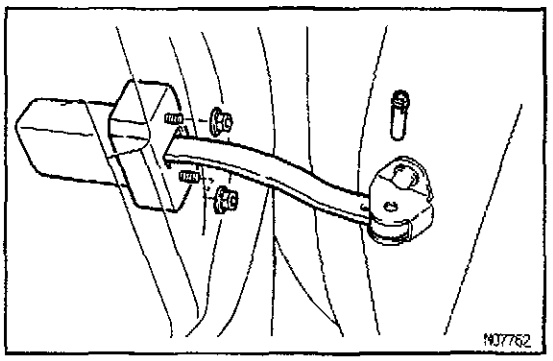


9. REMOVE DOOR CHECK

(a) Remove the door check pin.
(b) Remove the 2 nuts and door check.

10. REMOVE UPPER DOOR WEATHERSTRIP

11. REMOVE LOWER DOOR WEATHERSTRIP

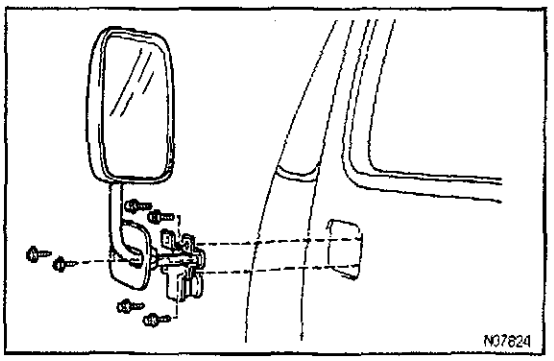

12. REMOVE OUTSIDE REAR VIEW MIRROR

(a) Remove the 2 screws and 4 bolts.
(b) Remove the outside rear view mirror.


B00ZP-01


FRONT DOOR ASSEMBLY

ASSEMBLE FRONT DOOR PARTS BY FOLLOEING DIS-ASSEMBLY SEQUENCE IN REVERSE

1. BEFORE INSTALLING PARTS, APPLY MP GREASE

Apply MP grease to the moving parts, as shown.

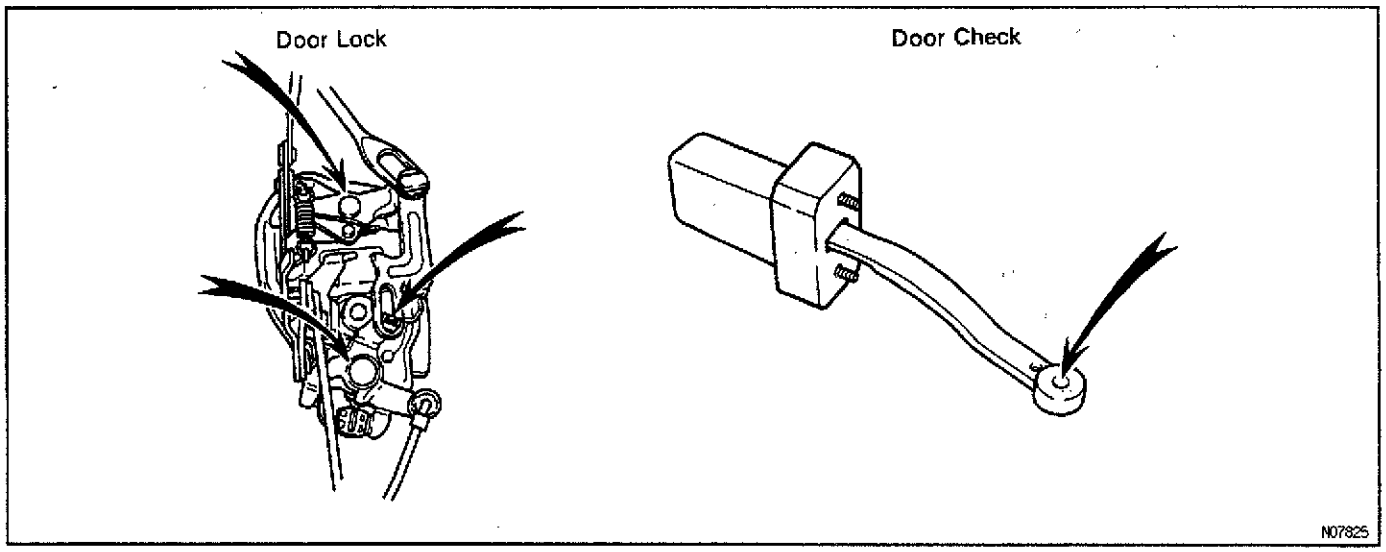

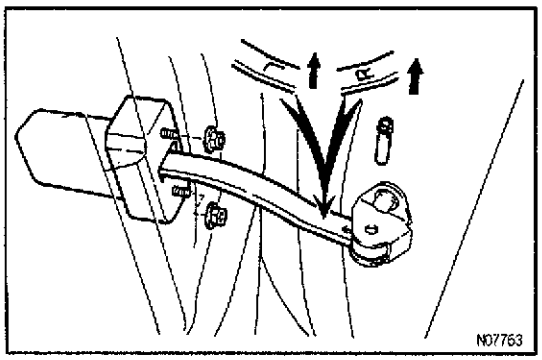

2. INSTALL DOOR CHECK

(a) Connect the arm bracket with the pin.

(b) Install the door check with the 2 nuts.

NOTICE: The installation direction of the door check is different for RH and LH front doors. Install the door lock check to the RH front door with the "R" mark facing upward. Install the LH front door check with the "L" mark facing upward.

3. CHECK THAT DOOR LOCK CONTROL OPERATES CORRECTLY

