

CENTER DOOR (Folding Type) COMPONENTS

BO02R-01

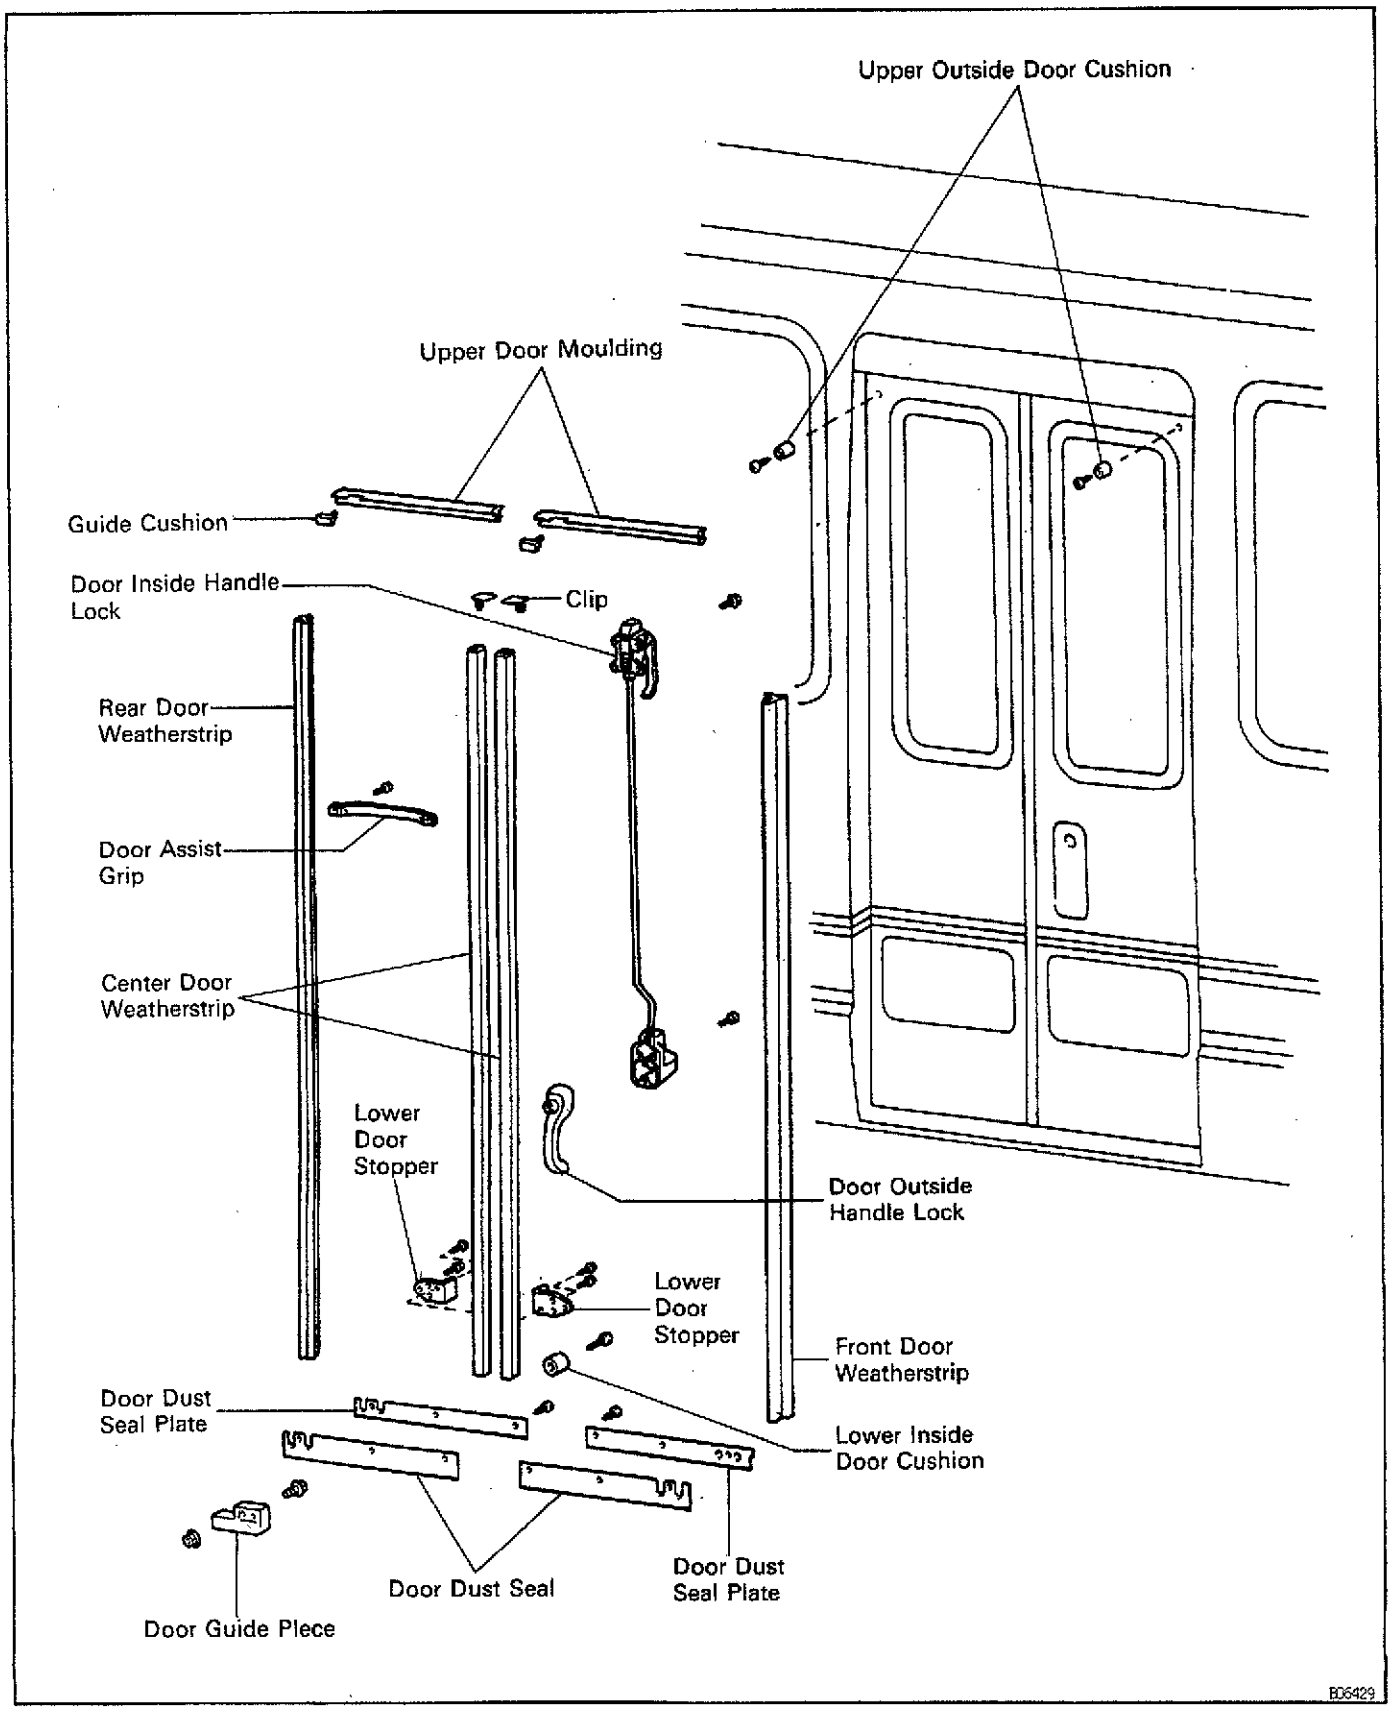

BO

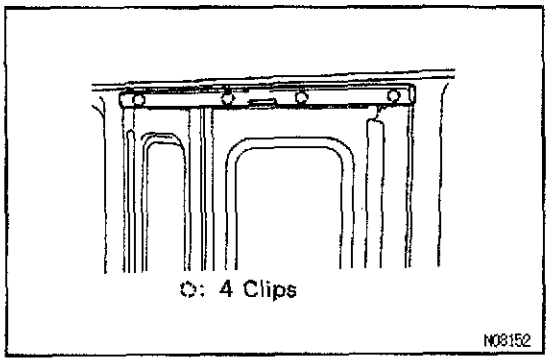


CENTER DOOR ADJUSTMENT

B00ZU-01

ADJUST DOOR LOCK STOPPERS

(a) Remove the door lock cover.

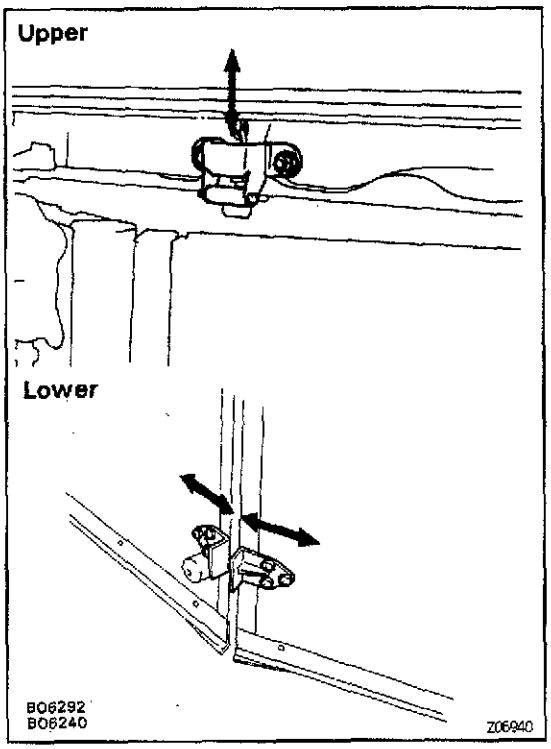

(b) Slightly loosen the striker mounting nuts (upper) or screws (lower).
(c) Using a plastic – faced hammer, adjust the stopper by tapping it.
(d) Reinstall the door lock cover with the 2 screws and hole plugs.

BO


CENTER DOOR DISASSEMBLY


B00ZX-01

1. **REMOVE FOLLOWING PARTS:**

(a) Upper door moulding
(b) Door inside handle lock
(c) Door outside handle lock
(d) Assist grip
(e) Door dust seals

2. **REMOVE SIDE FRONT DOOR WEATHERSTRIP**
3. **REMOVE SIDE REAR DOOR WEATHERSTRIP**
4. **REMOVE CENTER DOOR WEATHERSTRIP**
   Remove the clip, screw and weatherstrip. Remove the 2 weatherstrips.

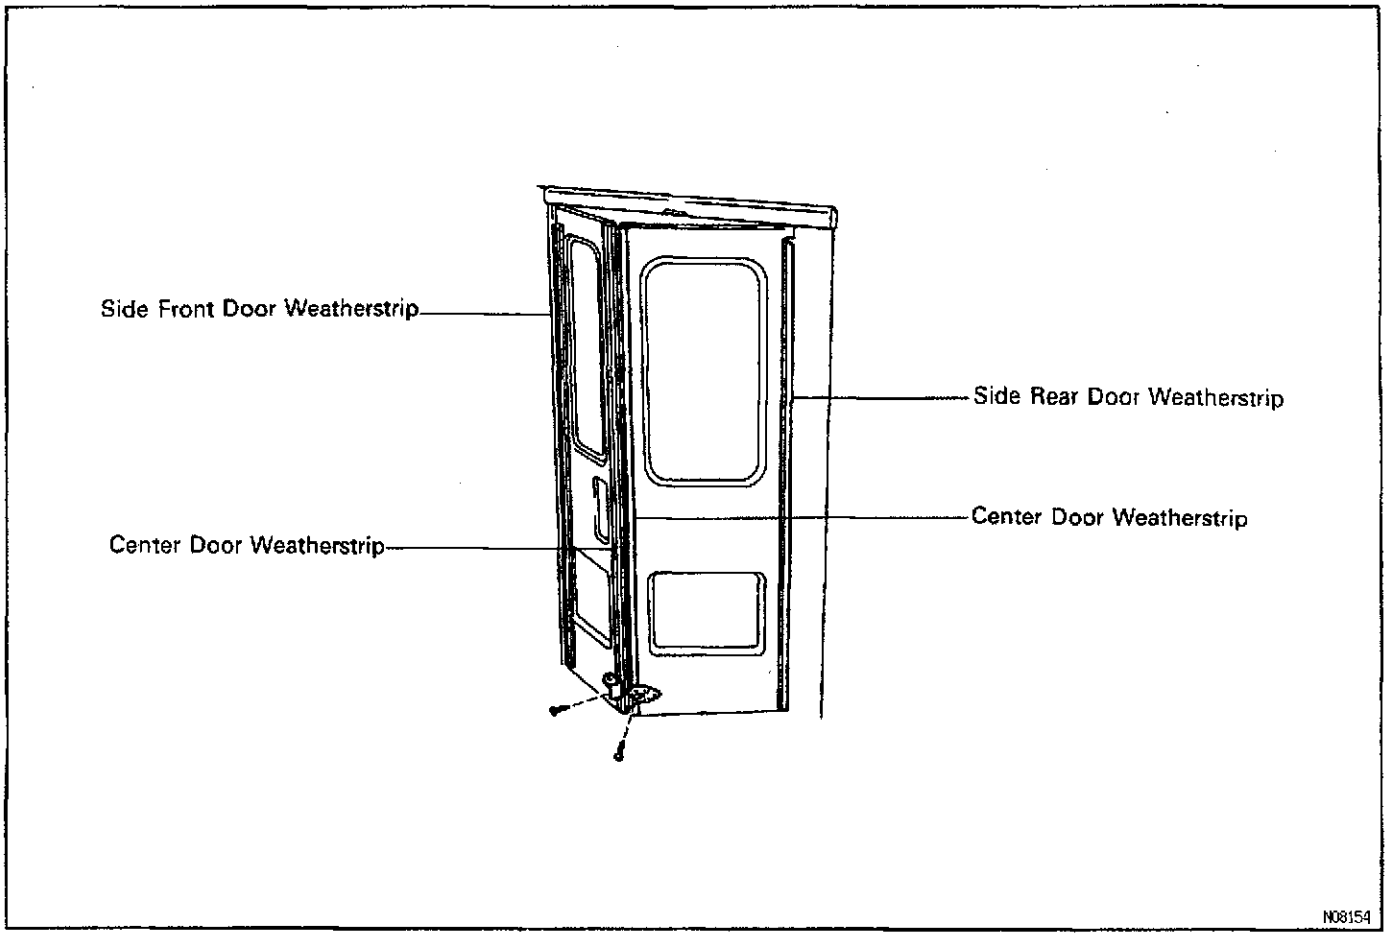


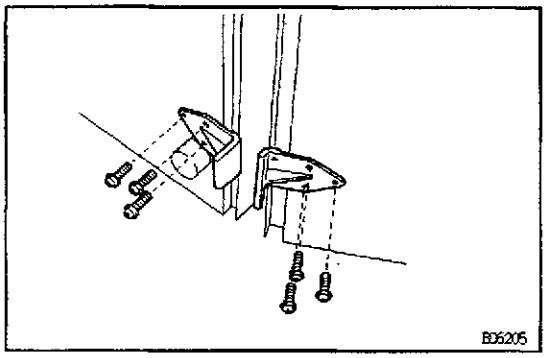

5. **REMOVE LOWER DOOR STOPPERS**
   Remove the 3 screws and stopper. Remove the 2 stoppers.

6. REMOVE DOOR CUSHIONS

Remove the screw and cushion. Remove the 3 cushions.

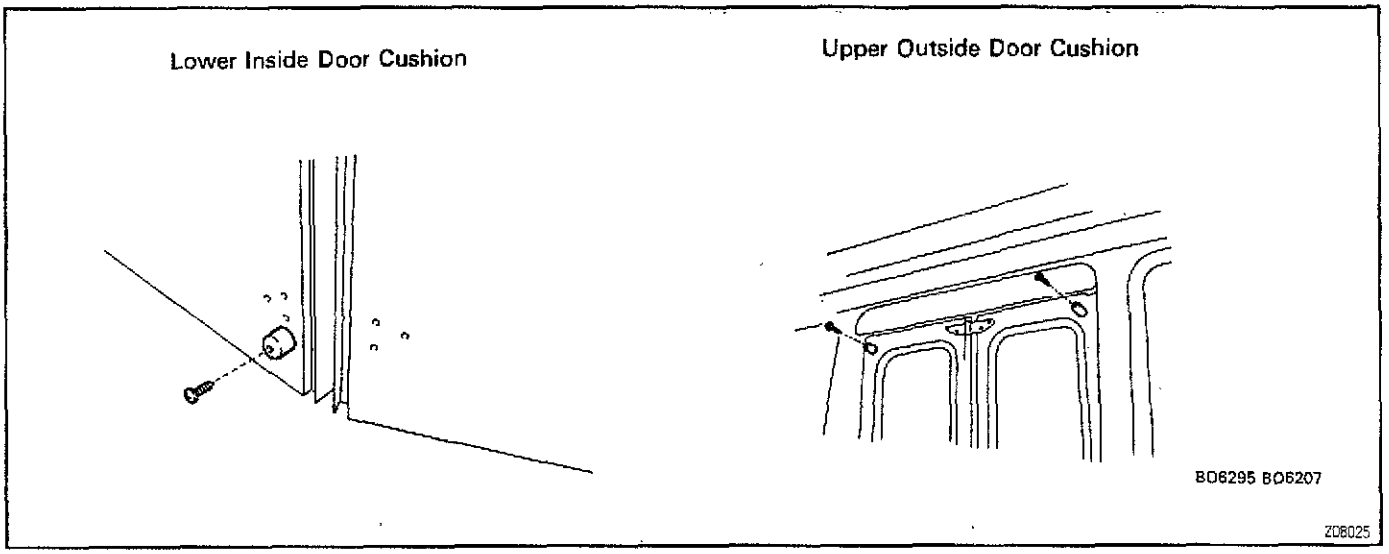

BO

B00ZY-01

CENTER DOOR ASSEMBLY

ASSEMBLE CENTER DOOR PARTS BY FOLLOWING DISASSEMBLY SEQUENCE IN REVERSE

BEFORE INSTALLING PARTS, APPLY MP GREASE

Apply MP grease to the moving parts, as shown.

