

BACK DOOR
(Single Swing Out Type)
COMPONENTS

BO100-01

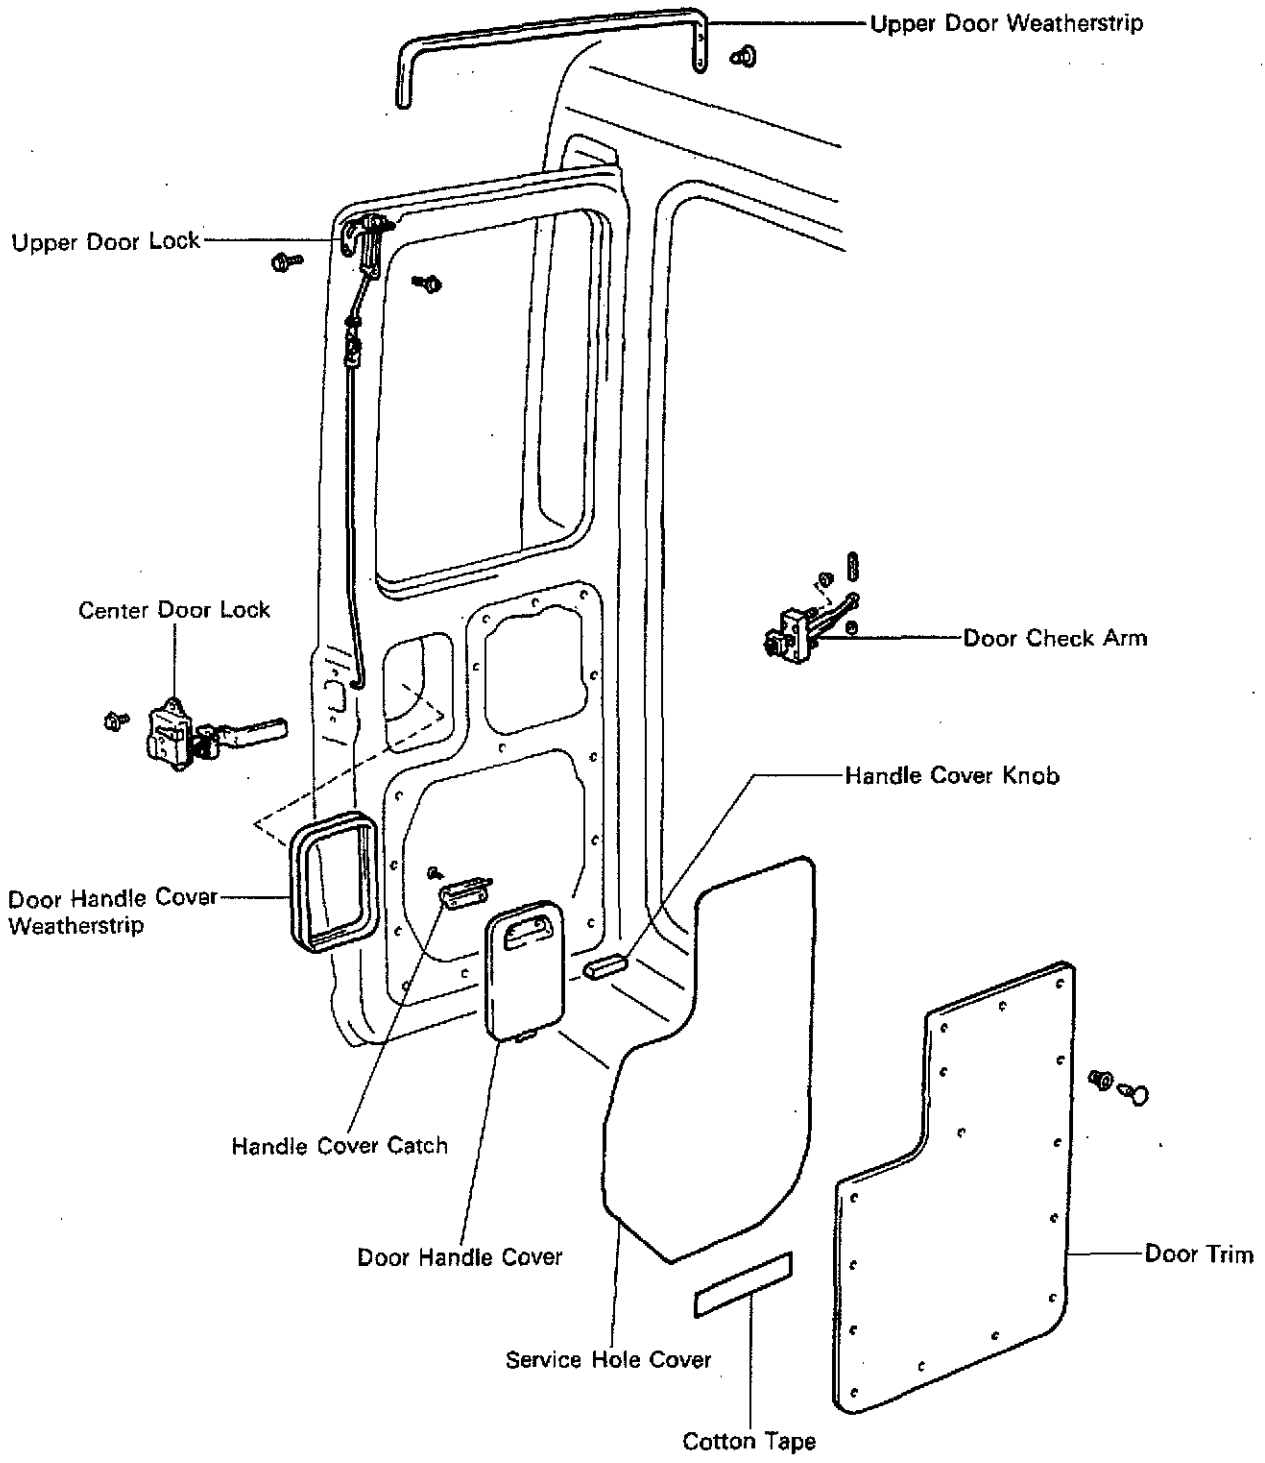

N08216

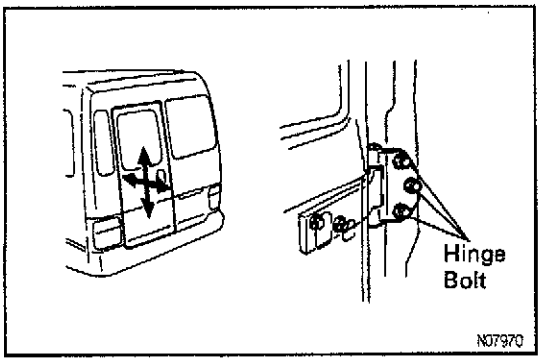


BD10V–01

BACK DOOR ADJUSTMENT


1. ADJUST FORWARD /REARWORD AND VERTICAL LOCATION OF BACK DOOR

Adjust the door by slightly loosening the upper and lower hinge bolts of the body side.

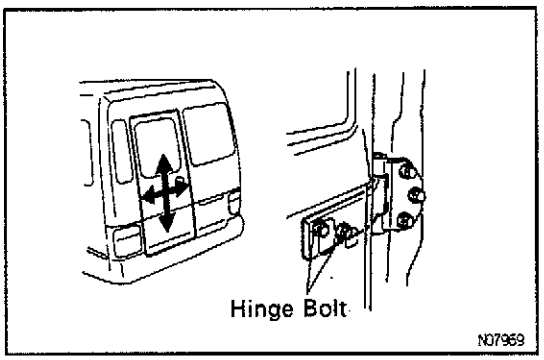

2. ADJUST LEFT /RIGHT AND VERTICAL LOCATION OF BACK DOOR

Adjust the door by slightly loosening the upper and lower hinge bolts of the body side.

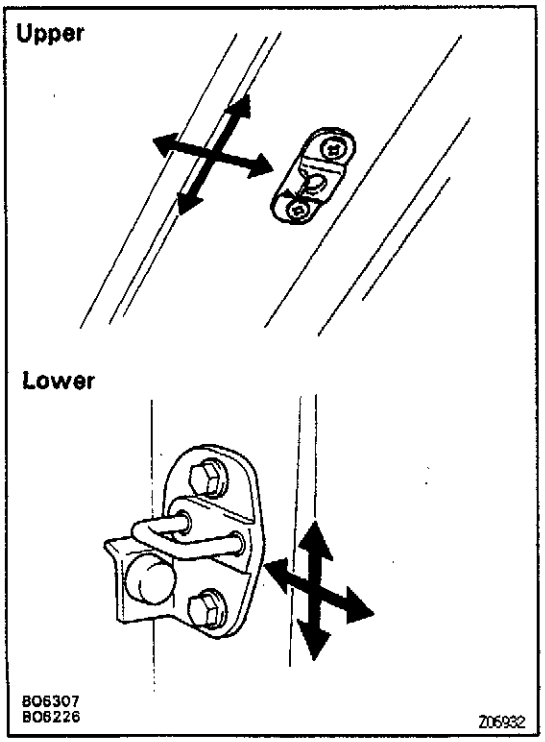

3. ADJUST BACK DOOR LOCK STRIKERS

(a) Check that the door fit and door lock linkages are adjusted correctly.
(b) Slightly loosen the striker mounting bolts.
(c) Using a plastic–faced hammer, adjust the striker by tapping it.


BO

BD10W–01

BACK DOOR DISASSEMBLY

1. REMOVE FOLLOWING


(a) Door handle cover
(b) Door trim
(c) Service hole cover

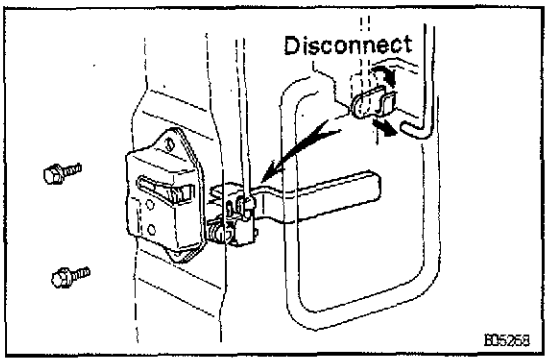

2. REMOVE CENTER DOOR LOCK


(a) Remove the 2 mounting bolts.

(b) Disconnect the control link of the upper door lock from the center door lock, and remove the center door lock.

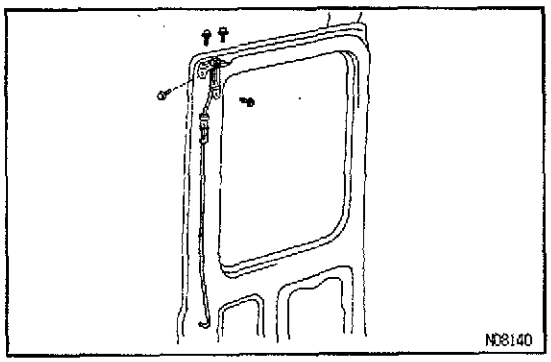

3. REMOVE UPPER DOOR LOCK

Remove the 4 screws and door lock.

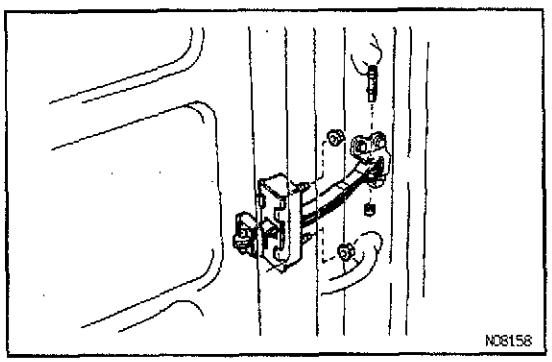

4. REMOVE DOOR CHECK

(a) Disconnect the wirning harness from the door check bracket.

(b) Remove the door check pin.

(c) Remove the 2 nuts, and door check.

5. REMOVE UPPER DOOR WEATHERSTRIP


BO10X-01

BACK DOOR ASSEMBLY

ASSEMBLE BACK DOOR PARTS BY FOLLOWING DISASSEMBLY SEQUENCE IN REVERSE

1. BEFORE INSTALLING PARTS, APPLY MP GREASE

Apply MP grease to the moving parts, as shwon.

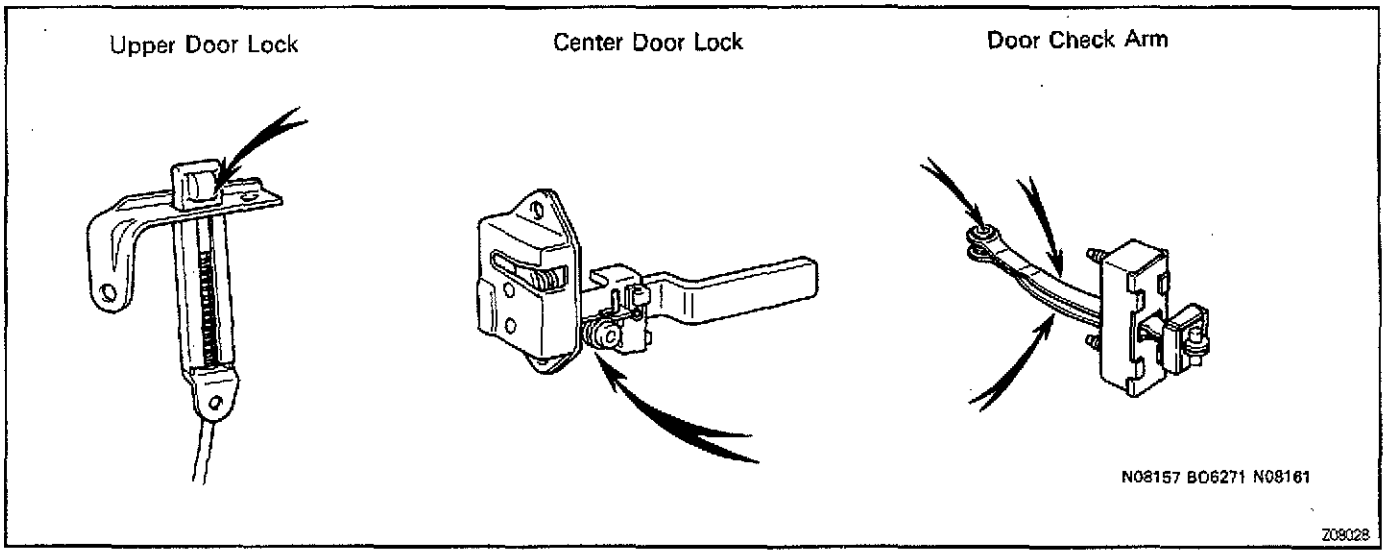

2. CHECK THAT DOOR LOCK CONTROL OPERATES CORRECTLY

