
BACK DOOR
(Double Swing Out Type)
Left Back Door


BO10Z-01

COMPONENTS

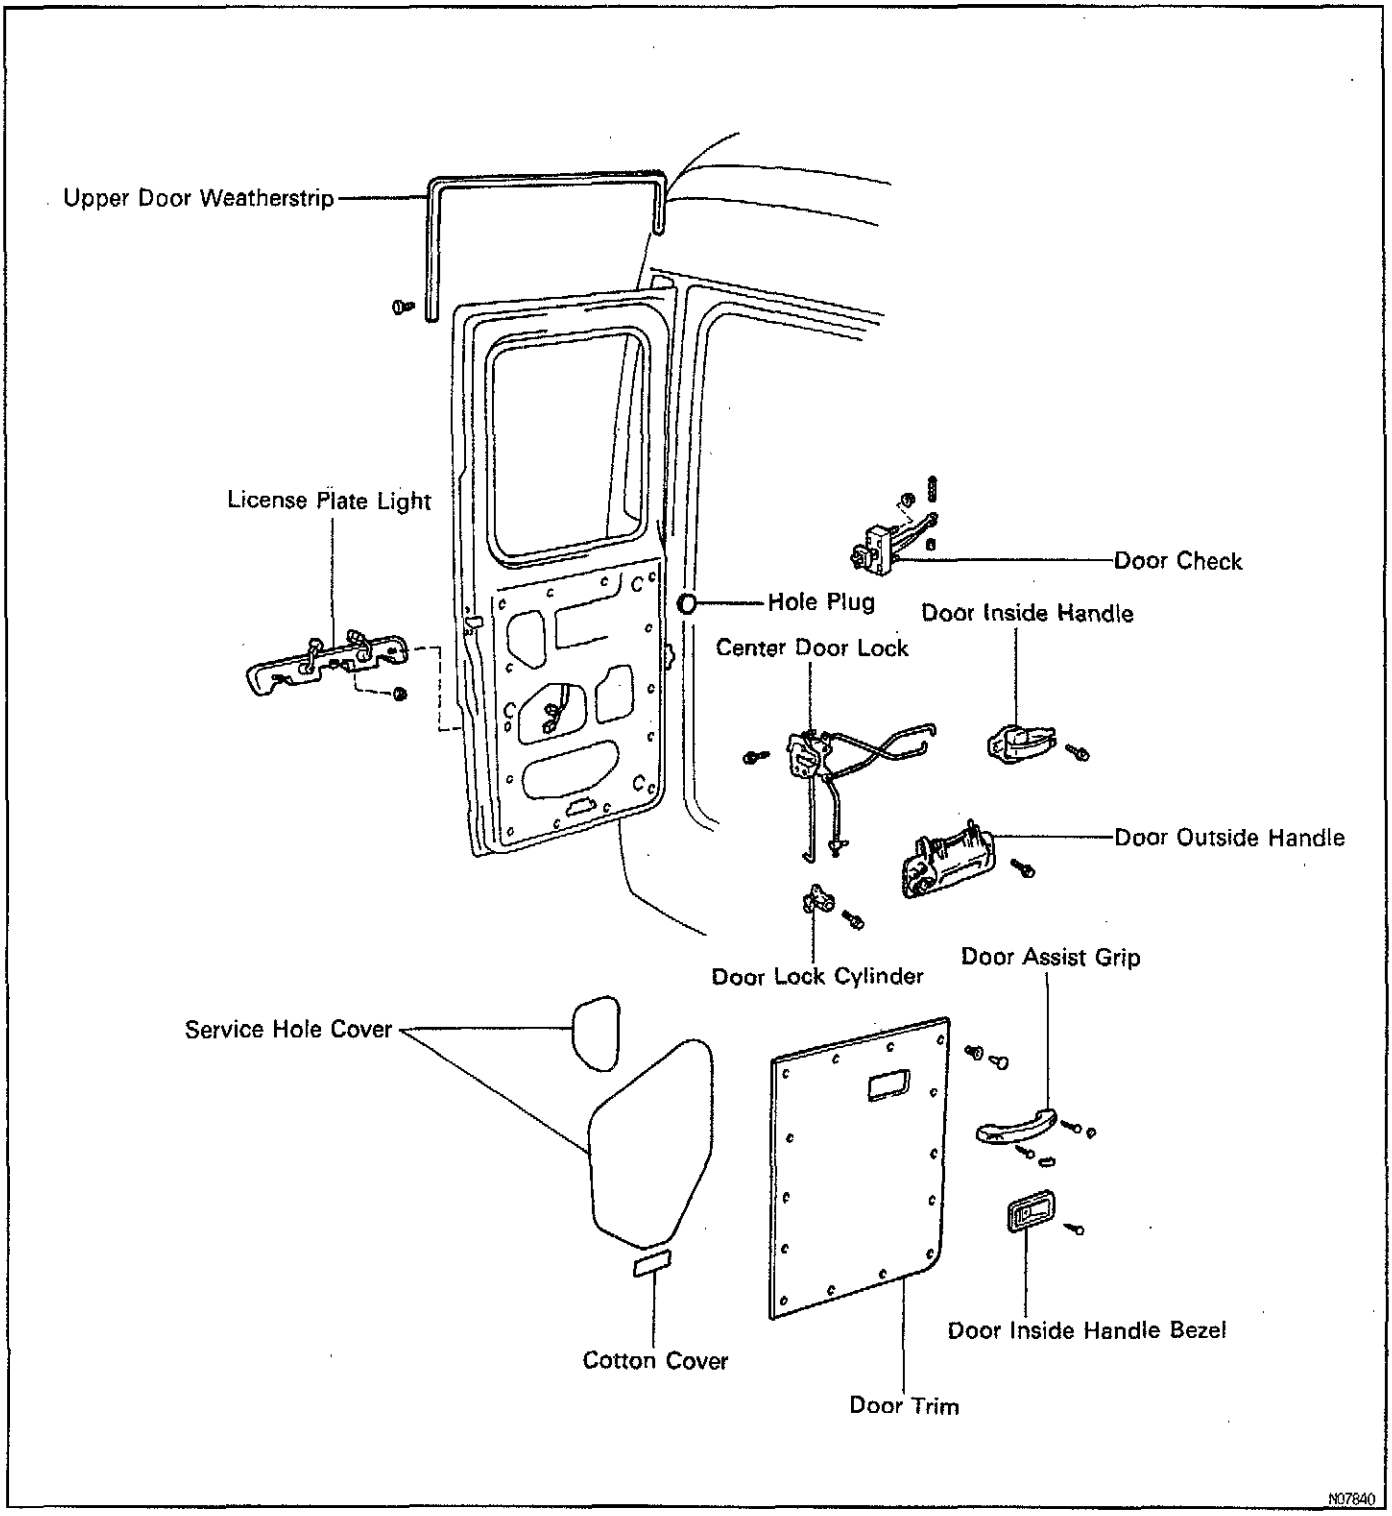


BO110-01

Right Back Door
COMPONENTS

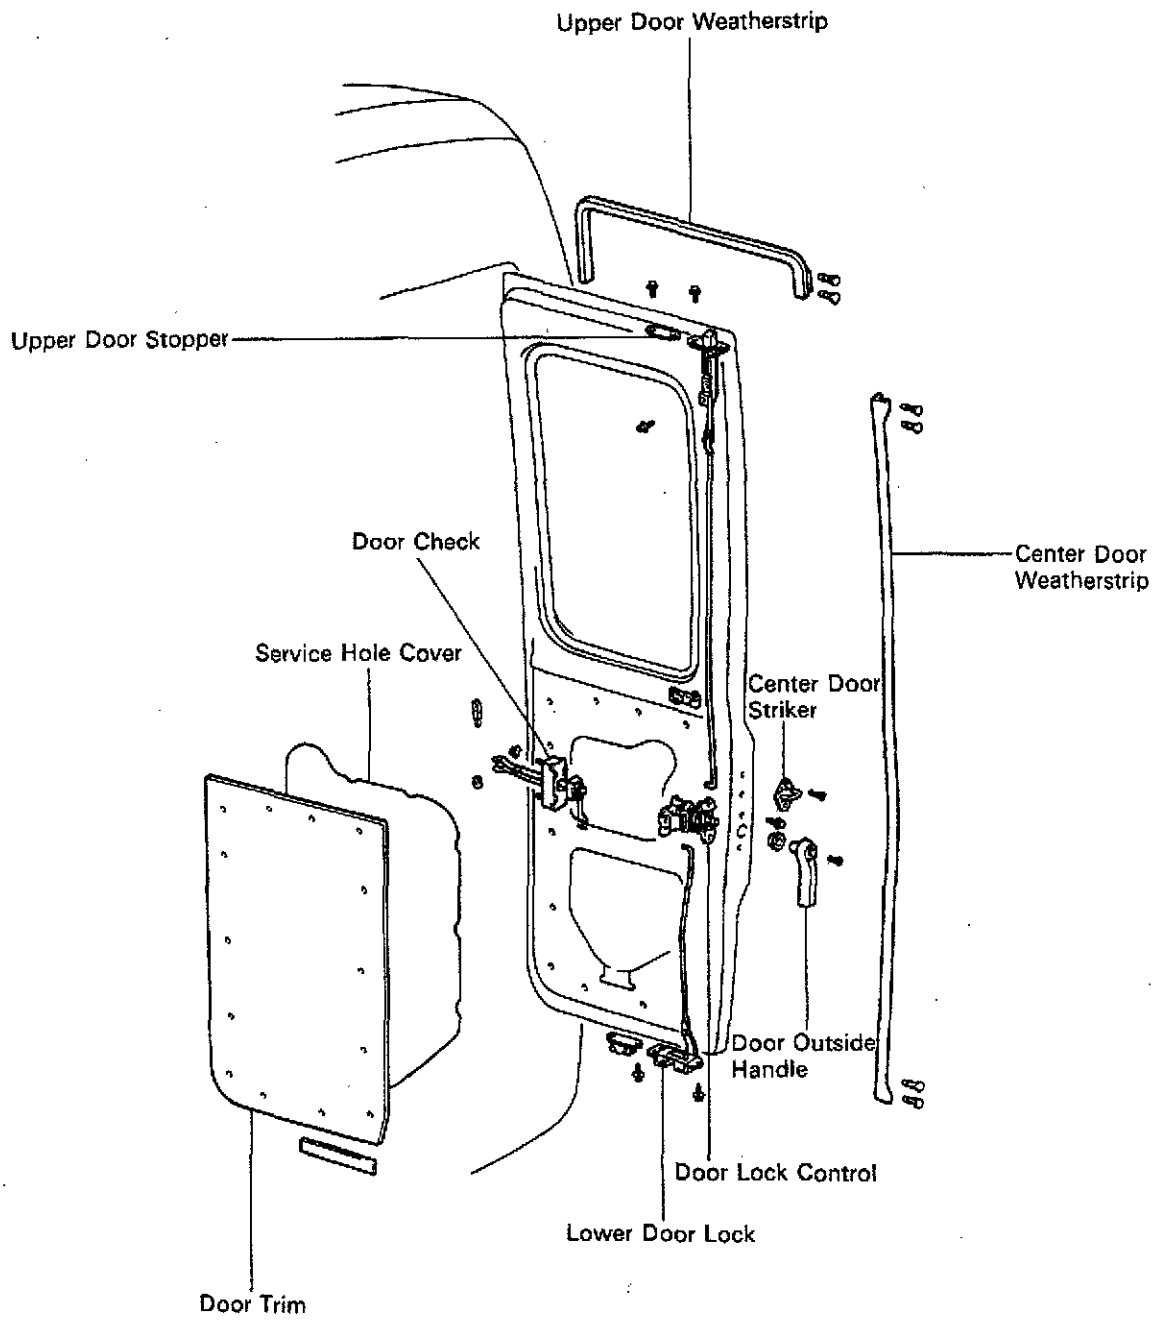


N07912

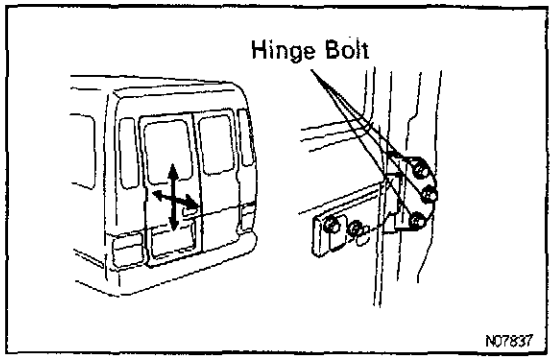

LEFT BACK DOOR ADJUSTMEMT


B0112-01

1. **ADJUST BACK DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS**
Adjust the door by slightly loosening the upper and lower hinge bolts of the body side.

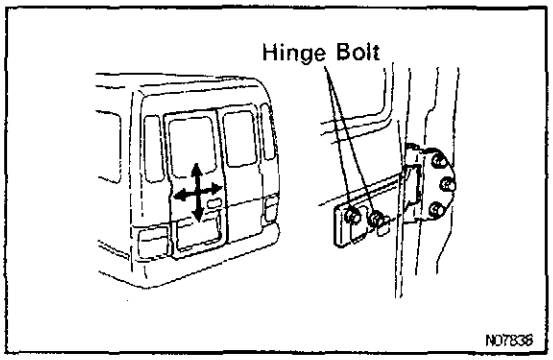

2. **ADJUST BACK DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS**
Adjust the door by slightly loosening the upper and lower hinge bolts of the door side.


BO

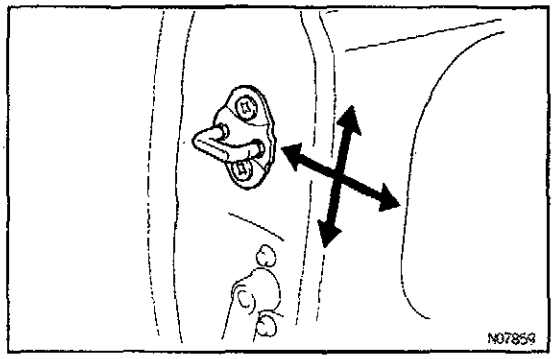


3. **ADJUST BACK DOOR LOCK STRIKER**
(a) Check that the door fit and door lock linkages are adjusted correctly.
(b) Slightly loosen the striker mounting screws.
(c) Using a plastic–faced hammer, adjust the striker by tapping it.

RIGHT BACK DOOR ADJUSTMENT


B0113-01

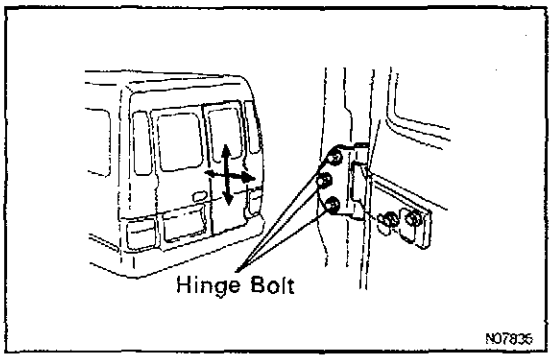

1. **ADJUST BACK DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS**
Adjust the door by slightly loosening the upper and lower hinge bolts of the body side.

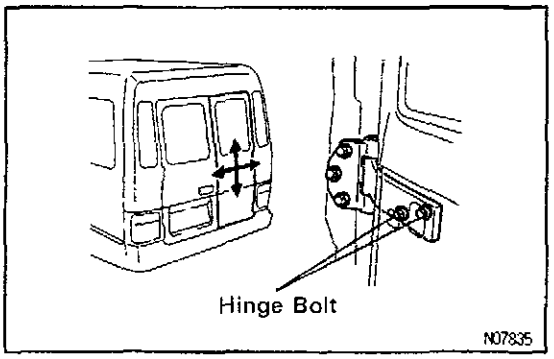


2. **ADJUST BACK DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS**
Adjust the door by slightly loosening the upper and lower hinge bolts of the door side.

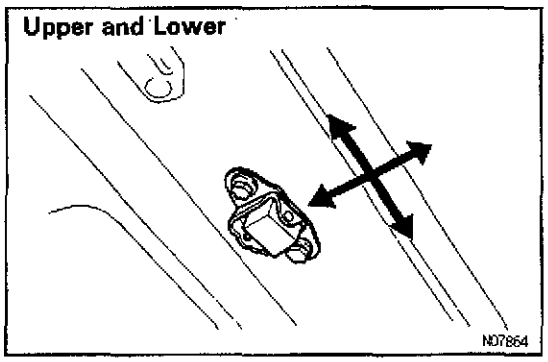

3. ADJUST BACK DOOR STOPPERS

(a) *Slightly loosen the stopper mounting bolts.*
(b) Using a plastic–faced hammer, adjust the stopper by tapping it.

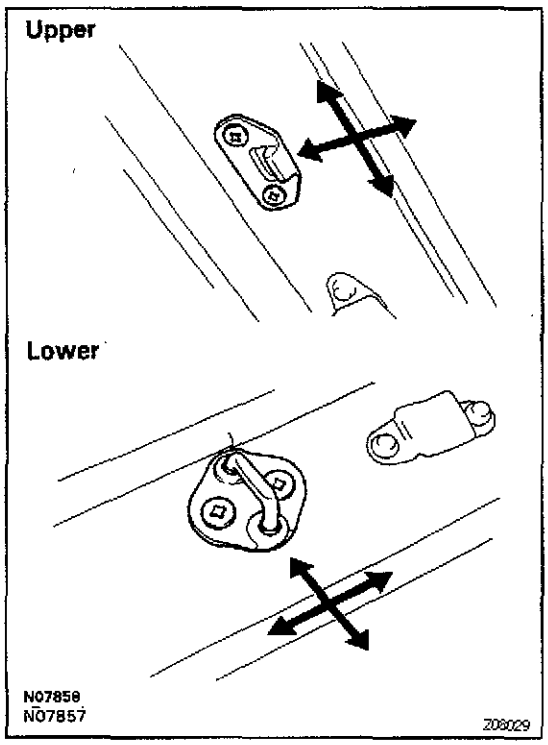

4. ADJUST BACK DOOR STRIKERS

(a) Check that the door fit and door lock linkages are adjusted correctly.
(b) Slightly loosen the striker mounting bolts (upper) or screws (lower).
(c) Using a plastic–faced hammer, adjust the striker by tapping it.

BO


LEFT BACK DOOR DISASSEMBLY

BO114-01

1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY


2. REMOVE FOLLOWING PARTS:

(a) *Door inside handle bezel*
(b) Assist grip
(c) Door trim

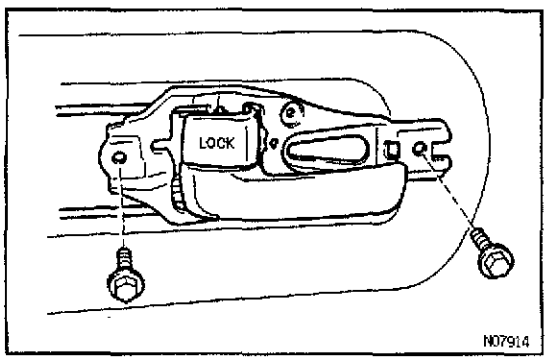


3. REMOVE DOOR INSIDE HANDLE

(a) Remove the 2 mounting screws.

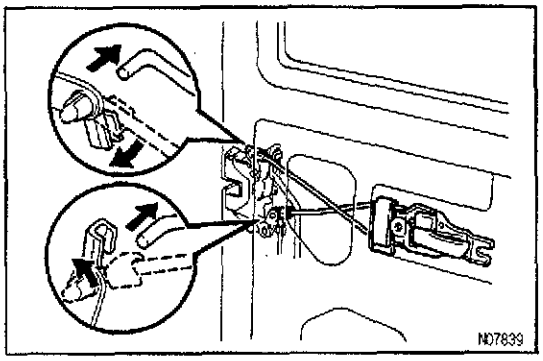


(b) Disconnect the door lock control link from the center door lock, and remove the inside handle.

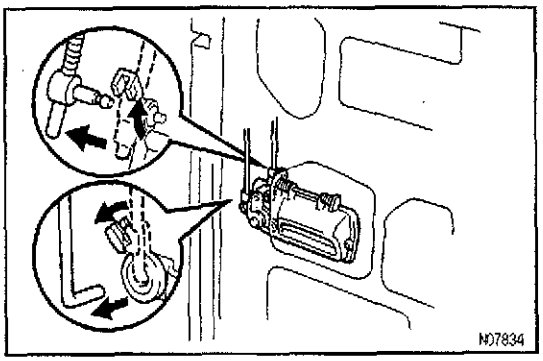

4. REMOVE DOOR OUTSIDE HANDLE

(a) Remove the hole cover.
(b) Disconnect the control link of the center door lock from the outside handle.
(c) Disconnect the control link of the center door lock from the lock cylinder.
(d) Remove the 2 bolts and outside handle.


BO

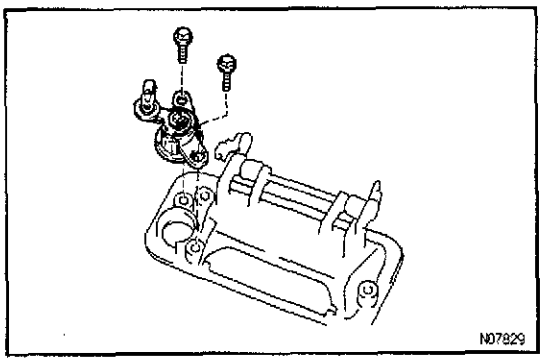

5. REMOVE DOOR LOCK CYLINDER


Remove the 2 bolts and lock cylinder.

6. REMOVE CENTER DOOR LOCK

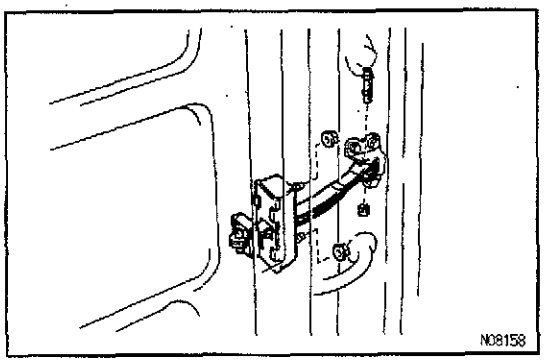

7. REMOVE DOOR CEHCK

(a) Disconnect the wiring harness from the door check bracket.
(b) Remove the door check pin.
(c) Remove the 2 nuts and door check.

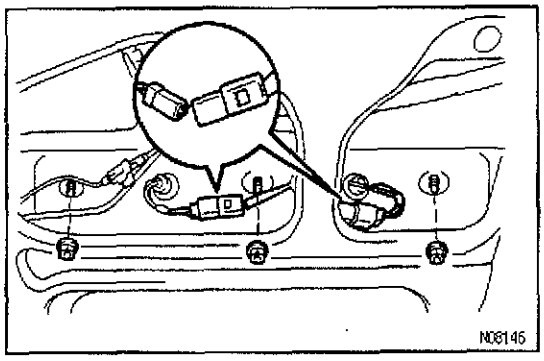

8. REMOVE LICENSE PLATE LIGHT


(a) Disconnect the 2 license plate light connectors.
(b) Remove the 3 nuts, wiring clamp and license plate light.

9. REMOVE UPPER DOOR WEATHERSTRIP


BO116-01

RIGHT BACK DISASSEMBLY

1. REMOVE FOLLOWING PARTS:
(a) Door trim
(b) Door outside handle

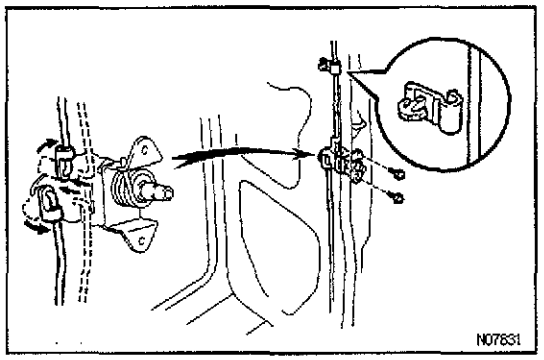


2. REMOVE DOOR LOCK CONTROL
(a) Remove the 2 mounting screws.
(b) Remove the control link from the clamp.
(c) Disconnect the control link of the upper door lock from the door lock control.
(d) Disconnect the control link of the lower door lock from the door lock control, and remove the door lock control.

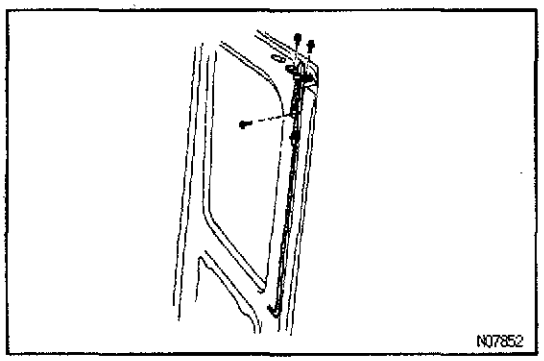


3. REMOVE UPPER DOOR LOCK
(a) Remove the hole cover.
(b) Remove the 2 bolts, screws and door lock.


BO

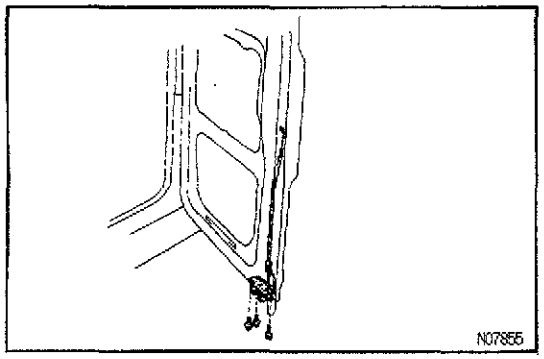


4. REMOVE LOWER DOOR LOCK
Remove the 3 bolts and door lock.
5. REMOVE FOLLOWING PARTS:
(a) Center door striker
(b) Upper door anti–rattle
(c) Lower door stopper

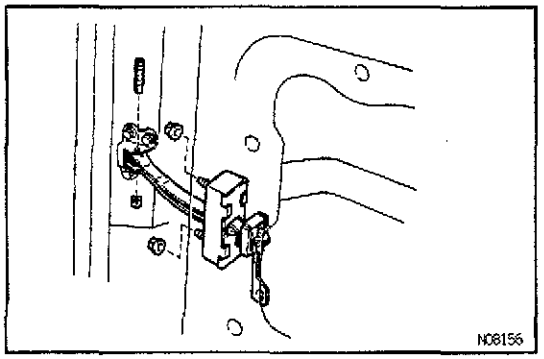

6. REMOVE DOOR CHECK
(a) Remove the door check pin.
(b) Remove the 2 nuts and door check.
7. REMOVE UPPER DOOR WEATHERSTRIP
8. REMOVE CENTER DOOR WEATHERSTRIP

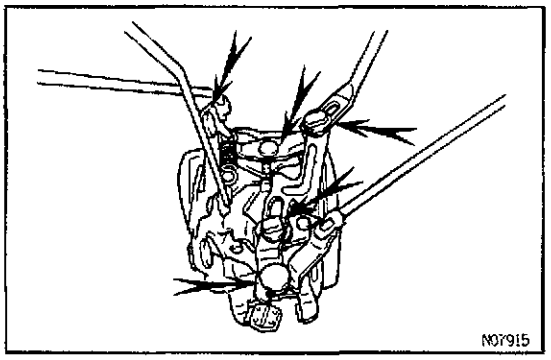

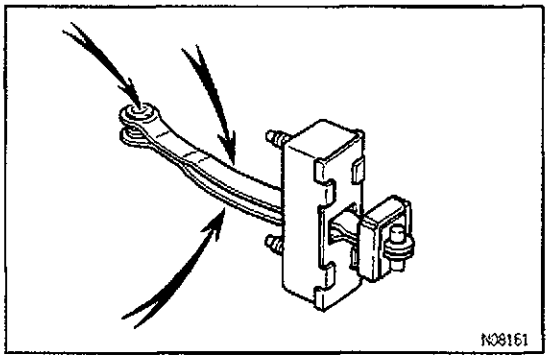


LEFT DOOR ASSEMBLY

80116-01

ASSEMBLE LEFT BACK DOOR PARTS BY FOLLOWING DISASSEMBLY SEQUENCE IN REVERSE

1. **BEFORE INSTALLING PARTS, APPLY MP GREASE**
   Apply MP grease to the moving parts, as shown.

2. **CHECK THAT DOOR LOCK CONTROL OPERATES CORRECT**

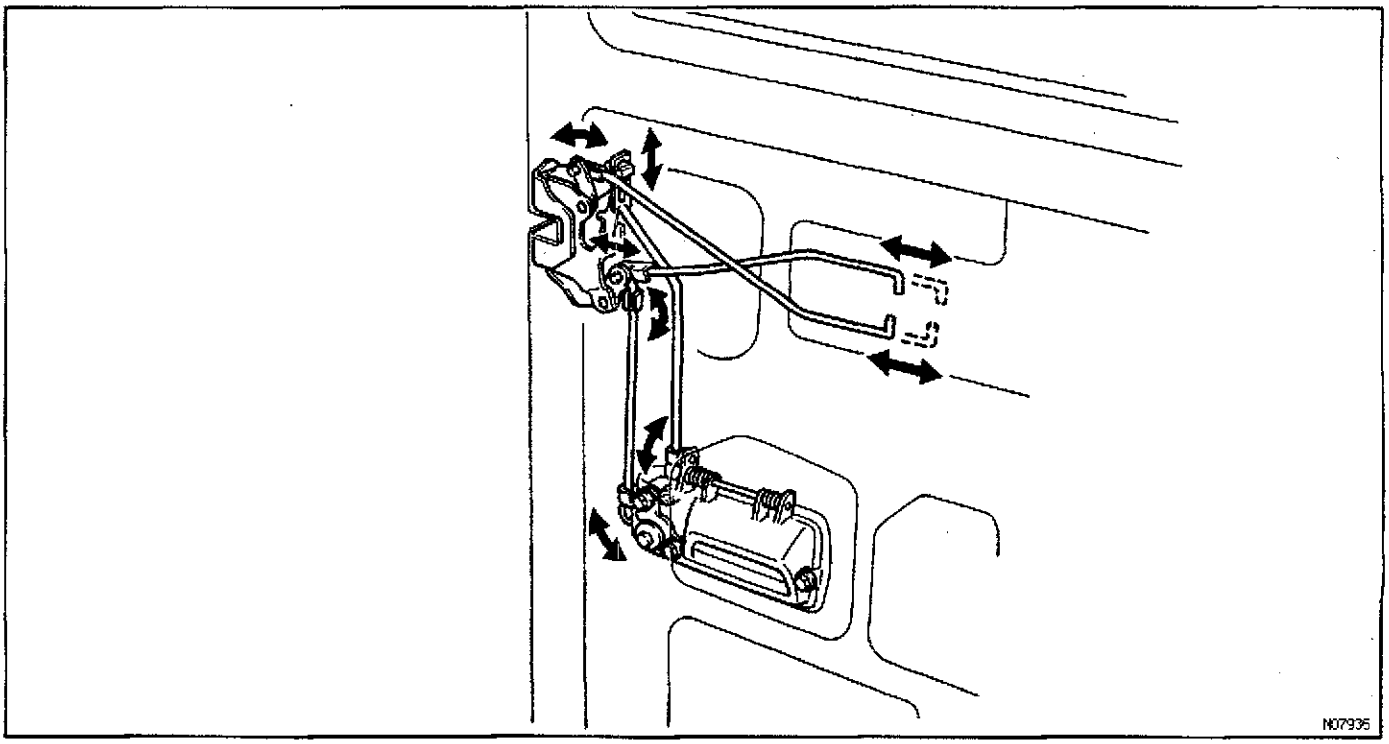

BO


BD118-01

RIGHT BACK DOOR ASSEMBLY

ASSEBLE RIGHT BACK DOOR BY FOLLOWING DISASSEMBLY SEQUENCE IN REVERSE

1. BEFORE INSTSALLING PARTS, APPLY MP GRASE


Apply MP grease to the moving parts, as shown.

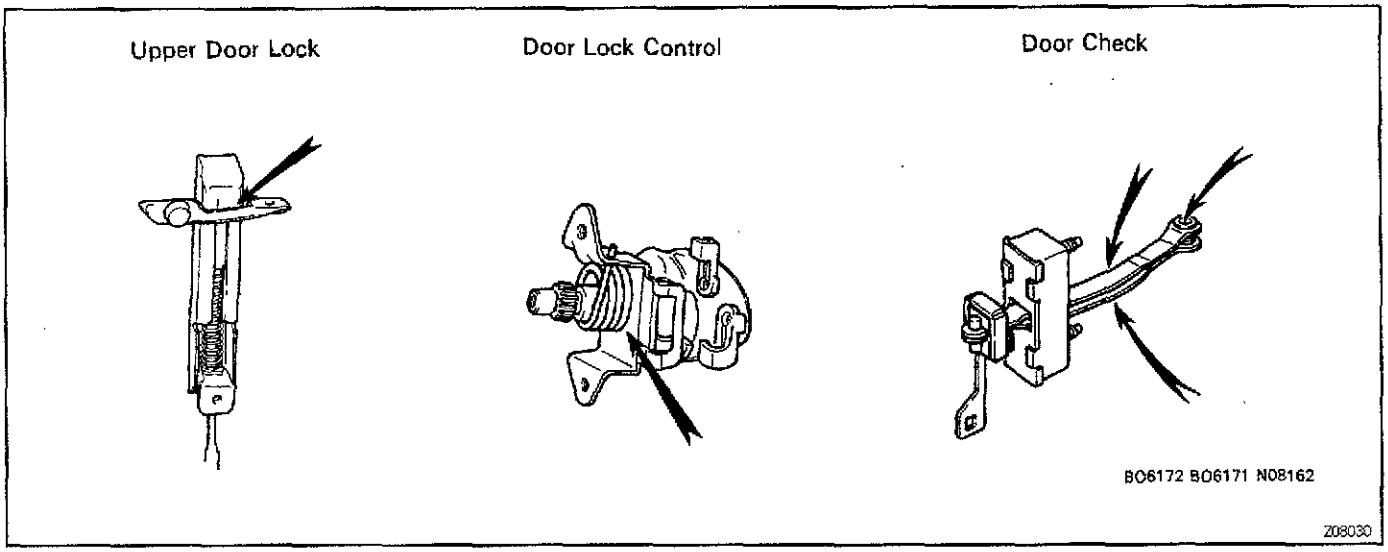


2. INSTALL RIGHT DOOR WEATHERSTRIP

(a) Apply butyl tape to the panel.

(b) Install the 4 clips to the weatherstrip.

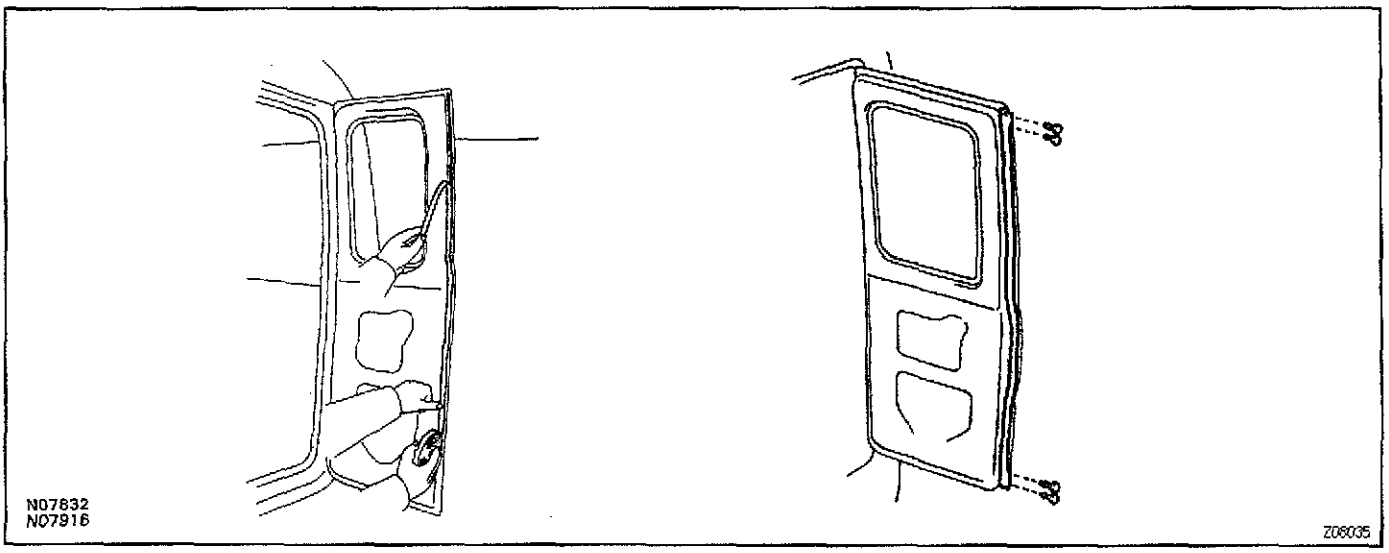

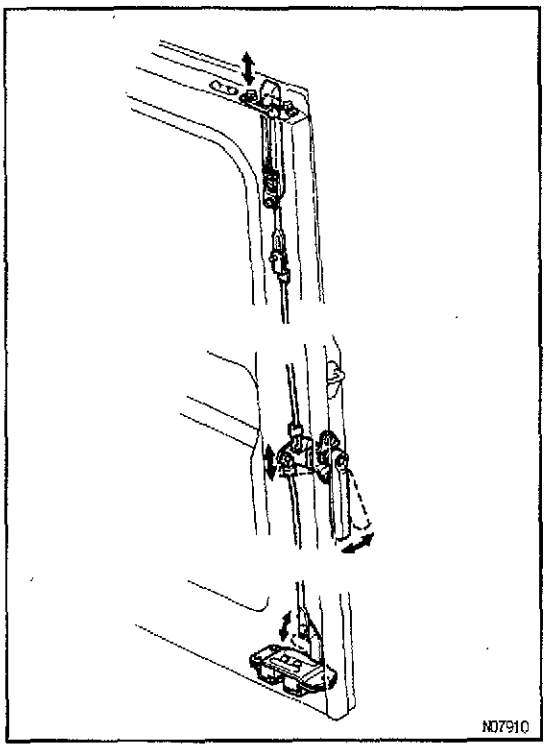

3. **CHECK THAT DOOR LOCK CONTROL OPERATES CORRECTLY**