


WINDSHIELD
COMPONENTS

B011J-01

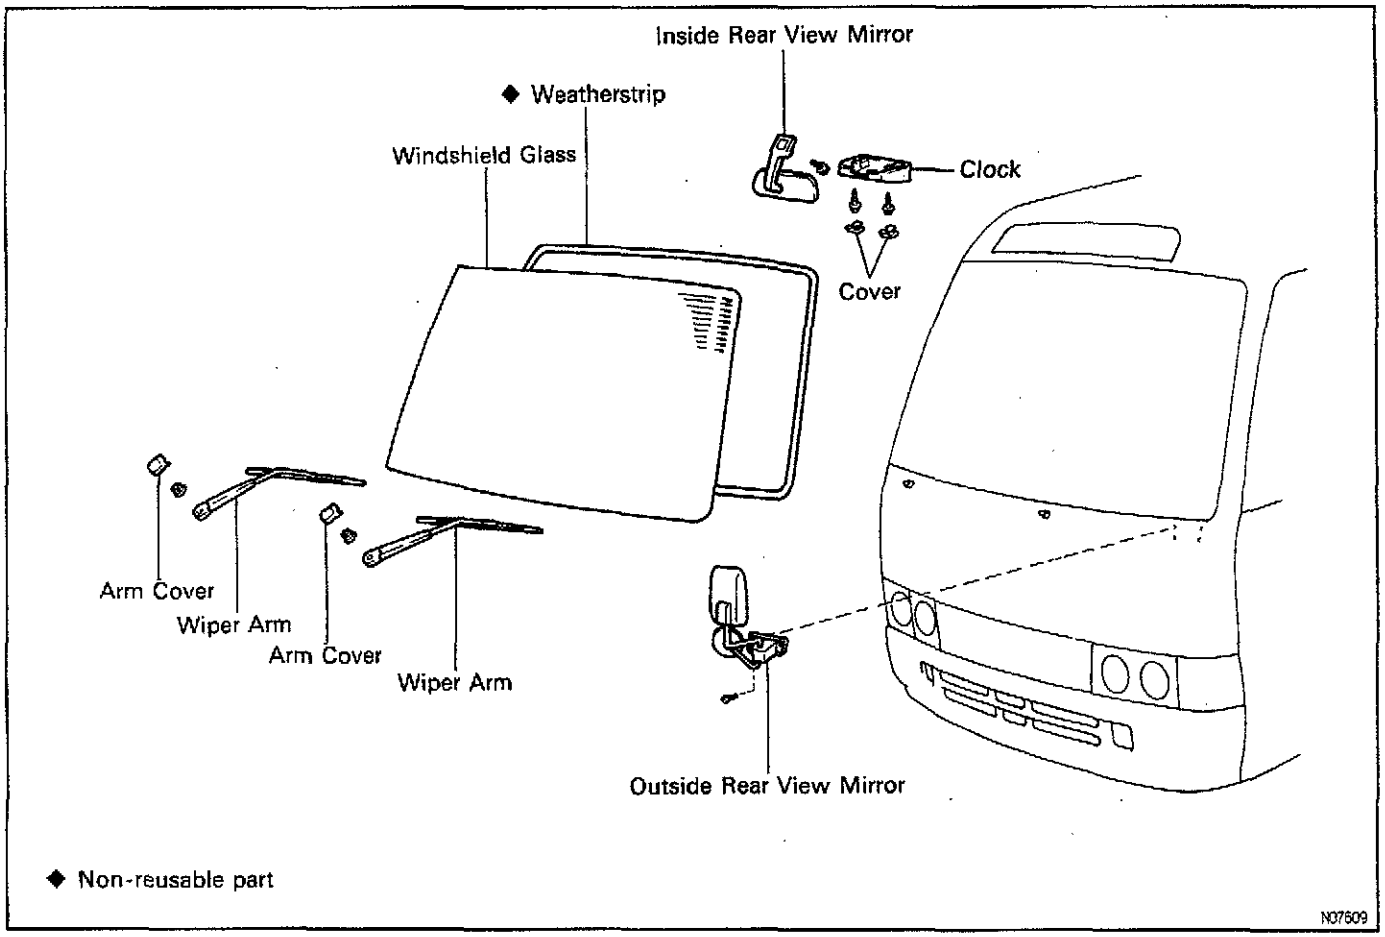

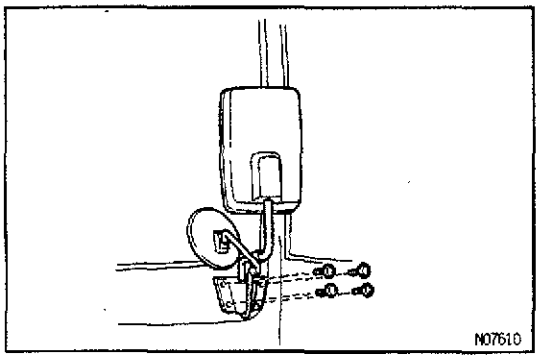


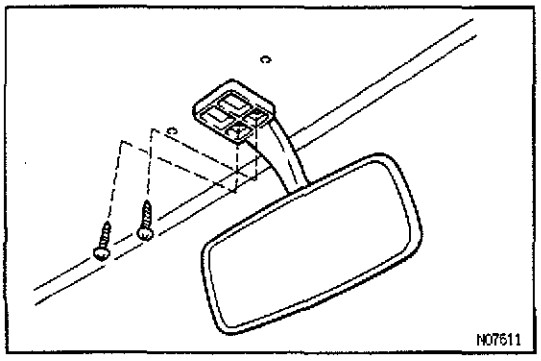

B011K-01


WINDSHIELD REMOVAL

1. **REMOVE OUTSIDE REAR VIEW MIRROR OF PASSENGER SIDE**
   Remove the 4 screws, rear view mirror and gasket.
2. **REMOVE WIPER ARMS**
3. **REMOVE CLOCK**
4. **REMOVE INSIDE REAR VIEW MIRROR**
   Remove the cover, 2 screws and rear view mirror.
5. **REMOVE SUN VISOR CASE(S)**

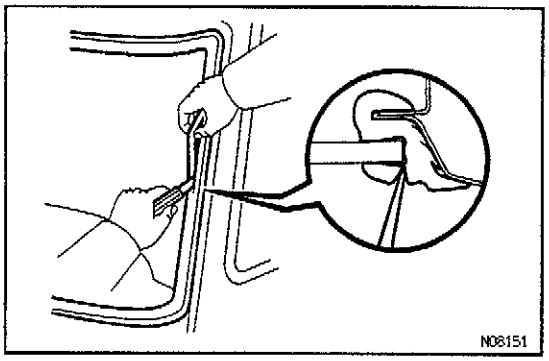


6. REMOVE WINDSHIELD GLASS


(a) From the outside of the vehicle, cut off the weatherstrip lip with a knife.
NOTICE: Be careful not to damage the body.

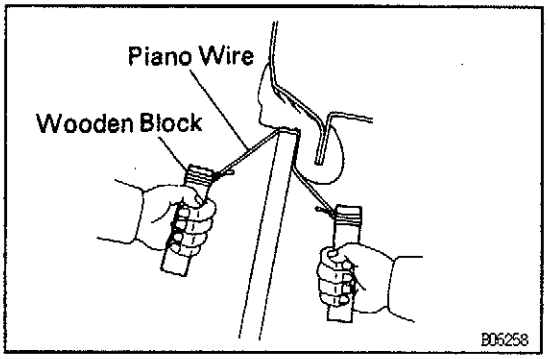

(b) Push piano wire through from the interior.
(c) Tie both wire ends to wooden blocks or equivalent.

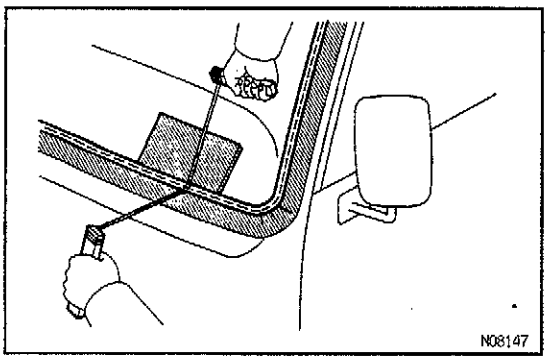

(d) Cut the adhesive by pulling the piano wire around it.
NOTICE: When separating, take care not to damage the paint and ornament. To prevent scratching the safety pad when removing the glass, place a plastic sheet between the piano wire and safety pad.
(e) Remove the glass.
(f) Remove the weatherstrip.

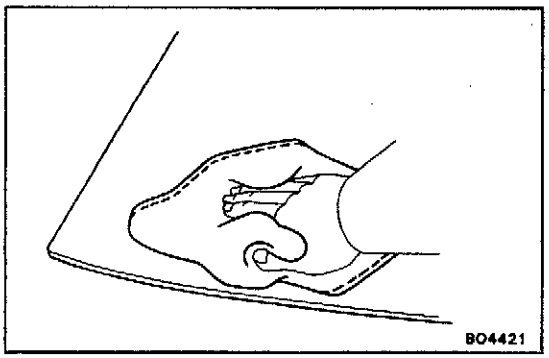


WINDSHIELD INSTALLATION

B011L-01


1. CLEAN BODY AND WINDSHIELD GLASS

Using a cleaner, clean the surfaces contacting the body and glass.

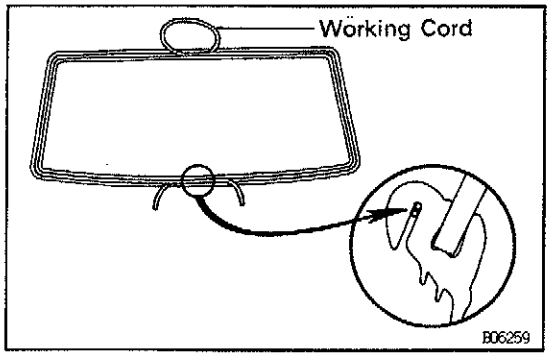


2. INSTALL WEATHERSTRIP ON WINDSHIELD GLASS

(a) Attach the weatherstrip to the glass.
(b) Apply a working cord along the weatherstrip groove, as shown in the illustration.

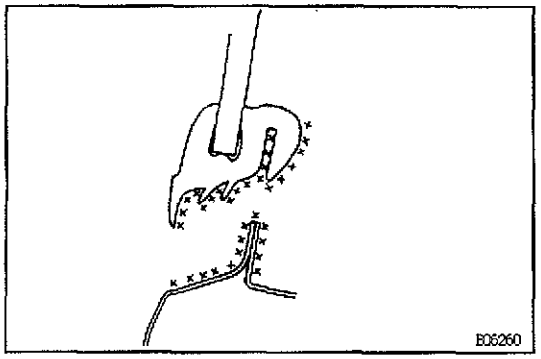


3. INSTALL WINDSHIELD GLASS


(a) Apply soapy water to the surfaces contacting the weatherstrip lip and body flange.

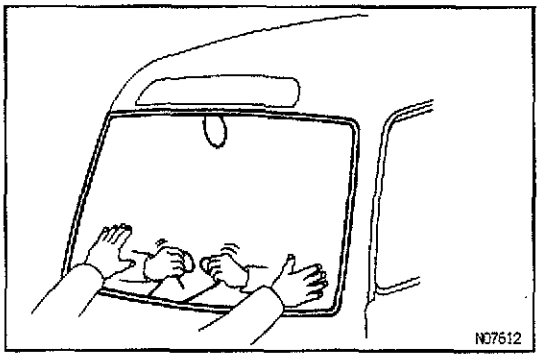

(b) Hold the glass in position on the body.
HINT: Begin installation from the middle of the lower part of the glass.

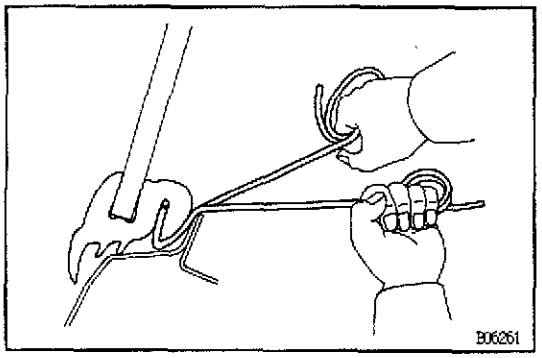


(c) From the inside of the vehicle, pull on one working cord at angle so it pulls the weatherstrip lip over the body flange. From the outside, press the glass along the weatherstrip until the glass is installed.

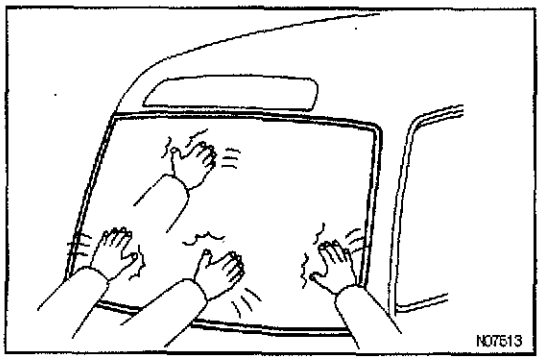


4. SNUG DOWN WINDSHIELD GLASS

To snug down the glass, tap from the outside of the vehicle with your open hand.

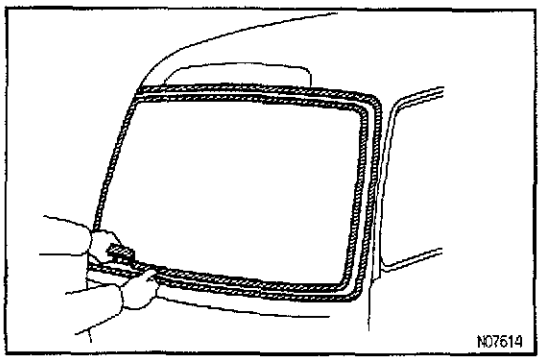


5. APPLY SEALER


(a) Put masking tape around the weatherstrip to protect the body and glass.

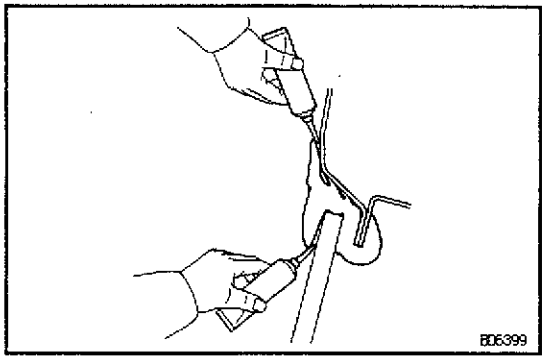


(b) Apply auto glass sealer to the weatherstrip lip, as shown in the illustration.
Sealer:
Part No. 08833–00030 or equivalent

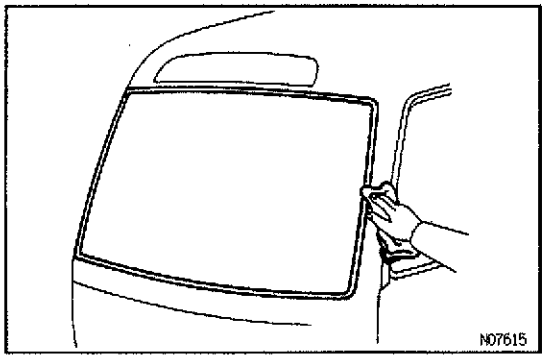

6. CLEAN SEALER SURFACE
(a) After auto glass sealer dry, remove the masking tape.
HINT: The auto glass sealer will harden in about 15 hours.
(b) Clean off the sealer oozing out from the masking tape with a clean rag saturated in cleaner.
7. INSPECT FOR LEAKS AND REPAIR
(a) Perform a leak test.
(b) Seal any leaks with auto glass sealer.
Sealer:
Part No. 08833–00030 or equivalent
8. INSTALL SUN VISOR CASE(S)

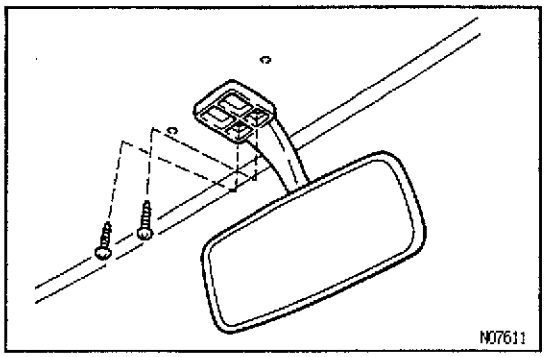

9. INSTALL INSIDE REAR VIEW MIRROR
Install the rear view mirror with the 2 screws. Install the cover.
10. INSTALL WIPER ARMS

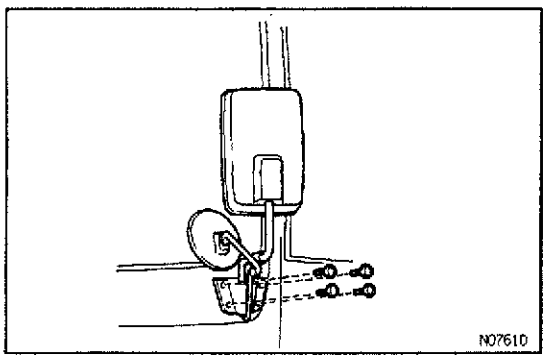

11. INSTALL OUTSIDE REAR VIEW MIRROR OF PASSENGER SIDE
Install the gasket and rear view mirror with the 4 screws.