
CENTER DOOR GLASS (Folding Type)

COMPONENTS

B011R-01

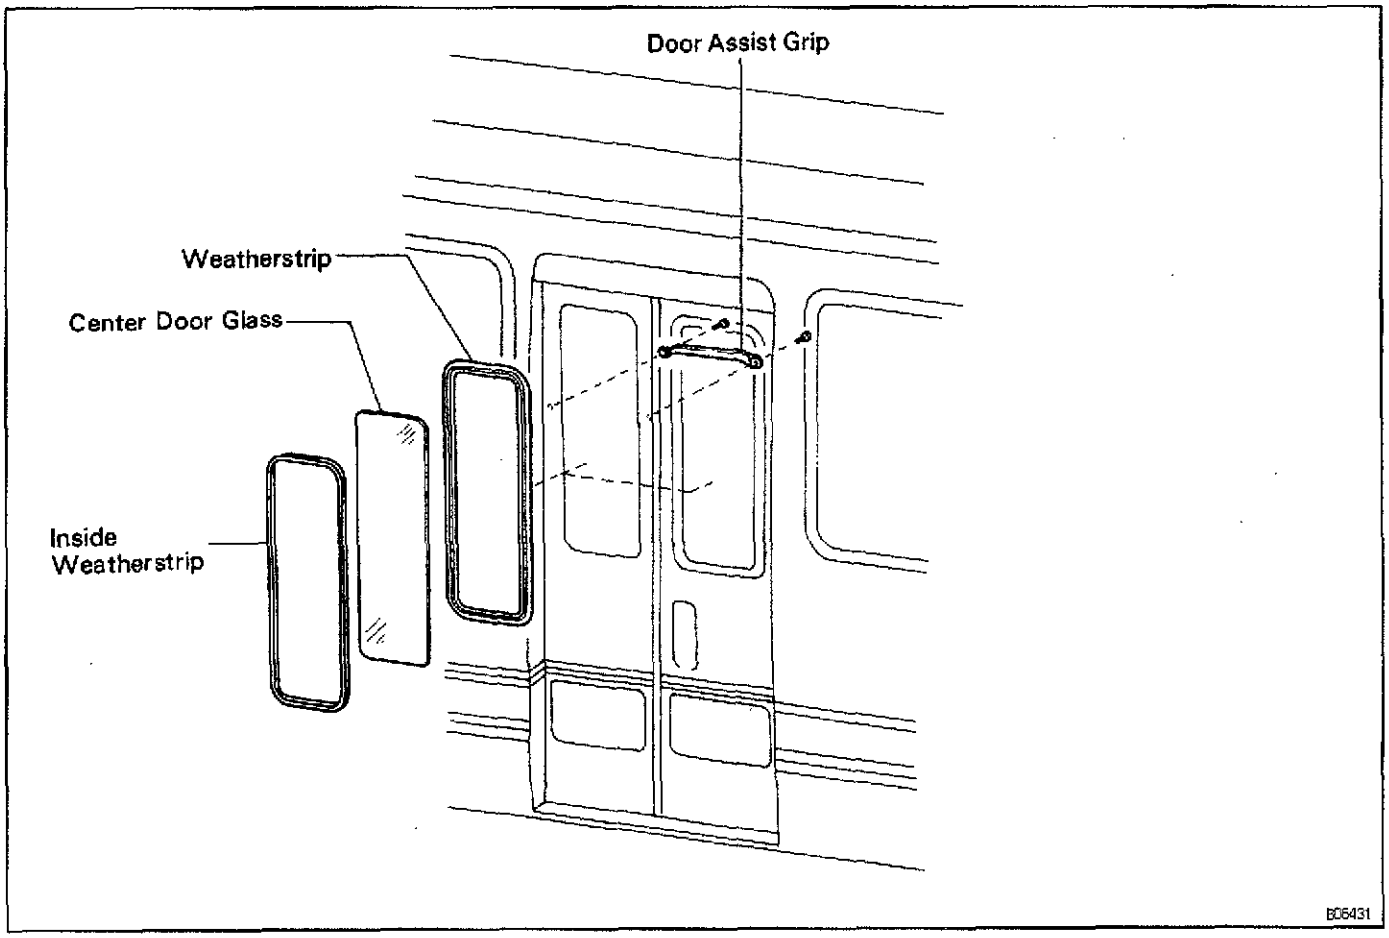

B011S-01

CENTER DOOR GLASS REMOVAL

1. **REMOVE DOOR ASSIST GRIP**
2. **REMOVE CENTER DOOR GLASS**
   Remove the center door glass in the same manner as the Back Window Glass.

B011T-01

CENTER DOOR GLASS INSTALLATION

1. **INSTALL CENTER DOOR GLASS**
   Install the center door glass in the same manner as the Back Window Glass.
2. **INSTALL DOOR ASSIST GRIP**